

Watlow CLS208 Controller



Limited Availability
Used and in Good Condition

Open Web Page

<https://www.artisanng.com/83279-1>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

CLS200 Series

User's Guide

Watlow

1241 Bundy Boulevard
Winona, MN 55987

Customer Service:

Phone.....1-800-414-4299

Fax.....1-800-445-8992

Technical Support:

Phone.....+1 (507) 494-5656

Fax+1 (507) 452-4507

Emailwintechsupport@watlow.com

Part No. 0600-3050-2000 Rev. A

November 2008

Information in this manual is subject to change without notice. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form without written permission from Watlow Anafaze.

Warranty

Watlow Anafaze, Incorporated warrants that the products furnished under this Agreement will be free from defects in material and workmanship for a period of three years from the date of shipment. The Customer shall provide notice of any defect to Watlow Anafaze, Incorporated within one week after the Customer's discovery of such defect. The sole obligation and liability of Watlow Anafaze, Incorporated under this warranty shall be to repair or replace, at its option and without cost to the Customer, the defective product or part.

Upon request by Watlow Anafaze, Incorporated, the product or part claimed to be defective shall immediately be returned at the Customer's expense to Watlow Anafaze, Incorporated. Replaced or repaired products or parts will be shipped to the Customer at the expense of Watlow Anafaze, Incorporated.

There shall be no warranty or liability for any products or parts that have been subject to misuse, accident, negligence, failure of electric power or modification by the Customer without the written approval of Watlow Anafaze, Incorporated. Final determination of warranty eligibility shall be made by Watlow Anafaze, Incorporated. If a warranty claim is considered invalid for any reason, the Customer will be charged for services performed and expenses incurred by Watlow Anafaze, Incorporated in handling and shipping the returned unit.

If replacement parts are supplied or repairs made during the original warranty period, the warranty period for the replacement or repaired part shall terminate with the termination of the warranty period of the original product or part.

The foregoing warranty constitutes the sole liability of Watlow Anafaze, Incorporated and the Customer's sole remedy with respect to the products. It is in lieu of all other warranties, liabilities, and remedies. Except as thus provided, Watlow Anafaze, Inc. disclaims all warranties, express or implied, including any warranty of merchantability or fitness for a particular purpose.

Please Note: External safety devices must be used with this equipment.

Table of Contents

List of Figures xi

List of Tables xv

1 System Overview 1

- Manual Contents 1
- Getting Started 2
 - Safety Symbols 2
 - Initial Inspection 2
- Product Features 3
- CLS200 Parts List 5
- Technical Description 7
 - CLS200 7
 - TB50 8
 - CLS200 Cabling 9
- Safety 9
 - External Safety Devices 9
 - Power-Fail Protection 10

2 Installation 11

- Typical Installation 12
- Mounting Controller Components 12
 - Recommended Tools 13
 - Mounting the Controller 13
 - Mounting the TB50 16
 - Mounting the Power Supply 18
 - Mounting the Dual DAC or Serial DAC Module 19
- System Wiring 21
 - Wiring Recommendations 21
 - Noise Suppression 22
 - Ground Loops 24
- Power Connections 25
 - Wiring the Power Supply 25
 - Connecting TB50 to CLS200 27
- Testing Your System 28
 - TB50 or TB18 Test 28
 - Digital Output Test 28
 - Digital Input Test 29

Sensor Wiring 29

- Input Wiring Recommendations 30
- Thermocouple Connections 31
- RTD Input Connections 32
- Reference Voltage Terminals 32
- Voltage Input Connections 32
- Current Input Connections 33
- Pulse Input Connections 34

Wiring Control and Digital I/O 35

- Output Wiring Recommendations 35
- Cable Tie Wraps 35
- Digital Outputs 35
- Digital Inputs 38
- TB18 Connections (CLS204 and CLS208 Only) 40
- TB50 Connections 41

Analog Outputs 43

- Wiring the Dual DAC 43
- Wiring the Serial DAC 44

Serial Communications 45

- EIA/TIA-232 Interface 45
- EIA/TIA-485 Interface 47
- EIA/TIA-485 Converters and Laptop Computers 49

3 Using the CLS200 51**Front Panel 52**

- Front Panel Keys 53

Displays 55

- Bar Graph Display 55
- Single Loop Display 57
- Alarm Displays 58
- System Alarms 60

Job Display 60**Changing the Setpoint 61****Selecting the Control Status 61**

- Manual and Automatic Control 61
- Autotuning a Loop 62

Using Alarms 64

- Alarm Delay 64
- Failed Sensor Alarms 65
- Process Alarms 66
- Global Alarm 68

Ramp/Soak 69**4 Setup 71****How to Access the Setup Menus 71**

- How to Change a Parameter 72

Setup Global Parameters Menu 74

- Load Setup From Job 75
- Save Setup to Job 75
- Job Select Digital Inputs 76

Job Select Digital Inputs Active	77
Output Override Digital Input	77
Override Digital Input Active	77
Startup Alarm Delay	78
Keyboard Lock Status	78
Power Up Output Status	78
Process Power Digital Input	79
Controller Address	79
Communications Baud Rate	80
Communications Protocol	80
Communications Error Checking	80
AC Line Frequency	81
Digital Output Polarity on Alarm	81
EPROM Information	81
Setup Loop Input Menu	82
Input Type	83
Loop Name	84
Input Units	84
Input Reading Offset	84
Reversed T/C Detection	85
Input Pulse Sample Time	85
Linear Scaling Parameters	86
Input Filter	89
Setup Loop Control Parameters Menu	90
Heat or Cool Control PB	91
Heat or Cool Control TI	91
Heat or Cool Control TD	91
Heat or Cool Output Filter	91
Spread	92
Restore PID Digital Input	92
Setup Loop Outputs Menu	93
Enable or Disable Heat or Cool Outputs	94
Heat or Cool Output Type	94
Heat or Cool Cycle Time	95
SDAC Mode	95
SDAC Low Value	95
SDAC High Value	95
Heat or Cool Output Action	96
Heat or Cool Output Limit	96
Heat or Cool Output Limit Time	96
Sensor Fail Heat or Cool Output	97
Heat or Cool Thermocouple Break Output Average	97
Heat or Cool Linearity	98
Setup Loop Alarms Menu	99
High Process Alarm Setpoint	100
High Process Alarm Type	100
High Process Alarm Output Number	100
Deviation Alarm Value	100
High Deviation Alarm Type	101
High Deviation Alarm Output Number	101
Low Deviation Alarm Type	101
Low Deviation Alarm Output Number	101
Low Process Alarm Setpoint	102

Low Process Alarm Type	102
Low Process Alarm Output Number	102
Alarm Deadband	102
Alarm Delay	103
Manual I/O Test	103
Digital Inputs	103
Test Digital Output	104
Digital Output Number	104
Keypad Test	105
Display Test	105

5 Extruder Control 107

Setup Loop Outputs Menu	107
Cool Output Nonlinear Output Curve	107
Defaults	108
Extruder Control Algorithm	110

6 Enhanced Features 111

Process Variable Retransmit	113
Setup Loop Process Variable Retransmit Menu	113
Process Variable Retransmit Example: Data Logging	115
Cascade Control	118
Setup Loop Cascade Menu	119
Cascade Control Example: Water Tank	121
Ratio Control	124
Setup Loop Ratio Control Menu	125
Ratio Control Example: Diluting KOH	126
Remote Analog Setpoint	129
Remote Analog Setpoint Example: Setting a Setpoint with a PLC	129
Differential Control	131
Differential Control Example: Thermoforming	131

7 Ramp/Soak 133

Features	134
Ramp/Soak Menus	136
Setup Global Parameters Menu	137
Ramp/Soak Time Base	137
Setup Ramp/Soak Profile Menu	137
Edit Ramp/Soak Profile	137
Copy Setup From Profile	138
Tolerance Alarm Time	138
Ready Segment Setpoint	138
Ready Segment Edit Events	139
External Reset Input Number	139
Edit Segment Number	140
Segment Time	140
Segment Setpoint	140
Edit Segment Events	141
Edit Segment Triggers	142
Segment Tolerance	143

- Last Segment 144
- Repeat Cycles 144
- Setpoints and Tolerances for Various Input Types 144

Using Ramp/Soak 145

- Ramp/Soak Displays 146
- Assigning a Profile to a Loop 148
- Running a Profile 148
- Holding a Profile or Continuing from Hold 150
- Responding to a Tolerance Alarm 151
- Resetting a Profile 151
- In Case of a Power Failure 152

8 Tuning and Control 153

Control Algorithms 153

- On/Off Control 154
- Proportional Control 154
- Proportional and Integral Control 155
- Proportional, Integral and Derivative Control 155
- Heat and Cool Outputs 156

Control Outputs 157

- Output Control Signals 157
- Output Filter 158
- Reverse and Direct Action 159

Setting Up and Tuning PID Loops 159

- Proportional Band (PB) Settings 159
- Integral Settings 160
- Derivative Settings 160

General PID Constants by Application 161

- Proportional Band Only (P) 161
- Proportional with Integral (PI) 161
- PI with Derivative (PID) 161

9 Troubleshooting and Reconfiguring 163

When There is a Problem 163

- Returning Your Unit 164

Troubleshooting Controllers 164

- Process and Deviation Alarms 164
- Failed Sensor Alarms 166
- System Alarms 166
- Other Behaviors 167

Corrective and Diagnostic Procedures 168

- Low Power 168
- Battery Dead 168
- Ambient Warning 168
- H/W Ambient Failure 169
- H/W Gain or Offset Failure 170
- Keys Do Not Respond 170
- Checking Analog Inputs 171
- Earth Grounding 172
- Checking Control Outputs 172
- Testing Control Output Devices 173

Testing the TB18 and TB50	173
Testing Control and Digital Outputs	173
Testing Digital Inputs	173
Additional Troubleshooting for Computer Supervised Systems	174
Computer Problems	174
Communications	175
Ground Loops	175
Software Problems	176
NO-Key Reset	176
Replacing the EPROM	176
Changing Communications	179
Installing Scaling Resistors	180
CLS204 and CLS208 Input Circuit	180
CLS204 and CLS208 Current Inputs	181
CLS204 and CLS208 Voltage Inputs	182
CLS204 and CLS208 RTDs and Thermistors	183
CLS216 Input Circuit	184
CLS216 Current Inputs	184
CLS216 Voltage Inputs	185
Scaling and Calibration	186
Configuring Dual DAC Outputs	186
Configuring Serial DAC Outputs	188
10 Linear Scaling Examples	189
Example 1: A 4-to-20 mA Sensor	189
Example 2: A 0-to-5V _{DC} (dc) Sensor	191
Example 3: A Pulse Encoder	192
11 Specifications	193
CLS200 System Specifications	193
CLS200 Processor Physical Specifications	194
TB50 Physical Specifications	196
Inputs	200
Outputs	202
CLS200 Power Supply	205
Dual DAC Specifications	207
Dual DAC Inputs	208
Dual DAC Analog Outputs	208
Serial DAC Specifications	209
Serial DAC Inputs	210
Serial DAC Analog Outputs	211
Glossary	213
Index	221
Menu Structure	233
Declaration of Conformity	234

List of Figures

1 System Overview

- Figure 1.1—CLS200 Part Numbering 5
- Figure 1.2—CLS200 Special Inputs Parts List 6
- Figure 1.3—CLS200 Rear Views 7
- Figure 1.4—CLS200 Front Panel 8
- Figure 1.5—TB50 8

2 Installation

- Figure 2.1—CLS200 System Components 12
- Figure 2.2—Clearance with Straight SCSI Cable 14
- Figure 2.3—Clearance with Right-Angle SCSI Cable 14
- Figure 2.4—Wiring Clearances 15
- Figure 2.5—Mounting Bracket 16
- Figure 2.6—Mounting the TB50 16
- Figure 2.7—TB50 Mounted on a DIN Rail (Front) 17
- Figure 2.8—TB50 Mounted on DIN Rail (Side) 17
- Figure 2.9—Mounting a TB50 with Standoffs 18
- Figure 2.10—CLS200 Power Supply Mounting Bracket 19
- Figure 2.11—Dual DAC and Serial DAC Dimensions 20
- Figure 2.12—CLS200 Series Controller with TB18 25
- Figure 2.13—CLS200 Series Controller with TB50 25
- Figure 2.14—Power Connections with the CLS200 Power Supply 27
- Figure 2.15—CLS200 Connector Locations 30
- Figure 2.16—Thermocouple Connections 31
- Figure 2.17—RTD Connections to CLS204 or CLS208 32
- Figure 2.18—Linear Voltage Signal Connections 33
- Figure 2.19—Linear Current Signal Connections 33
- Figure 2.20—Encoder with 5V_{cc} (dc) TTL Signal 34
- Figure 2.21—Encoder Input with Voltage Divider 34
- Figure 2.22—Digital Output Wiring 36
- Figure 2.23—Sample Heat, Cool and Alarm Output Connections 37
- Figure 2.24—Output Connections Using External Power Supply 38
- Figure 2.25—TB50 Watchdog Timer Output 38
- Figure 2.26—TB18 Watchdog Timer Output 38
- Figure 2.27—Wiring Digital Inputs 39
- Figure 2.28—Dual DAC with Current Output 43
- Figure 2.29—Dual DAC with Voltage Output 44

- Figure 2.30—Single/Multiple Serial DACs 45
- Figure 2.31—Connecting One CLS200 to a Computer Using EIA/TIA-232 46
- Figure 2.32—EIA/TIA-485 Wiring 47
- Figure 2.33—Recommended System Connections 48

3 Using the CLS200

- Figure 3.1—Operator Displays 51
- Figure 3.2—CLS200 Front Panel 52
- Figure 3.3—Bar Graph Display 55
- Figure 3.4—Single Loop Display 57
- Figure 3.5—Single Loop Display, Heat and Cool Outputs Enabled 57
- Figure 3.6—Single Loop Display with a Process Alarm 58
- Figure 3.7—Failed Sensor Alarm in the Single Loop Display 58
- Figure 3.8—Alarm Symbols in the Bar Graph Display 58
- Figure 3.9—Activation and Deactivation of Process Alarms 68

4 Setup

- Figure 4.1—CLS200 Menu Tree 73
- Figure 4.2—Two Points Determine Process Variable Conversion 86
- Figure 4.3—Process Variable Limited by Input Reading Range 87
- Figure 4.4—Linear and Nonlinear Outputs 98
- Figure 4.5—Digital Inputs Screen 104

5 Extruder Control

- Figure 5.1—Cool Output Nonlinear Output Curve 108

6 Enhanced Features

- Figure 6.1—Enhanced Features Option Menus 112
- Figure 6.2—Linear Scaling of Process Variable for Retransmit 115
- Figure 6.3—Application Using Process Variable Retransmit 116
- Figure 6.4—Relationship Between the Primary Loop's Output and the Secondary Loop's Setpoint 119
- Figure 6.5—Application Using Cascade Control 121
- Figure 6.6—Secondary Loop Setpoint Related to Primary Loop Output 123
- Figure 6.7—Relationship Between the Master Loop's Process Variable and the Ratio Loop's Setpoint 124
- Figure 6.8—Application Using Ratio Control 127

7 Ramp/Soak

- Figure 7.1—Sample Ramp/Soak Profile 133
- Figure 7.2—Setup Ramp/Soak Profiles Menu 136
- Figure 7.3—Positive and Negative Tolerances 143
- Figure 7.4—Ramp/Soak Screens 145

8 Tuning and Control

- Figure 8.1—On/Off Control 154
- Figure 8.2—Proportional Control 155
- Figure 8.3—Proportional and Integral Control 155
- Figure 8.4—Proportional, Integral and Derivative Control 156
- Figure 8.5—Time Proportioning and Distributed Zero Crossing Waveforms 157

9 Troubleshooting and Reconfiguring

- Figure 9.1—Removal of Electronics Assembly from Case 177
- Figure 9.2—Screws Locations on PC Board 178
- Figure 9.3—EPROM Location 178
- Figure 9.4—Remove EPROM 178
- Figure 9.5—Jumper Configurations 179
- Figure 9.6—CLS204 and CLS208 Input Circuit 181
- Figure 9.7—CLS216 Input Circuit 184
- Figure 9.8—Dual DAC 187
- Figure 9.9—Serial DAC Voltage/Current Jumper Positions 188

11 Specifications

- Figure 11.1—CLS200 Processor Module Dimensions 194
- Figure 11.2—CLS200 Clearances with Straight SCSI Cable 195
- Figure 11.3—CLS200 Clearances with Right-Angle SCSI Cable 195
- Figure 11.4—TB50 Dimensions 197
- Figure 11.5—TB50 Dimensions with Straight SCSI Cable 198
- Figure 11.6—TB50 Dimensions with Right-Angle SCSI Cable 199
- Figure 11.7—Power Supply Dimensions (Bottom View) 206
- Figure 11.8—Dual DAC Dimensions 207
- Figure 11.9—Serial DAC Dimensions 209

List of Tables

2 Installation

Table 2.1—Cable Recommendations	22
Table 2.2—Power Connections	26
Table 2.3—Digital Output States and Values Stored in the Controller	36
Table 2.4—Digital Inputs States and Values Stored in the Controller	39
Table 2.5—TB18 Connections	40
Table 2.6—TB50 Connections for CLS204 and CLS208	41
Table 2.7—TB50 Connections for CLS216	42
Table 2.8—EIA/TIA-232 Connections	46
Table 2.9—RTS/CTS Pins in DB-9 and DB-25 Connectors	46

3 Using the CLS200

Table 3.1—Bar Graph Display Symbols	55
Table 3.2—Control Status Symbols on the Bar Graph and Single Loop Displays	56
Table 3.3—Alarm Type and Symbols	59

4 Setup

Table 4.1—Global Parameters	74
Table 4.2—Job Select Inputs	76
Table 4.3—Job Selected for Various Input States	76
Table 4.4—Firmware Option Codes	81
Table 4.5—Setup Loop Input	82
Table 4.6—CLS200 Input Types and Ranges	83
Table 4.7—Input Character Sets	84
Table 4.8—Input Reading Offset	85
Table 4.9—Display Formats	87
Table 4.10—Setup Loop Control Parameters	90
Table 4.11—Setup Loop Outputs	93
Table 4.12—Heat / Cool Output Types	94
Table 4.13—Setup Loop Alarms	99
Table 4.14—Manual I/O Test	103

5 Extruder Control

Table 5.1—Default Control Parameters for Fan Cool Output	109
Table 5.2—Default Control Parameters for Oil Cool Output	109
Table 5.3—Default Control Parameters for H2O Cool Output	109

6 Enhanced Features

Table 6.1—Application Example: Setting Up Process Variable Retransmit	117
Table 6.2—Application Example: Setting Up Cascade Control	122
Table 6.3—Application Example: Setting Up Ratio Control	128
Table 6.4—Application Example: Setting Up Remote Setpoint	130
Table 6.5—Application Example: Setting Up Differential Control	132

7 Ramp/Soak

Table 7.1—Ramp/Soak Specifications	135
Table 7.2—Trigger Latch Logic	143
Table 7.3—Display Formats	145
Table 7.4—Ramp/Soak Single Loop Display	146
Table 7.5—Ramp/Soak Control Status Symbols	147
Table 7.6—Ramp/Soak Profile Modes	150

8 Tuning and Control

Table 8.1—Proportional Band Settings	159
Table 8.2—Integral Term and Reset Settings	160
Table 8.3—Derivative Term Versus Rate	160
Table 8.4—General PID Constants	162

9 Troubleshooting and Reconfiguring

Table 9.1—Controller Alarm Codes for Process and Deviation Alarms	164
Table 9.2—Operator Response to Alarms	165
Table 9.3—Failed Sensor Alarm Codes	166
Table 9.4—Hardware Error Messages	166
Table 9.5—Other Symptoms	167
Table 9.6—Resistor Values for CLS204 and CLS208 Current Inputs	181
Table 9.7—Resistor Locations for CLS204 and CLS208 Current Inputs	181
Table 9.8—Resistor Values for CLS204 and CLS208 Voltage Inputs	182
Table 9.9—Resistor Locations for CLS204 and CLS208 Voltage Inputs	182
Table 9.10—Resistor Values for CLS204/208 RTD and Thermistor Inputs	183
Table 9.11—Resistor Locations for CLS204/208 RTD and Thermistor Inputs	183
Table 9.12—Resistor Values for CLS216 Current Inputs	184
Table 9.13—Resistor Locations for CLS216 Current Inputs	185
Table 9.14—Resistor Values for CLS216 Voltage Inputs	185
Table 9.15—Resistor Locations for CLS216 Voltage Inputs	186
Table 9.16—Dual DAC Jumper Settings	187

10 Linear Scaling Examples

Table 10.1—Input Readings	190
Table 10.2—Scaling Values	190
Table 10.3—Input Readings and Calculations	191
Table 10.4—Scaling Values	191
Table 10.5—Scaling Values	192

11 Specifications

Table 11.1—Agency Approvals / Compliance	193
Table 11.2—Environmental Specifications	194
Table 11.3—Physical Dimensions	194
Table 11.4—Processor with Straight SCSI	195
Table 11.5—Processor with Right Angle SCSI	195
Table 11.6—Processor Connections	196
Table 11.7—TB50 Physical Dimensions	196
Table 11.8—TB50 Connections	197
Table 11.9—TB50 with Straight SCSI	198
Table 11.10—TB50 with Right Angle SCSI	199
Table 11.11—Analog Inputs	200
Table 11.12—Pulse Inputs	201
Table 11.13—Thermocouple Range and Resolution	201
Table 11.14—RTD Range and Resolution	201
Table 11.15—Input Resistance for Voltage Inputs	202
Table 11.16—Digital Inputs	202
Table 11.17—Digital Outputs Control / Alarm	203
Table 11.18—CPU Watchdog Output	203
Table 11.19—5V _{DC} (dc) Output (Power to Operate Solid-State Relays)	204
Table 11.20—Reference Voltage Output (Power to Operate Bridge Circuit Sensors)	204
Table 11.21—Processor Serial Interface	204
Table 11.22—Processor Power Requirements	204
Table 11.23—Power Supply Environmental Specifications	205
Table 11.24—Power Supply Agency Approvals / Compliance	205
Table 11.25—Power Supply Physical Specifications	205
Table 11.26—Power Supply with Mounting Bracket	205
Table 11.27—Power Supply Inputs	206
Table 11.28—Power Supply Outputs	206
Table 11.29—Dual DAC Environmental Specifications	207
Table 11.30—Dual DAC Physical Specifications	207
Table 11.31—Dual DAC Power Requirements	208
Table 11.32—Dual DAC Specifications by Output Range	208
Table 11.33—Serial DAC Environmental Specifications	209
Table 11.34—Serial DAC Physical Specifications	209
Table 11.35—Serial DAC Agency Approvals / Compliance	210
Table 11.36—Serial DAC Inputs	210
Table 11.37—Serial DAC Power Requirements	210
Table 11.38—Serial DAC Analog Output Specifications	211



System Overview

Manual Contents

This manual describes how to install, set up, and operate a CLS204, CLS208 or CLS216 controller. Each chapter covers a different aspect of your control system and may apply to different users:

- Chapter 1: System Overview provides a component list and summary of features for the CLS200 series controllers.
- Chapter 2: Installation provides detailed instructions on installing the CLS200 series controller and its peripherals.
- Chapter 3: Using the CLS200 provides an overview of operator displays used for system monitoring and job selection.
- Chapter 4: Setup provides detailed descriptions of all menus and parameters for controller setup.
- Chapter 5: Extruder Control explains the additional features of a CLS200 controller equipped with Extruder Control Firmware.
- Chapter 6: Enhanced Features describes process variable retransmit, ratio, differential and cascade control features available with the enhanced features option.
- Chapter 7: Ramp/Soak explains how to set up and use the features of the ramp/soak option.
- Chapter 8: Tuning and Control describes available control algorithms and provides suggestions for applications.
- Chapter 9: Troubleshooting and Reconfiguring includes troubleshooting, upgrading and reconfiguring procedures for technical personnel.

- Chapter 10: Linear Scaling Examples provides an example configuring a pressure sensor, a flow sensor, and an encoder using linear scaling.
- Chapter 11: Specifications lists detailed specifications of the controller and optional components.

Getting Started

The following sections provide information regarding product features, technical descriptions, safety requirements, and preparation for operation.

Safety Symbols

These symbols are used throughout this manual:



WARNING! *Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.*



CAUTION! *Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury or property damage.*

NOTE! *Indicates pertinent information or an item that may be useful to document or label for later reference.*

Initial Inspection

Accessories may or may not be shipped in the same container as the CLS200, depending upon their size. Check the shipping invoice carefully against the contents received in all boxes.

Product Features

The CLS200 series controllers provide 4, 8 or 16 fully independent control loops. When used as a stand-alone controller, you may operate the CLS200 via the two-line 16-character display and touch keypad. You can also use it as the key element in a computer-supervised data acquisition and control system; the CLS200 can be locally or remotely controlled via an EIA/TIA-232 or EIA/TIA-485 serial communications interface.

The CLS200 features include:

- **Direct Connection of Mixed Thermocouple Sensors:** Connect most thermocouples to the controller with no hardware modifications. Thermocouple inputs feature reference junction compensation, linearization, process variable offset calibration to correct for sensor inaccuracies, detection of broken, shorted or reversed thermocouples, and a choice of Fahrenheit or Celsius display.
- **Accepts Resistive Temperature Detectors (RTDs):** Use 3-wire, 100 Ω , platinum, 0.00385-curve sensors with two choices for range and precision of measurements. (To use this input, order a CLS204 or CLS208 controller with scaling resistors.)
- **Automatic Scaling for Linear Analog Inputs:** The CLS200 series automatically scales linear inputs used with industrial process sensors. Enter two points, and all input values are automatically scaled in your units. Scaling resistors must be installed.
- **Dual Outputs:** The CLS200 series includes both heat and cool control outputs for each loop. Independent control parameters are provided for each output.
- **Independently Selectable Control and Output Modes:** You can set each control output to on/off, time proportioning, Serial DAC (digital-to-analog converter), or distributed zero crossing mode. Set up to two outputs per loop for on/off, P, PI or PID control with reverse or direct action.
- **Control Outputs:** Set high/low deviation and high/low process limits to operate digital outputs as on/off control functions or alarms.
- **Flexible Alarm Outputs:** Independently set high/low process alarms and a high/low deviation band alarm for each loop. Alarms can activate a digital output by themselves, or they can be grouped with other alarms to activate an output.
- **Global Alarm Output:** When any alarm is triggered, the global alarm output is also triggered, and it stays on until you acknowledge it.

- **CPU Watchdog:** The CLS200 series CPU watchdog timer output notifies you of system failure. Use it to hold a relay closed while the controller is running, so you are notified if the microprocessor shuts down.
- **Front Panel or Computer Operation:** Set up and run the controller from the front panel or from a local or remote computer. Watlow Anafaze offers WatView, a Windows® compatible Human Machine Interface (HMI) software package that includes data logging and graphing features in addition to process monitoring and parameter setup screens.
- **Modbus RTU Protocol, EIA/TIA-232 and 485 Communications:** Connect to PLCs, operator interface terminals and third-party software packages using the widely supported Modbus RTU protocol.
- **Multiple Job Storage:** Store up to eight jobs in memory, and access them locally by entering a single job number or remotely via digital inputs. Each job is a set of operating conditions, including setpoints and alarms.
- **Nonlinear Output Curves:** Select either of two nonlinear output curves for each control output.
- **Autotuning:** Use the autotune feature to set up your system quickly and easily. The CLS200 internal expert system table finds the correct PID parameters for your process.
- **Pulse Counter Input:** Use the pulse counter input for precise control of motor or belt speed.
- **Low Power Shutdown:** The controller shuts down and turns off all outputs when it detects the input voltage drop below the minimum safe operating level.

CLS200 Parts List

You may have received one or more of the following components. See Figure 2.1 on page 12 for CLS200 configuration information.

- CLS200 series controller
- Controller mounting kit
- TB50 with 50-pin SCSI cable
- EIA/TIA-232 or EIA/TIA-485 communications cable
- Power supply with mounting bracket and screws
- Serial DAC (digital-to-analog converter)
- Special input resistors (installed in CLS200)
- User's guide

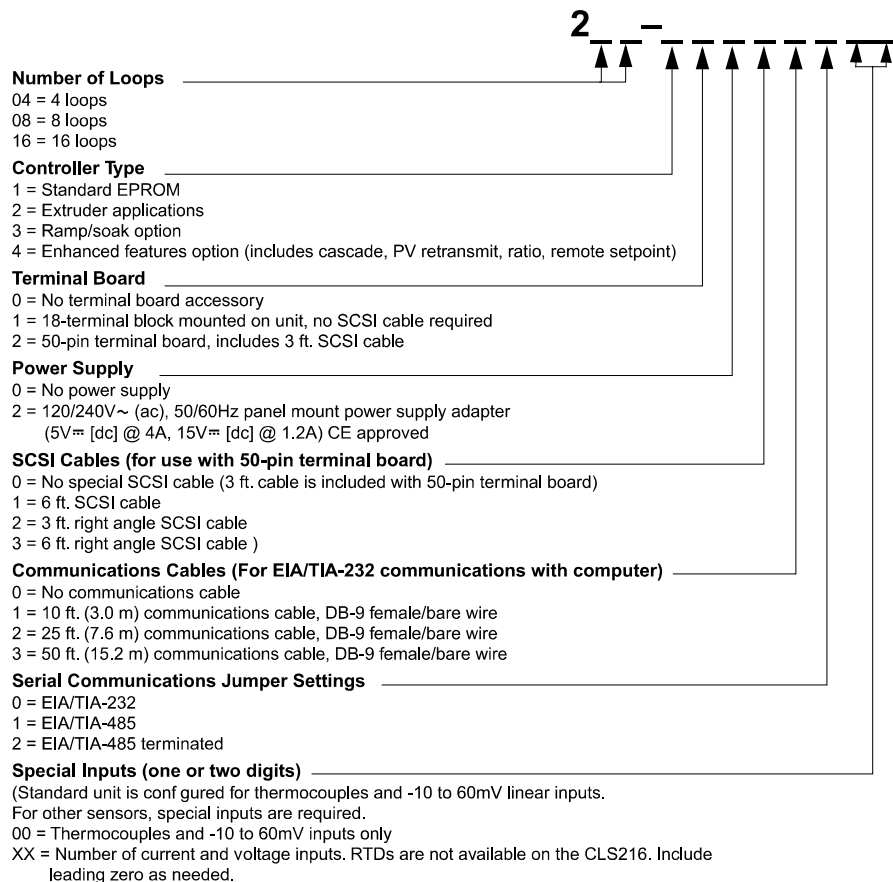


Figure 1.1 CLS200 Part Numbering

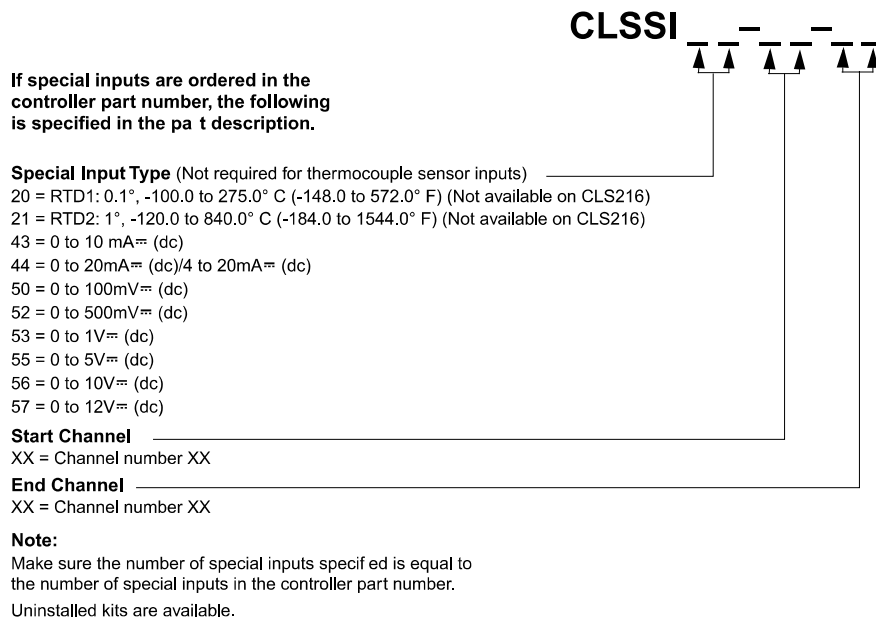


Figure 1.2 CLS200 Special Inputs Parts List

Technical Description

This section contains a technical description of each component of your CLS200 series controller.

CLS200

The CLS200 is housed in an 1/8-DIN panel mount package. It contains the CPU, RAM with a built-in battery, EPROM, serial communications, digital I/O, analog inputs, the screen and touch keypad.

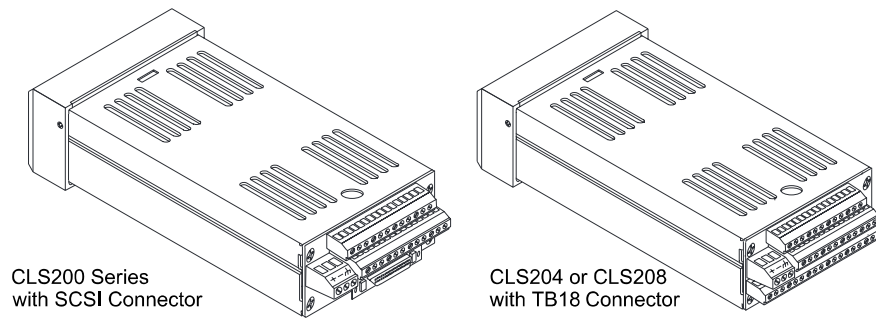


Figure 1.3 CLS200 Rear Views

The CLS200 has the following features:

- Keypad and 2-line 16-character display.
- Screw terminals for the power and analog inputs and communications.
- Input power is 12 to 24V $\overline{\text{dc}}$ (dc) at 1 Amp.
- A 50-pin SCSI cable connects the digital inputs and outputs to the 50-terminal block (TB50). The CLS204 and CLS208 are available with an 18-terminal block (TB18) in place of the SCSI connector, as shown in Figure 1.3.

The firmware resides in an EPROM. See Replacing the EPROM on page 176 for information on removing and replacing the EPROM.

The operating parameters are stored in battery-backed RAM. If there is a power loss the operating parameters are unchanged. The battery has a ten-year shelf life, and it is not used when the unit is on.

The microprocessor performs all calculations for input signal linearization, PID control, alarms and communications.

Front Panel Description

The display and touch keypad provide an intelligent way to operate the controller. The display has 16 alphanumeric or graphic characters per line. The 8-key keypad allows you to change the operating parameters, controller functions, and displays.

The information-packed displays show process variables, setpoints, and output levels for each loop. A bar graph display, single loop display, scanning display and an alarm display offer a real-time view of process conditions. Two access levels allow operator changes and supervisor changes.

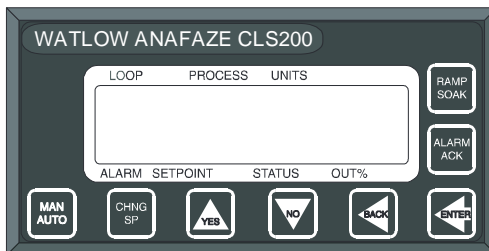


Figure 1.4 CLS200 Front Panel

TB50

The TB50 is a screw-terminal interface for control wiring which allows you to connect relays, encoders and discrete I/O devices to the CLS200. The screw terminal blocks accept wires as large as 18 AWG (0.75 mm²). A 50-pin SCSI cable connects the TB50 to the CLS200.

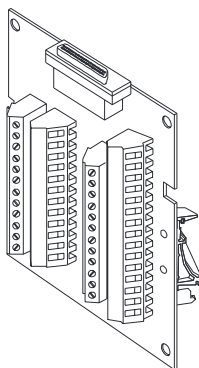


Figure 1.5 TB50

CLS200 Cabling

Watlow Anafaze provides cables required to install your CLS200. A 50-pin SCSI cable connects the TB50 to the CLS200.

The optional cable used to connect the CLS200 to a computer using EIA/TIA-232 communications has a DB9 or DB25 connector for the computer and bare wires for connecting to the CLS200.

Safety

Watlow Anafaze has made every effort to ensure the reliability and safety of this product. In addition, we have provided recommendations that will allow you to safely install and maintain this controller.

External Safety Devices

The CLS200 controller may fail full-on (100% output power) or full-off (0% output power), or may remain full-on if an undetected sensor failure occurs. For more information about failed sensor alarms, see Failed Sensor Alarms on page 65.

Design your system to be safe even if the controller sends a 0% or 100% output power signal at any time. Install independent, external safety devices that will shut down the system if a failure occurs.

Typically, a shutdown device consists of an FM-approved high/low process limit controller that operates a shutdown device such as a mechanical contactor. The limit controller monitors for a hazardous condition such as an under-temperature or over-temperature fault. If a hazardous condition is detected, the limit controller sends a signal to open the contactor.

The safety shutdown device (limit controller and contactor) must be independent from the process control equipment.



WARNING! *The controller may fail in a 0% or 100% power output state. To prevent death, personal injury, equipment damage or property damage, install external safety shutdown devices. If death or injury may occur, you must install FM-approved safety shutdown devices that operate independently from the process control equipment.*

With proper approval and installation, thermal fuses may be used in some processes.

Power-Fail Protection

In the occurrence of a sudden loss of power, this controller can be programmed to reset the control outputs to off (this is the default). Typically, when power is re-started, the controller restarts to data stored in memory. If you have programmed the controller to restart with control outputs on, the memory-based restart might create an unsafe process condition for some installations. Therefore, you should only set the restart with outputs on if you are certain your system will safely restart. (See the Process Power Digital Input on page 79).

When using a computer or host device, you can program the software to automatically reload desired operating constants or process values on power-up. Keep in mind that these convenience features do not eliminate the need for independent safety devices.

Contact Watlow Anafaze immediately if you have any questions about system safety or system operation.

2

Installation

This chapter describes how to install the CLS200 series controller and its peripherals. Installation of the controller involves the following procedures:

- Determining the best location for the controller
- Mounting the controller and TB50
- Power connection
- Input wiring
- Communications wiring (EIA/TIA-232 or EIA/TIA-485)
- Output wiring



WARNING! *Risk of electric shock. Shut off power to your entire process before you begin installation of the controller.*



WARNING! *The controller may fail in a 0% or 100% power output state. To prevent death, personal injury, equipment damage or property damage, install external safety shutdown devices. If failure may cause death or injury, you must install FM-approved safety shutdown devices that operate independently from the process control equipment.*

Typical Installation

Figure 2.1 shows typical installations of the controller with the TB50 and the TB18 terminal blocks. The type of terminal block you use greatly impacts the layout and wiring of your installation site. (See Figures 2.2 to 2.11.)

We recommend that you read this entire chapter first before beginning the installation procedure. This will help you to carefully plan and assess the installation.

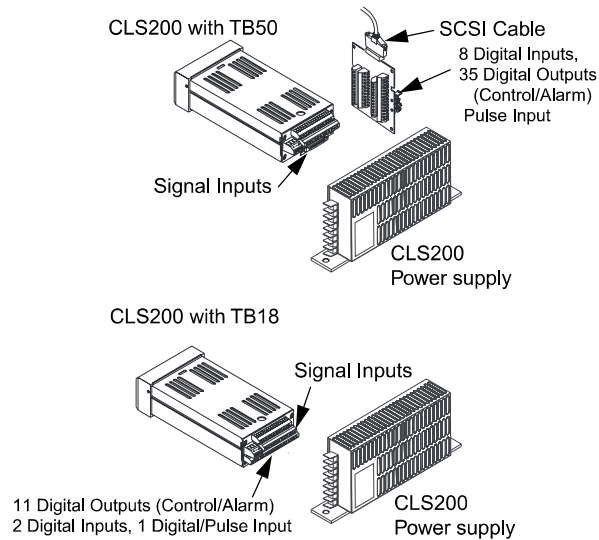


Figure 2.1 CLS200 System Components

Mounting Controller Components

Install the controller in a location free from excessive heat (more than 50° C [122° F]), dust, and unauthorized handling. Electromagnetic and radio frequency interference can induce noise on sensor wiring. Select locations for the CLS200 and TB50 such that wiring can be routed clear of sources of interference such as high voltage wires, power switching devices and motors.

NOTE! *For indoor use only.*



WARNING! *To reduce the risk of fire or electric shock, install the CLS200 in a controlled environment, relatively free of contaminants.*

Recommended Tools

Use any of the following tools to cut a hole of the appropriate size in the panel.

- Jigsaw and metal file, for stainless steel and heavy-weight panel doors.
- Greenlee 1/8-DIN rectangular punch (Greenlee part number 600-68), for most panel materials and thicknesses.
- Nibbler and metal file, for aluminum and lightweight panel doors.

You will also need these tools:

- Phillips head screwdriver
- 1/8 in. (3 mm) flathead screwdriver for wiring
- Multimeter

Mounting the Controller

Mount the controller before you mount the terminal block or do any wiring. The controller's placement affects placement and wiring considerations for the other components of your system.

Ensure there is enough clearance for mounting brackets, terminal blocks, and cable and wire connections; the controller extends up to 7.0 inches (178 mm) behind the panel face and the screw brackets extend 0.5 inch (13 mm) above and below it. If using a straight SCSI cable, allow for an additional 1.6 inches (41 mm) beyond the terminal block. If using a right-angle SCSI cable, allow an additional 0.6 inch (15 mm). (See Figure 2.2 and Figure 2.3.)

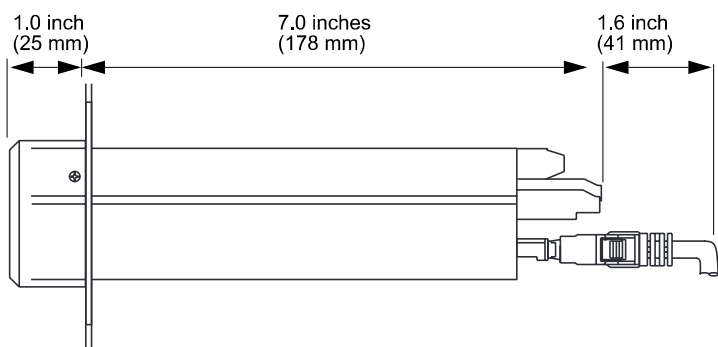


Figure 2.2 Clearance with Straight SCSI Cable

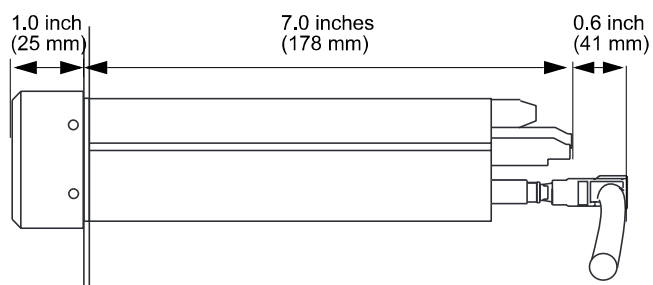


Figure 2.3 Clearance with Right-Angle SCSI Cable

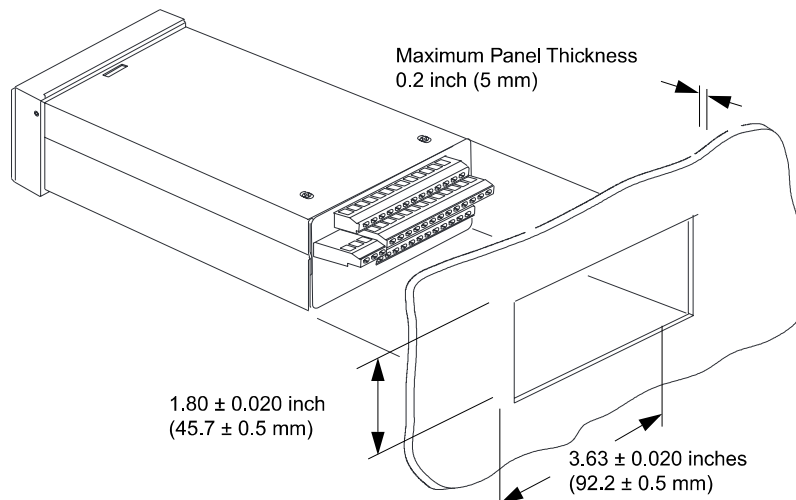


Figure 2.4 *Wiring Clearances*

We recommend you mount the controller in a panel not more than 0.2 in. (5 mm) thick.

1. Choose a panel location free from excessive heat (more than 50° C [122° F]), dust, and unauthorized handling. (Make sure there is adequate clearance for the mounting hardware, terminal blocks, and cables. The controller extends 7.40 in. (178 mm) behind the panel. Allow for an additional 0.60 to 1.60 in. (15 to 41 mm) beyond the connectors.)
2. Temporarily cover any slots in the metal housing so that dirt, metal filings, and pieces of wire do not enter the housing and lodge in the electronics.
3. Cut a hole in the panel 1.80 in. (46 mm) by 3.63 in. (92 mm) as shown below. (This picture is NOT a template; it is for illustration only.) Use caution; the dimensions given here have 0.02 in. (1 mm) tolerances.
4. Remove the brackets and collar from the processor module, if they are already in place.
5. Slide the processor module into the panel cutout.
6. Slide the mounting collar over the back of the processor module, making sure the mounting screw indentations face toward the back of the processor module.

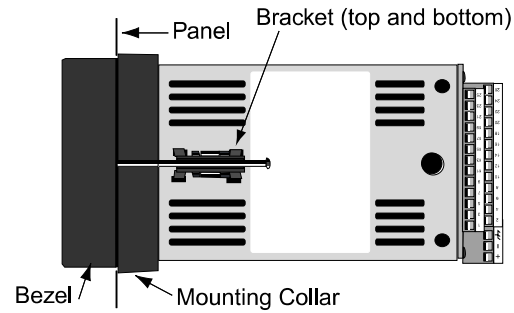


Figure 2.5 Mounting Bracket

7. Loosen the mounting bracket screws enough to allow for the mounting collar and panel thickness. Place each mounting bracket into the mounting slots (head of the screw facing the back of the processor module). Push each bracket backward then to the side to secure it to the processor module case.
8. Make sure the case is seated properly. Tighten the installation screws firmly against the mounting collar to secure the unit. Ensure that the end of the mounting screws fit into the indentations on the mounting collar.

Mounting the TB50

There are two ways you can mount the TB50: Use the pre-installed DIN rail mounting brackets or use the plastic standoffs. Follow the corresponding procedures to mount the board.

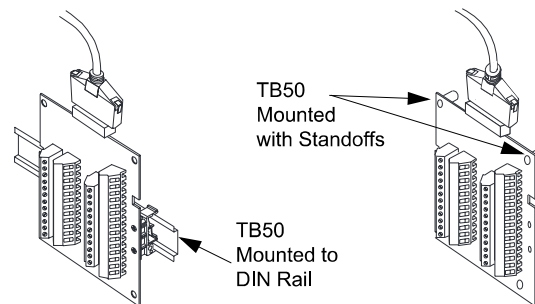


Figure 2.6 Mounting the TB50

DIN Rail Mounting

Snap the TB50 on to the DIN rail by placing the hook side on the rail first, then pushing the snap latch side in place. (See Figure 2.7.)

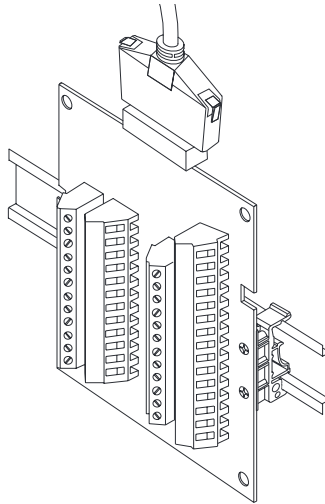


Figure 2.7 *TB50 Mounted on a DIN Rail (Front)*

To remove the TB50 from the rail, use a flathead screwdriver to unsnap the bracket from the rail. (See Figure 2.8.)

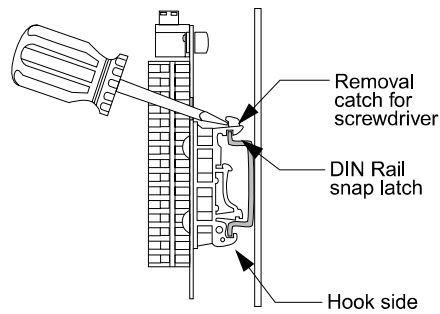


Figure 2.8 *TB50 Mounted on DIN Rail (Side)*

Mounting with Standoffs

1. Remove the DIN rail mounting brackets from the TB50.
2. Select a location with enough clearance to remove the TB50, its SCSI cable and the controller itself.
3. Mark the four mounting holes.
4. Drill and tap four mounting holes for #6 (3.5 mm) screws or bolts.
5. Mount the TB50 with four screws.

There are four smaller holes on the terminal board. Use these holes to secure wiring to the terminal block with tie wraps.

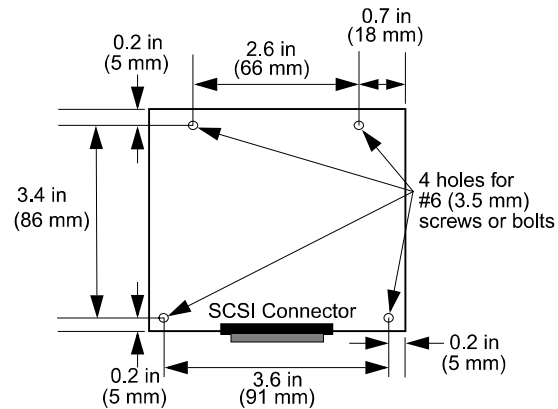


Figure 2.9 Mounting a TB50 with Standoffs

Mounting the Power Supply

If you use your own power supply for the CLS200, refer to the power supply manufacturer's instructions for mounting information. Choose a Class 2 power supply that supplies an isolated regulated 12 to 24V_{DC} (dc) at 1 A.

Mounting Environment

Leave enough clearance around the power supply so that it can be removed.

Mounting the Dual DAC or Serial DAC Module

This section describes how to install the optional Dual DAC and Serial DAC digital-to-analog converters.

Installation

Installation of the Dual DAC and Serial DAC is essentially the same. The main differences are in the dimensions and the wiring. Follow this procedure to correctly install these devices.

Jumpers

The output signal range of the Dual DAC and Serial DAC modules is configured with jumpers. See *Configuring Dual DAC Outputs* on page 186 and *Configuring Serial DAC Outputs* on page 188 for information on setting these jumpers.

Mounting

1. Select a location. The unit is designed for wall mounting. Install it as close to the controller as possible.
2. Mark and drill four holes for screw mounting. Holes accommodate #8 (4.0 mm) size screws. See Figure 2.11 for screw locations. Install the unit with the four screws.

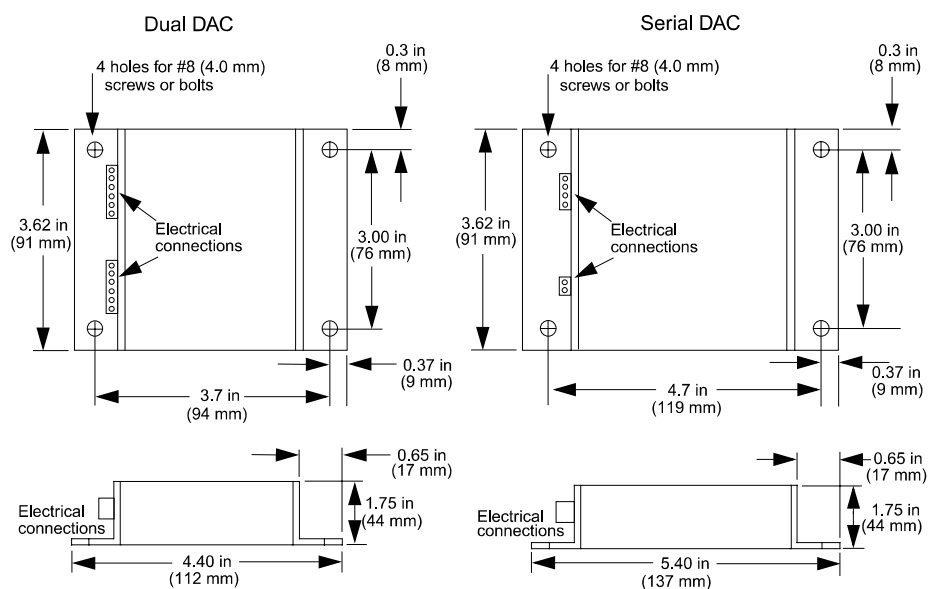


Figure 2.11 Dual DAC and Serial DAC Dimensions

System Wiring

Successful installation and operation of the control system can depend on placement of the components and on selection of the proper cables, sensors, and peripheral components.

Routing and shielding of sensor wires and proper grounding of components can insure a robust control system. This section includes wiring recommendations, instructions for proper grounding and noise suppression, and considerations for avoiding ground loops.



WARNING! *To reduce the risk of electrical shock, fire, and equipment damage, follow all local and national electrical codes. Correct wire sizes, fuses and thermal breakers are essential for safe operation of this equipment.*



CAUTION! *Do not wire bundles of low-voltage signal and control circuits next to bundles of high-voltage ac wiring. High voltage may be inductively coupled onto the low-voltage circuits, which may damage the controller or induce noise and cause poor control.*

Physically separate high-voltage circuits from low-voltage circuits and from CLS200 hardware. If possible, install high-voltage ac power circuits in a separate panel.

Wiring Recommendations

Follow these guidelines for selecting wires and cables:

- Use stranded wire. (Solid wire can be used for fixed service; it makes intermittent connections when you move it for maintenance.)
- Use 20 AWG (0.5 mm²) thermocouple extension wire. Larger or smaller sizes may be difficult to install, may break easily, or may cause intermittent connections.
- Use shielded wire. The electrical shield protects the signals and the CLS200 from electrical noise. Connect one end of the input and output wiring shield to earth ground.
- Use copper wire for all connections other than thermocouple sensor inputs.

Table 2.1 Cable Recommendations

Function	Mfr. P/N	No. of Wires	AWG	mm ²	Maximum Length
Analog Inputs	Belden 9154	2	20	0.5	
	Belden 8451	2	22	0.5	
RTD Inputs	Belden 8772	3	20	0.5	
	Belden 9770	3	22	0.5	
Thermocouple Inputs	T/C Ext. Wire	2	20	0.5	
Control Outputs and Digital I/O	Belden 9539	9	24	0.2	
	Belden 9542	20	24	0.2	
	Ribbon Cable	50	22 to 14	0.5 to 2.5	
Analog Outputs	Belden 9154	2	20	0.5	
	Belden 8451	2	22	0.5	
Computer Communication: EIA/TIA-232, 422 or 485, or 20 mA	Belden 9729	4	24	0.2	4,000 ft. (1,219 m)
	Belden 9730	6	24	0.2	
	Belden 9842	4	24	0.2	4,000 ft. (1,219 m)
	Belden 9843	6	24	0.2	
	Belden 9184	4	22	0.5	6,000 ft. (1,829 m)

Noise Suppression

The CLS200's outputs are typically used to drive solid state relays. These relays may in turn operate more inductive types of loads such as electromechanical relays, alarm horns and motor starters. Such devices may generate electromagnetic interference (EMI or noise). If the controller is placed close to sources of EMI, it may not function correctly. Below are some tips on how to recognize and avoid problems with EMI.

For earth ground wire, use a large gauge and keep the length as short as possible. Additional shielding may be achieved by connecting a chassis ground strap from the panel to CLS200 case.

Symptoms of RFI/EMI

If your controller displays the following symptoms, suspect EMI:

- The controller's display blanks out and then reenergizes as if power had been turned off for a moment.
- The process variable does not display correctly.

EMI may also damage the digital output circuit—so digital outputs will not turn on. If the digital output circuit is damaged, return the controller to Watlow Anafaze for repair.

Avoiding RFI/EMI

- To avoid or eliminate most RFI/EMI noise problems:
- Connect the CLS200 case to earth ground. The CLS200 system includes noise suppression circuitry. This circuitry requires proper grounding.
- Separate the 120 or 240V~ (ac) power leads from the low-level input and output leads connected to the CLS200 series controller. Do not run the digital I/O or control output leads in bundles with ac wires.
- Where possible, use solid-state relays (SSRs) instead of electromechanical relays. If you must use electromechanical relays, try to avoid mounting them in the same panel as the CLS200 series equipment.
- If you must use electromechanical relays and you must place them in a panel with CLS200 series equipment, use a 0.01 microfarad capacitor rated at 1000V~ (ac) (or higher) in series with a 47 Ω , 0.5 watt resistor across the N.O. contacts of the relay load. This is known as a snubber network and can reduce the amount of electrical noise.
- You can use other voltage suppression devices, but they are not usually required. For instance, you can place a metal oxide varistor (MOV) rated at 130V~ for 120V~ (ac) control circuits across the load, which limits the peak ac voltage to about 180V~ (ac) (Watlow Anafaze part number 26-130210-00). You can also place a transorb (back-to-back zener diodes) across the digital output, which limits the digital output voltage.

Additional Recommendations for a Noise Immune System

It is strongly recommended that you:

- Isolate outputs through solid-state relays, where possible.
- Isolate RTDs or "bridge" type inputs from ground.
- Isolate digital inputs from ground through solid state relays. If this is not possible, then make sure the digital input is the only connection to earth ground other than the chassis ground.
- If you are using EIA/TIA-232 from a non-isolated host, either (1) do not connect any other power common point to earth ground, or (2) use an optical isolator in the communications line.

Ground Loops

Ground loops occur when current passes from the process through the controller to ground. This can cause instrument errors or malfunctions.

A ground loop may follow one of these paths, among others:

- From one sensor to another.
- From a sensor to the communications port.
- From a sensor to the dc power supply.

The best way to avoid ground loops is to minimize unnecessary connections to ground. Do not connect any of the following terminals to each other or to earth ground:

- Power supply dc common
- TB1, terminals 5, 6, 11, 12 (analog common)
- TB1, terminal 17 (reference voltage common)
- TB1, terminals 23, 24 (communications common)
- TB2, terminal 2 (dc power common)

Special Precautions for the CLS216

The CLS216 has single-ended inputs. All the negative sensor leads are tied to the analog common. That means there is no sensor-to-sensor isolation. Proper grounding is critical for this unit. Take these additional precautions with a CLS216:

- Use all ungrounded or all well-grounded thermocouples, not a mix.
- If using a mixture of thermocouples or low-voltage inputs (<500 mV) and current inputs, connect the negative leads of the current transmitters to terminal 17 (Ref Com) on TB1.
- If using voltage transmitters, use only sourcing models or configuration. Sinking configurations will not work.
- Isolate the controller's communication port (if used) by using an optically isolated 232-to-485 converter.

Personal Computers and Ground Loops

Many PC communications ports connect the communications common to chassis ground. When such a PC is connected to the controller, this can provide a path to ground for current from the process that can enter the controller through a sensor (such as a thermocouple). This creates a ground loop that can affect communications and other controller functions. To eliminate a ground loop, either use an optically isolated communications adapter or take measures to ensure that sensors and all other connections to the controller are isolated and not conducting current into the unit.

Power Connections

This section covers making the power connections to the CLS200 and connecting the TB50.

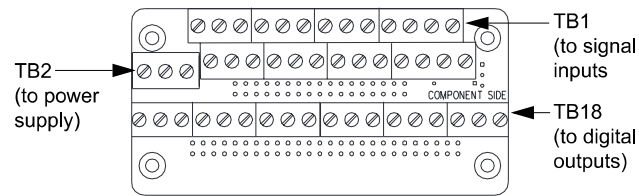


Figure 2.12 CLS200 Series Controller with TB18

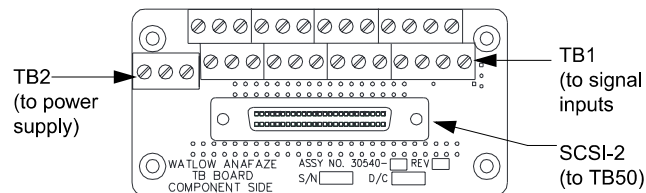


Figure 2.13 CLS200 Series Controller with TB50


Wiring the Power Supply



WARNING! Use a power supply with a Class 2 rating only. UL approval requires a Class 2 power supply.

Connect power to the controller before any other connections. This allows you to ensure that the controller is working before any time is taken installing inputs and outputs.

Table 2.2 Power Connections

Function	Power Supply	CLS200 TB2
DC Power (Controller)	+12 to 24V $\overline{\text{dc}}$ (dc)	+
DC Common	12 to 24V $\overline{\text{dc}}$ (dc) Common	-
Earth Ground	Ground	

1. Connect the dc common terminal on the power supply to the dc common (-) terminal on CLS200 TB2.
2. Connect the positive terminal on the power supply to the dc positive (+) terminal on CLS200 TB2.
3. If using an isolated dc output or another power supply to power the loads, connect the dc common of the supply powering the loads to the dc common of the supply powering the controller.
4. Use the ground connector on TB2 for chassis ground. This terminal is connected to the CLS200 chassis and must be connected to earth ground.
5. Connect 120/240V \sim (ac) power to the power supply.

NOTE! *Connect the dc common of the power supply used for loads to the dc common of the supply powering the controller. If the supplies are not referenced to one another, the controller's outputs will not be able to switch the loads.*

NOTE! *When making screw terminal connections, tighten to 4.5 to 5.4 inch-pound (0.5 to 0.6 Nm).*



CAUTION! *Without proper grounding, the CLS200 may not operate properly or may be damaged.*



CAUTION! To prevent damage from incorrect connections, do not turn on the ac power before testing the connections as explained in *Testing Your System* on page 28.

NOTE! Do not connect the controller's dc common (COM) to earth ground. Doing so will defeat the noise protection circuitry, making measurements less stable.

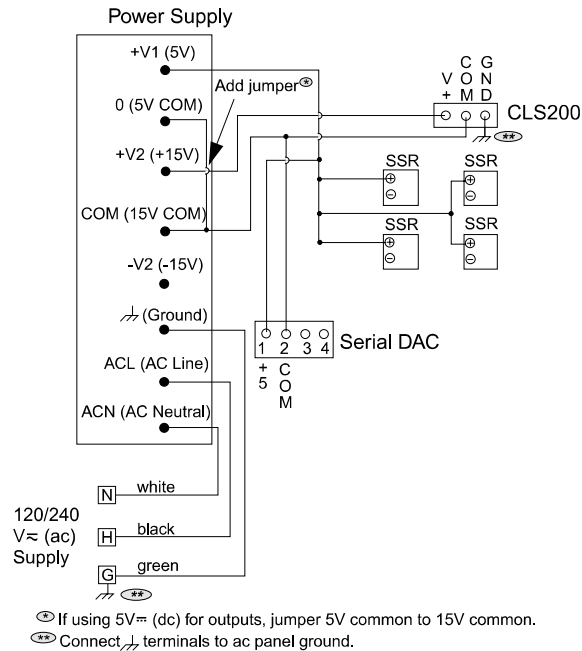


Figure 2.14 Power Connections with the CLS200 Power Supply

Connecting TB50 to CLS200

1. Connect the SCSI cable to the controller.
2. Connect the SCSI cable to the TB50.

Testing Your System

This section explains how to test the controller after installation and prior to making field wiring connections.

TB50 or TB18 Test

Use this procedure to verify that the TB50 or TB18 is properly connected and supplied with power:

1. Turn on power to the CLS200. The display should read `CALCULATING CHECKSUM` then show the bar graph display. (See Figure 3.3.) If you do not see these displays, disconnect power and check wiring and power supply output.
2. Measure the +5V $\overline{\text{dc}}$ supply at the TB50 or TB18:
 - a) Connect the voltmeter's common lead to TB50 or TB18 terminal 3 or TB18 terminal 2.
 - b) Connect the voltmeter's positive lead to TB50 or TB18 screw terminal 1. The voltage should be +4.75 to +5.25V $\overline{\text{dc}}$.

Digital Output Test

Use this procedure to test the controller's outputs before loads are connected. If using it at another time for troubleshooting, disconnect loads from outputs before testing.

1. Connect a 500 Ω to 100 k Ω resistor between TB50 or TB18 screw terminal 1 and a digital output terminal. (See Table 2.5, TB18 Connections on page 40; Table 2.6, TB50 Connections for CLS204 and CLS208 on page 41; or Table 2.7, TB50 Connections for CLS216 on page 42.)
2. Connect the voltmeter's positive lead to screw terminal 1.
3. Connect the common lead to the digital output terminal.
4. Use the digital output test in the `MANUAL I/O TEST` menu to turn the digital output on and off. (See Test Digital Output on page 104 and Digital Output Number on page 104.) When the output is ON, the output voltage should be less than 1V. When the output is OFF, the output voltage should be between 4.75 and 5.25V.

NOTE!

By default, heat outputs are enabled. Only disabled outputs may be turned on using the manual I/O test. To test heat outputs, set the corresponding loop to manual mode 100% output. See Selecting the Control Status on page 61.

Digital Input Test

Use the following procedure to test digital inputs before connecting to field devices:

1. Disconnect any system wiring from the input to be tested.
2. Go to the DIGITAL INPUTS test in the MANUAL I/O TEST menu. (See Digital Inputs on page 103.) This test shows whether the digital inputs are H (high, or open) or L (low, or closed).
3. Attach a wire to the terminal of the digital input you want to test. See tables 2.5 to 2.7 on pages 40 to 42 for connections.
 - a) When the wire is connected only to the digital input terminal, the digital input test should show that the input is H (high, or open).
 - b) When you connect the other end of the wire to the controller common (TB50 terminal 3 or TB18 terminal 2), the digital input test should show that the input is L (low, or closed).

Sensor Wiring

This section describes how to properly connect thermocouples, RTDs, current and voltage inputs to your controller. The controller can accept any mix of available input types. Some input types require that special scaling resistors be installed (generally done by Watlow Anafaze before the controller is delivered).

All inputs are installed at the CH input connectors (TB1) at the back of the controller. The illustrations below show the connector locations for all the CLS200 series controllers.

**CAUTION!**

Never run input leads in bundles with high power wires or near other sources of EMI. This could inductively couple voltage onto the input leads and damage the controller, or could induce noise and cause poor measurement and control.

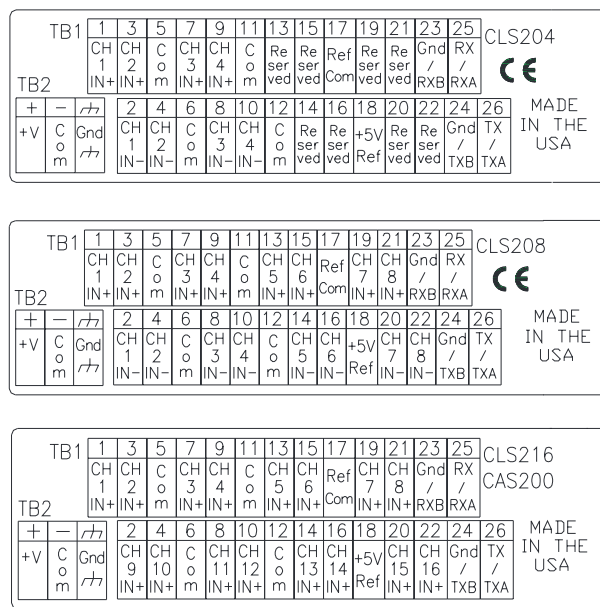


Figure 2.15 CLS200 Connector Locations

Input Wiring Recommendations

Use multicolored stranded shielded cable for analog inputs. Watlow Anafaze recommends that you use 20 AWG wire (0.5 mm²). If the sensor manufacturer requires it, you can also use 24 or 22 AWG wiring (0.2 mm²). Most inputs use a shielded twisted pair; some require a 3-wire input.

Follow the instructions pertaining to the type(s) of input(s) you are installing.

The controller accepts the following inputs without any special scaling resistors:

- J, K, T, S, R, B and E thermocouples.
- Linear inputs with ranges between -10 and 60 mV.

Any unused inputs should be set to SKIP or jumpered to avoid thermocouple break alarms.

Thermocouple Connections

Connect the positive lead of any of the supported thermocouple types to the IN+ terminal for one of the loops and the negative lead to the corresponding IN- terminal.

Use 18 or 20 AWG (0.5 or 0.75 mm²) for all the thermocouple inputs. Most thermocouple wire is solid, unshielded wire. When using shielded wire, ground one end only.

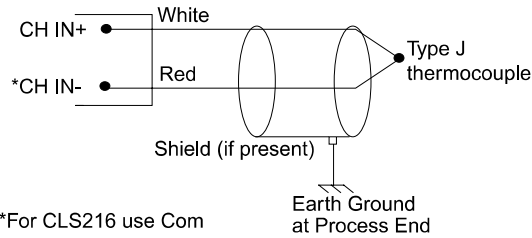


Figure 2.16 Thermocouple Connections

NOTE!

When mixing current inputs with low-voltage inputs (thermocouples or voltage inputs <1V) to a CLS216, connect the current signal to the IN+ and Ref Com terminals. If no low-voltage sensors are used, connect current inputs to the IN+ and Com terminals on TB1. For all inputs to a CLS204 or CLS208, connect the sensors to the IN+ and Com terminals.



CAUTION!

Ground loops and common mode noise can damage the controller or disrupt measurements. To minimize ground loops and common mode noise:

- **With a CLS216, use only ungrounded thermocouples with each thermocouple sheath electrically connected to earth ground. The negative sensor terminals on the CLS216 are tied to analog common.**
- **With a CLS204 or CLS208, do not mix grounded and ungrounded thermocouples. If any thermocouple connected to the controller is of grounded construction, all thermocouples should be of grounded construction**

and each should be connected to ground at the process end.

• Connect the earth ground terminal on TB2 to a good earth ground, but do not connect the analog common to earth ground. The CLS200 uses a floating analog common for sensor measurements. The noise protection circuits on the sensor inputs function correctly only when the controller is correctly installed. See Ground Loops on page 24.

RTD Input Connections

This input type requires scaling resistors. Watlow Anafaze recommends that you use a 100 Ω , 3-wire platinum RTD to prevent reading errors due to cable resistance. If you use a 2-wire RTD, jumper the negative input to common. If you must use a 4-wire RTD, leave the fourth wire unconnected.

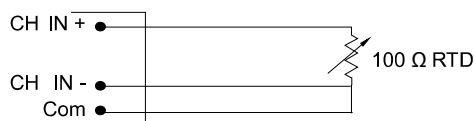


Figure 2.17 RTD Connections to CLS204 or CLS208


Reference Voltage Terminals

The +5V Ref and Ref Com terminals are provided in order to power external bridge circuits for special sensors. Do not connect any other types of devices to these terminals.


Voltage Input Connections

This input type requires scaling resistors. Special input resistors installed at Watlow Anafaze divide analog input voltages such that the controller sees a -10 to 60 mV signal on the loop.

CLS204 and CLS208




CLS216

**Figure 2.18 Linear Voltage Signal Connections**

Current Input Connections

This input type requires scaling resistors. Special input resistors installed at Watlow Anafaze for analog current signals are such that the controller sees a -10 to 60 mV signal across its inputs for the loop.

CLS204 and CLS208



CLS216

**Figure 2.19 Linear Current Signal Connections**

NOTE!

When mixing current inputs with low-voltage inputs (thermocouples or voltage inputs <1V) to a CLS216, connect the current signal to the IN+ and Ref Com terminals. When no low-voltage sensors are used, connect current inputs to the IN+ and Com terminals on TB1. For all inputs to a CLS204 or CLS208, connect the sensors to the IN+ and Com terminals.

Pulse Input Connections

The CLS200 can accept a pulse input of up to 2000 Hz from a device such as an encoder. The frequency of this input is scaled with user-set parameters. See Setup Loop Input Menu on page 82 and Chapter 9, Linear Scaling Examples. This scaled value is the process variable for loop 5 on a CLS204, loop 9 on a CLS208, or loop 17 on a CLS216.

The CLS200 can accommodate encoder signals up to 24V_{dc} using a voltage divider or can power encoders with the 5V_{dc} from the TB50 or TB18. The following figures illustrate connecting encoders. A pull-up resistor in the CLS200 allows open collector inputs to be used.

NOTE! *If the signal on the pulse input exceeds 10kHz the controller's operation may be disrupted. Do not connect the pulse input to a signal source that may exceed 10kHz.*

CLS200 and TB50 or TB18

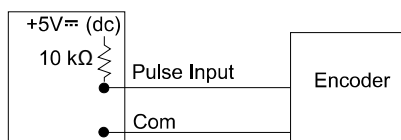


Figure 2.20 Encoder with 5V_{dc} TTL Signal

CLS200 and TB50 or TB18

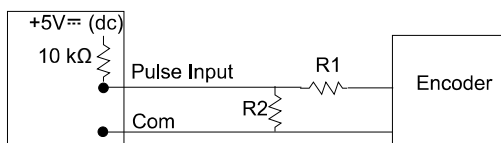


Figure 2.21 Encoder Input with Voltage Divider

For encoders with signals greater than 5V_{dc}, use a voltage divider to drop the voltage to 5 volts at the input. Use appropriate values for R₁ and R₂ depending on the encoder excitation voltage. Be sure not to exceed the specific current load on the encoder.

Wiring Control and Digital I/O

This section describes how to wire and configure the control outputs for the CLS200 series controller.

NOTE!

Control outputs are connected to the CLS200's common when the control output is on (low). Be careful when you connect external devices that may have a low side at a voltage other than controller ground, since you may create ground loops.

If you expect grounding problems, use isolated solid state relays and isolate the control device inputs.

The CLS200 provides dual PID control outputs for each loop. These outputs can be enabled or disabled, and are connected via TB50 or TB18.

Output Wiring Recommendations

When wiring output devices, use multicolored, stranded, shielded cable for analog outputs and digital outputs connected to panel-mounted solid state relays.

- Analog outputs usually use a twisted pair.
- Digital outputs usually have 9 to 20 conductors, depending on wiring technique.

Cable Tie Wraps

Once you have wired outputs to the TB50, install the cable tie wraps to reduce strain on the connectors.

Each row of terminals has a cable tie wrap hole at one end. Thread the cable tie wrap through the cable tie wrap hole. Then wrap the cable tie wrap around the wires attached to that terminal block.

Digital Outputs

The CLS200 series provides dual control outputs for up to 16 loops. The controller's default configuration has all heat outputs enabled and all cool outputs disabled. Disabling a heat output makes that output available to be used as a control or an alarm output. See Enable or Disable Heat or Cool Outputs on page 94. The CPU watchdog timer output can be used to monitor the state of the controller with an external circuit or device. See CPU Watchdog Timer on page 38.

Table 2.3 Digital Output States and Values Stored in the Controller

State Value		Description
Off	High	Open circuit
On	Low	Sinking current to common


The digital outputs sink current from the load to the controller common. The load may be powered by the 5V_{DC} supplied by the controller at the TB50. Alternately, an external power supply may be used to drive loads.

Keep in mind the following points when using an external power supply:

- The CLS200 power supply available from Watlow Anafaze includes a 5V_{DC} supply. When using it to supply output loads, connect the 5V_{DC} common to the 15V_{DC} common at the power supply.
- Do not exceed +24 volts.
- If you tie the external load to earth ground, or if you cannot connect it as shown in (See Figure 2.22), then use a solid-state relay.

All digital outputs are sink outputs referenced to the CLS200 series controller common supply. These outputs are low (pulled to common) when they are on.

The outputs conduct current when they are low or on. The maximum current sink capability is 60 mA at 24V_{DC}. They cannot “source” current to a load.

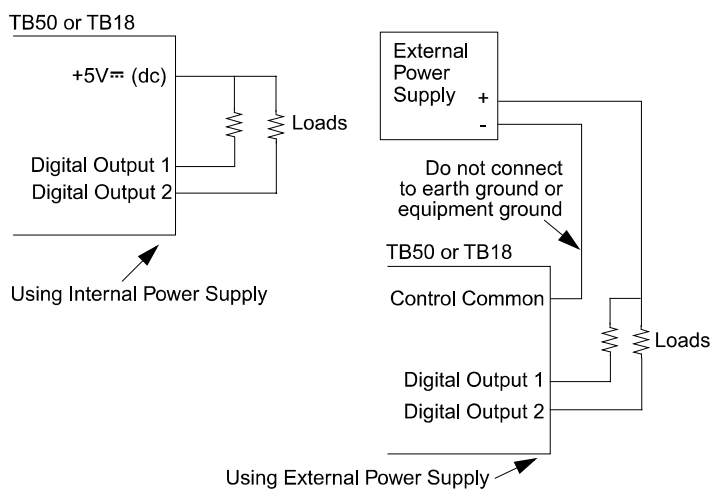**Figure 2.22 Digital Output Wiring**

Configuring Outputs

Keep in mind the following points as you choose outputs for control and alarms:

- You can enable or disable the control outputs. The default setting is heat outputs enabled, cool outputs disabled.
- You can program each control output individually for on/off, time proportioning, distributed zero crossing, or Serial DAC control.
- You can individually program each control output for direct or reverse action.
- Alarm outputs other than the global alarm are non-latching.
- Alarms can be suppressed during process start up and for preprogrammed durations. See Alarm Delay on page 103.
- Alarm outputs can be configured as a group as normally on (low) or normally off (high). See Digital Output Polarity on Alarm on page 81.

Control and Alarm Output Connections

Typically control and alarm outputs use external optically isolated solid state relays (SSRs). SSRs accept a 3 to 32V $\overline{\text{dc}}$ (dc) input for control, and some can switch up to 100 Amps at 480 V \sim (ac). For larger currents, use silicon control rectifier (SCR) power controllers up to 1000 Amps at 120 to 600V \sim (ac). You can also use SCRs and a Serial DAC for phase-angle fired control.

The 34 control and alarm outputs are open collector outputs referenced to the CLS200's common. Each output sinks up to 60 mA $\overline{\text{dc}}$ (dc) to the controller common when on.

NOTE! *Control outputs are SINK outputs. They are Low when the output is ON. Connect them to the negative side of solid state relays.*

Figure 2.23 shows sample heat, cool and alarm output connections.

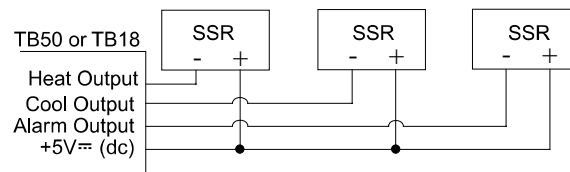


Figure 2.23 *Sample Heat, Cool and Alarm Output Connections*

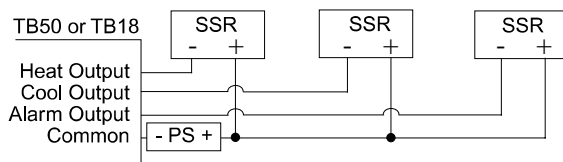


Figure 2.24 *Output Connections Using External Power Supply*

CPU Watchdog Timer

The CPU watchdog timer constantly monitors the microprocessor. It is a sink output located on TB50 terminal 6 or TB18 terminal 3. The output can be connected to an external circuit or device in order to determine if the controller is powered and operational. Do not exceed 5V_{dc}, 10 mA_{dc} rating for the watchdog output. The output is low (on) when the microprocessor is operating; when it stops operating, the output goes high (off).

Figure 2.25 and Figure 2.26 show the recommended circuit for the watchdog timer output for the TB50 and the TB18.

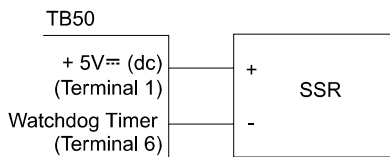


Figure 2.25 *TB50 Watchdog Timer Output*

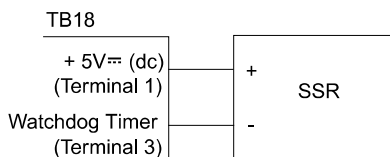


Figure 2.26 *TB18 Watchdog Timer Output*

Digital Inputs

All digital inputs are transistor-transistor logic (TTL) level inputs referenced to control common and the internal +5V power supply of the CLS200.

When an input is connected to the controller common, the input is considered on. Otherwise, the input is considered

off. Most features that use the digital inputs can be user-configured to activate when an input is either on or off.

In the off state, internal 10 k resistors pull the digital inputs high to 5V_{DC} (dc) with respect to the controller common.

Table 2.4 Digital Inputs States and Values Stored in the Controller

State	Value	Description
Off	High	Open circuit
On	Low	Digital Input connected to controller common

External Switching Devices

To ensure that the inputs are reliably switched, use a switching device with the appropriate impedances in the on and off states and do not connect the inputs to external power sources.

When off, the switching device must provide an impedance of at least 11 k Ω to ensure that the voltage will rise to greater than 3.7V_{DC} (dc). When on, the switch must provide not more than 1 k Ω impedance to ensure the voltage drops below 1.3V_{DC} (dc).

To install a switch as a digital input, connect one lead to the common terminal on the TB50 (terminals 3 and 4) or TB18 (terminal 2). Connect the other lead to the desired digital input terminal on the TB50 (terminals 43 to 50) or TB18 (terminals 16 to 18).

Functions Activated by Digital Inputs

Use digital inputs to activate the following functions:

- Load a job that is stored in controller memory. See Job Select Digital Inputs on page 76.
- Change all loops to manual mode at specified output levels. See Output Override Digital Input on page 77.
- Enable thermocouple short detection. See Process Power Digital Input on page 79.
- Restore control automatically after a failed sensor has been repaired. See Restore PID Digital Input on page 92.

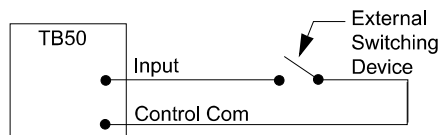


Figure 2.27 Wiring Digital Inputs

TB18 Connections (CLS204 and CLS208 Only)

Table 2.5 TB18 Connections

Terminal	Function	Control Output ¹	
		CLS204	CLS208
1	+5V $\overline{\text{dc}}$		
2	CTRL COM		
3	Watchdog timer		
4	Global alarm		
5	Output 1	Loop 1 heat	Loop 1 heat
6	Output 2	Loop 2 heat	Loop 2 heat
7	Output 3	Loop 3 heat	Loop 3 heat
8	Output 4	Loop 4 heat	Loop 4 heat
9	Output 5	Pulse loop heat	Loop 5 heat
10	Output 6	Loop 1 cool	Loop 6 heat
11	Output 7	Loop 2 cool	Loop 7 heat
12	Output 8	Loop 3 cool	Loop 8 heat
13	Output 9	Loop 4 cool	Pulse loop heat
14	Output 10	Pulse loop cool	Loop 1 cool
15	Output 34 ²	Serial DAC clock	Serial DAC clock
16	Input 1		
17	Input 2		
18	Input 3/Pulse input		

¹ The indicated outputs are dedicated for control when enabled in the loop setup. If one or both of a loop's outputs are disabled, the corresponding digital outputs become available for alarms or ramp/soak events.

² If you install a Watlow Anafaze Serial DAC, the CLS200 series controller uses digital output 34 for a clock line. You cannot use output 34 for anything else when you have a Serial DAC installed.

TB50 Connections

Table 2.6 *TB50 Connections for CLS204 and CLS208*

		Control Output ¹				Control Output ¹	
Ter- minal	Function	CLS208	CLS204	Ter- minal	Function	CLS208	CLS204
1	+5V $\overline{\text{m}}$ (dc)			2	+5V $\overline{\text{m}}$ (dc)		
3	CTRL COM			4	CTRL COM		
5	Not Used			6	Watchdog Timer		
7	Pulse Input			8	Global Alarm		
9	Output 1	Loop 1 heat	Loop 1 heat	10	Output 34 ²		
11	Output 2	Loop 2 heat	Loop 2 heat	12	Output 33		
13	Output 3	Loop 3 heat	Loop 3 heat	14	Output 32		
15	Output 4	Loop 4 heat	Loop 4 heat	16	Output 31		
17	Output 5	Loop 5 heat	Pulse loop heat	18	Output 30		
19	Output 6	Loop 6 heat	Loop 1 cool	20	Output 29		
21	Output 7	Loop 7 heat	Loop 2 cool	22	Output 28		
23	Output 8	Loop 8 heat	Loop 3 cool	24	Output 27		
25	Output 9	Pulse loop heat	Loop 4 cool	26	Output 26		
27	Output 10	Loop 1 cool	Pulse loop cool	28	Output 25		
29	Output 11	Loop 2 cool		30	Output 24		
31	Output 12	Loop 3 cool		32	Output 23		
33	Output 13	Loop 4 cool		34	Output 22		
35	Output 14	Loop 5 cool		36	Output 21		
37	Output 15	Loop 6 cool		38	Output 20		
39	Output 16	Loop 7 cool		40	Output 19		
41	Output 17	Loop 8 cool		42	Output 18	Pulse loop cool	
43	Input 1			44	Input 2		
45	Input 3			46	Input 4		
47	Input 5			48	Input 6		
49	Input 7			50	Input 8		

¹ The indicated outputs are dedicated for control when enabled in the loop setup. If one or both of a loop's outputs are disabled, the corresponding digital outputs become available for alarms or ramp/soak events.

² If you install a Watlow Anafaze Serial DAC, the controller uses digital output 34 (terminal 10) for a clock line. You cannot use output 34 for anything else when you have a Serial DAC installed.

Table 2.7 TB50 Connections for CLS216

Terminal	Function	CLS216 Control Output ¹	Terminal	Function	CLS216 Control Output ¹
1	+5V $\overline{\text{m}}$ (dc)		2	+5V $\overline{\text{m}}$ (dc)	
3	CTRL COM		4	CTRL COM	
5	Not Used		6	Watchdog Timer	
7	Pulse Input		8	Global Alarm	
9	Output 1	Loop 1 heat	10	Output 34 ²	Pulse loop cool
11	Output 2	Loop 2 heat	12	Output 33	Loop 16 cool
13	Output 3	Loop 3 heat	14	Output 32	Loop 15 cool
15	Output 4	Loop 4 heat	16	Output 31	Loop 14 cool
17	Output 5	Loop 5 heat	18	Output 30	Loop 13 cool
19	Output 6	Loop 6 heat	20	Output 29	Loop 12 cool
21	Output 7	Loop 7 heat	22	Output 28	Loop 11 cool
23	Output 8	Loop 8 heat	24	Output 27	Loop 10 cool
25	Output 9	Loop 9 heat	26	Output 26	Loop 9 cool
27	Output 10	Loop 10 heat	28	Output 25	Loop 8 cool
29	Output 11	Loop 11 heat	30	Output 24	Loop 7 cool
31	Output 12	Loop 12 heat	32	Output 23	Loop 6 cool
33	Output 13	Loop 13 heat	34	Output 22	Loop 5 cool
35	Output 14	Loop 14 heat	36	Output 21	Loop 4 cool
37	Output 15	Loop 15 heat	38	Output 20	Loop 3 cool
39	Output 16	Loop 16 heat	40	Output 19	Loop 2 cool
41	Output 17	Pulse loop heat	42	Output 18	Loop 1 cool
43	Input 1		44	Input 2	
45	Input 3		46	Input 4	
47	Input 5		48	Input 6	
49	Input 7		50	Input 8	

¹ The indicated outputs are dedicated for control when enabled in the loop setup. If one or both of a loop's outputs are disabled, the corresponding digital outputs become available for alarms or ramp/soak events.

² If you install a Watlow Anafaze Serial DAC, the controller uses digital output 34 (terminal 10) for a clock line. You cannot use output 34 for anything else when you have a Serial DAC installed.

Analog Outputs

Analog outputs can be provided by using a Dual DAC or Serial DAC module to convert the open collector outputs from the controller. Use multicolored stranded shielded cable for analog outputs. Analog outputs generally use a twisted pair wiring. The following sections describe how to connect the Dual DAC and Serial DAC modules to power the controller outputs and the load.

Wiring the Dual DAC

A Dual DAC module includes two identical circuits. Each can convert a distributed zero-cross (DZC) signal from the controller to a voltage or current signal. Watlow Anafaze strongly recommends using a power supply separate from the controller supply to power the Dual DAC. Using a separate power supply isolates the controller's digital logic circuits and analog measurement circuits from the frequently noisy devices that take the analog signal from the Dual DAC.

Several Dual DAC modules may be powered by one power supply. Consult the Specifications chapter for the Dual DAC's power requirements. Also note in the specifications that the Dual DAC does not carry the same industry approvals as the Serial DAC.

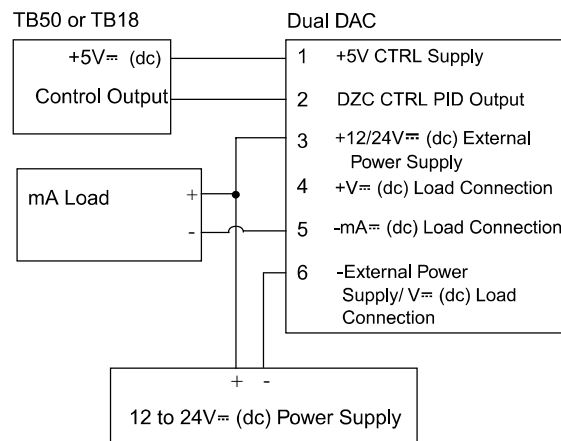


Figure 2.28 Dual DAC with Current Output

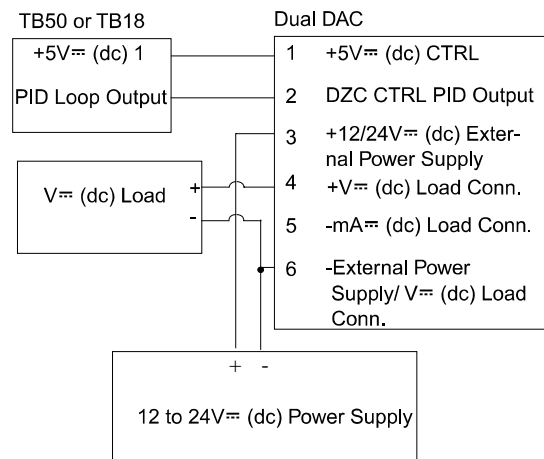


Figure 2.29 Dual DAC with Voltage Output

Wiring the Serial DAC

The Serial DAC provides a robust analog output signal. The module converts the proprietary Serial DAC signal from the controller's open collector output in conjunction with the clock signal to an analog current or voltage. See Figure 2.30 for wiring. The Serial DAC is user-configurable for voltage or current output through firmware configuration. See *Configuring Serial DAC Outputs* on page 188.

The Serial DAC optically isolates the controller's control output from the load. When a single Serial DAC is used, it may be powered by the 5V (dc) found on the TB50, or by an external supply referenced to the controller's power supply. When using multiple Serial DACs, the controller cannot provide sufficient current; use the 5V (dc) output from the CLS200 power supply.

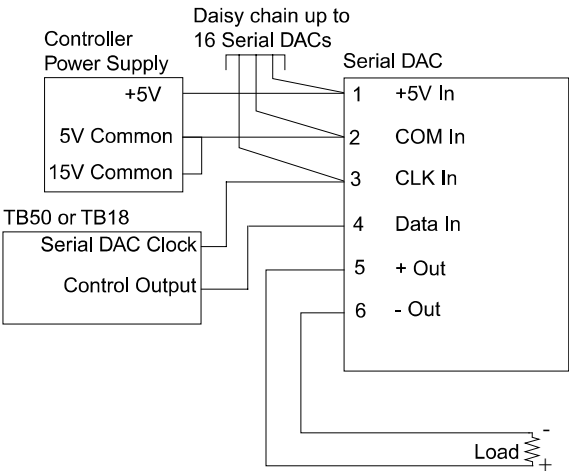


Figure 2.30 Single/Multiple Serial DACs

Serial Communications

The CLS200 series controllers are factory-configured for EIA/TIA-232 communications unless otherwise specified when purchased. However, the communications are jumper-selectable, so you can switch between EIA/TIA-232 and EIA/TIA-485. See Changing Communications on page 179.

EIA/TIA-232 Interface

EIA/TIA-232 provides communication to the serial port of an IBM PC or compatible computer. It is used for single-controller installations where the cable length does not exceed 50 feet (15.2 m).

The EIA/TIA-232 interface is a standard three-wire interface. See the table below for connection information.

If you are using EIA/TIA-232 communications with grounded thermocouples, use an optical isolator between the controller and the computer to prevent ground loops.

Table 2.8 shows EIA/TIA-232 connections for 25-pin and 9-pin connectors or cables that are supplied by the factory.

EIA/TIA-232 may be used to connect a computer through a 232/485 converter, to an EIA/TIA-485 communications network with up to 32 CLS200 controllers.

Table 2.8 EIA/TIA-232 Connections

Wire Color	CLS200 TB1	DB 9 Connector	DB 25 Connector
White	TX Pin 26	RX Pin 2	RX Pin 3
Red	RX Pin 25	TX Pin 3	TX Pin 2
Black	GND Pin 23	GND Pin 5	GND Pin 7
Green	GND Pin 24	N/U Pin 9	N/U Pin 22
Shield	N/C	GND Pin 5	GND Pin 7


Jumpers in EIA/TIA-232 Connectors

Some software programs and some operator interface terminals require a Clear to Send (CTS) signal in response to their Request to Send (RTS) signal, or a Data Set Ready (DSR) in response to their Data Terminal Ready (DTR). The CLS200 is not configured to receive or transmit these signals. To use such software with the CLS200, jumper the RTS to the CTS and the DTR to the DSR in the DB connector. Table 2.9 lists the standard pin assignments for DB-9 and DB-25 connectors.

Table 2.9 RTS/CTS Pins in DB-9 and DB-25 Connectors

	DB-9	DB-25
RTS	7	4
CTS	8	5
DTR	4	20
DSR	6	6

Cables manufactured by Watlow Anafaze for EIA/TIA-232 communications include these jumpers. Neither AnaWin nor Anasoft software requires these jumpers.

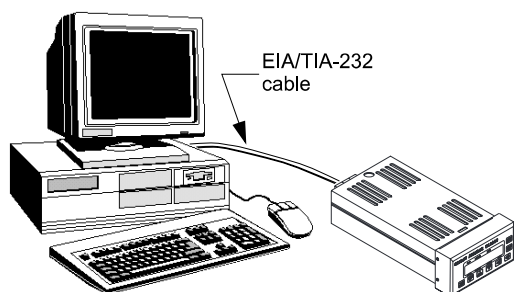**Figure 2.31 Connecting One CLS200 to a Computer Using EIA/TIA-232**

EIA/TIA-485 Interface

To communicate with more than one CLS200 series controller on a controller network, or to use communication cable lengths greater than 50 feet (15.2 m) from PC to controller, you must use EIA/TIA-485 communications.

When using EIA/TIA-485 communications, you must attach an optically isolated EIA/TIA-232 to EIA/TIA-485 converter to the computer.

Figure 2.32 and Figure 2.33 show the recommended system wiring. To avoid ground loops, use an optically isolated EIA/TIA-232 to EIA/TIA-485 converter between the computer and the EIA/TIA-485 network.

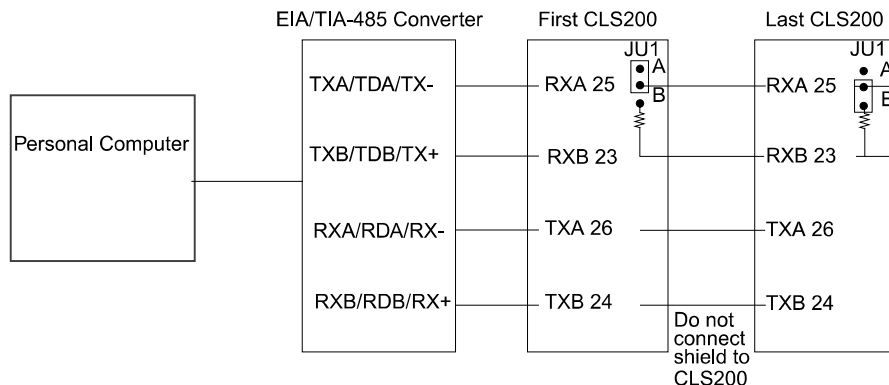


Figure 2.32 EIA/TIA-485 Wiring

Cable Recommendations

Watlow Anafaze recommends Belden 9843 cable or its equivalent. This cable includes three 24 AWG (0.2 mm²) shielded, twisted pairs. It should carry signals of up to 19.2k baud with no more than acceptable losses for up to 4,000 feet (1,220 m).

EIA/TIA-485 Network Connections

Watlow Anafaze recommends that you use a single daisy chain configuration rather than spurs. Run a twisted-pair cable from the host or the converter to the first CLS200, and from that point run a second cable to the next CLS200, and so on. (See Figure 2.33.)

If necessary for servicing, instead of connecting each controller directly into the next, install a terminal strip or connector as close as possible to each CLS200, run a communications cable from one terminal strip to the next and connect the controllers to the bus with short lengths of cable.

To avoid unacceptable interference, use less than 10 feet (3 m) of cable from the terminal or connector to the CLS200 serial port.

Some systems may experience problems with sensor signal reading if the commons of multiple controllers are connected. See Signal Common on page 48.

Refer to Termination on page 48 for more on terminating resistors.

Connect the shield drain to earth ground only at computer or host end.

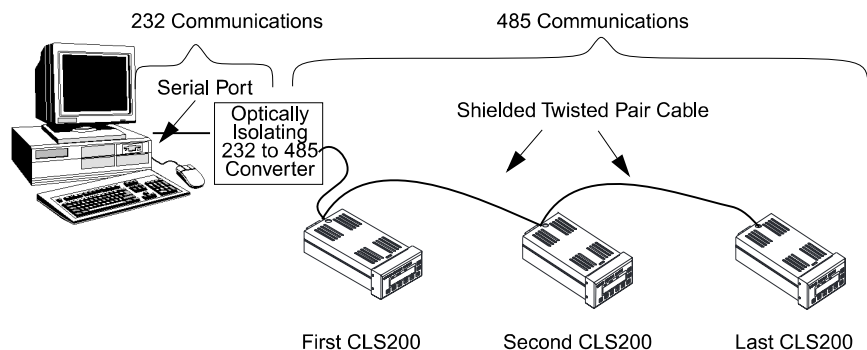


Figure 2.33 Recommended System Connections

Signal Common

For usual installations, do not connect the dc commons of the controllers together or to the converter or host device. Use an optically isolating EIA/TIA-232-to-485 converter to prevent problems with sensor readings.

Termination

In order for EIA/TIA-485 signals to be transmitted properly, each pair must be properly terminated. The value of the termination resistor should be equal to the impedance of the communications cable used. Values are typically 150 to 200 Ω .

The receive lines at the converter or host device should be terminated in the converter, the connector to the host device or the device itself. Typically the converter documentation provides instructions for termination.

Use a terminating resistor on the receive lines on the last controller on the 485 line. Set JU1 inside the CLS200 in position B to connect a 200 Ω resistor across the receive lines. Refer to Changing Communications on page 179.

EIA/TIA-485 Converters and Laptop Computers

In order for an EIA/TIA-232-to-485 converter to optically isolate the computer from the 485 network, the 232 and 485 sides must be powered independently. Many 232-to-485 converters can be powered by the computer's communications port. Some computers, laptops in particular, do not automatically provide the appropriate voltages. These computer/converter combinations can usually be used by connecting an external power supply to the 232 side of the converter. Not all converters have power inputs for the 232 side, however.

NOTE!

When using Anasoft with a laptop computer, choose a converter with an external 232 power input. AnaWin and Watview works with all tested converters without an external 232 input.

Using the CLS200

This chapter explains how to use the keypad and display to operate the controller. Figure 3.1 shows the operator menus and displays accessible from the front panel.

To change global parameters, loop inputs, control parameters, outputs, and alarms using the setup menus, see Chapter 4, Setup.

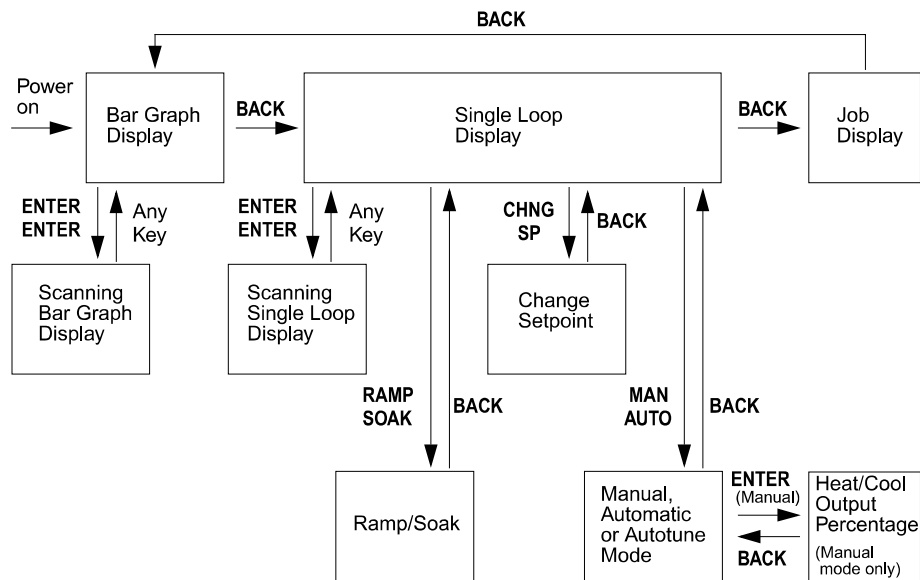


Figure 3.1 Operator Displays

Front Panel

The CLS200 front panel provides a convenient interface with the controller. You can use the front panel keys to program and operate the CLS200.

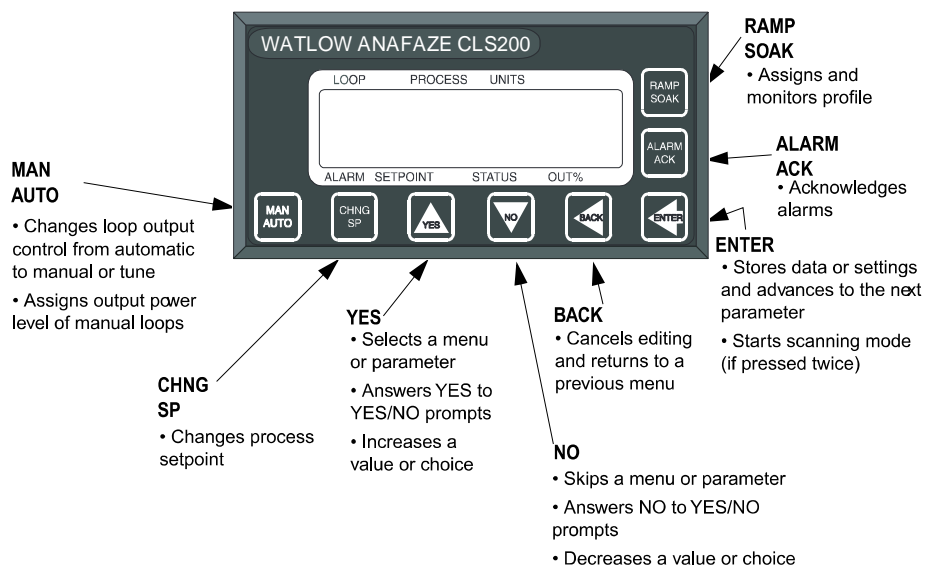


Figure 3.2 CLS200 Front Panel

Front Panel Keys



YES (up)

Press **YES** to:

- Select a menu or parameter
- Answer **YES** to the flashing ? prompts
- Increase a value or choice when editing
- Stop scanning mode



NO (down)

Press **NO** to:

- Skip a menu or parameter when the prompt is blinking
- Answer **NO** to the flashing ? prompts
- Decrease a value or choice when editing
- Stop scanning mode
- Perform a **NO**-key reset

NOTE!

Pressing the NO key on power up performs a NO-key reset. This procedure clears the RAM and sets the controller's parameters to their default values. See NO-Key Reset on page 176.



BACK

Press **BACK** to:

- Cancel editing
- Return to a previous menu
- Switch between bar graph, single loop and job displays
- Stop scanning mode



ENTER

Press **ENTER** to:

- Store data or a parameter choice after editing and go to the next parameter
- Start scanning mode (if pressed twice)



**CHNG
SP**

Press **CHNG SP** to change the loop setpoint



**MAN
AUTO**

Press **MAN/AUTO** to:

- Toggle a loop between manual and automatic control
- Adjust the output power level of manual loops
- Automatically tune the loop



**RAMP
SOAK**

If your controller has the ramp/soak option, press **RAMP/SOAK** to:

- Assign a ramp/soak profile to the current loop
- Select the ramp/soak mode
- See the status of a running profile

Your controller may not have the ramp/soak option. If it does not, pressing the **RAMP/SOAK** key displays the message **OPTION UNAVAILABLE**.



**ALARM
ACK**

Press **ALARM ACK** to:

- Acknowledge an alarm condition
- Reset the global alarm output

Displays

This section discusses the controller's main displays: bar graph, single loop and job.

Bar Graph Display

On power up, the controller displays general symbolic information for up to eight loops. This screen is called the bar graph display. The diagram below shows the symbols used in the bar graph display.

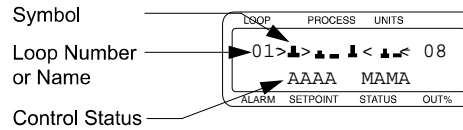


Figure 3.3 Bar Graph Display

Table 3.1 explains the symbols you see on the top line of the bar graph display. These symbols appear when the controller is in dual output mode (heat and cool outputs enabled) and single output mode (heat or cool outputs enabled, but not both).

Table 3.1 Bar Graph Display Symbols




Symbol	Description
<	Loop is in low process or low deviation alarm.
>	Loop is in high process or high deviation alarm.
	Loop is above setpoint. If you enable the high or low deviation alarm, this symbol is scaled to it. If you do not enable these alarms, these symbols are scaled to the setpoint $\pm 5\%$ of the sensor's range.
	Loop is at setpoint. If you enable the high or low deviation alarm, this symbol is scaled to it. If you do not enable these alarms, these symbols are scaled to the setpoint $\pm 5\%$ of the sensor's range.
	Loop is below setpoint. If you enable the high or low deviation alarm, this symbol is scaled to it. If you do not enable these alarms, these symbols are scaled to the setpoint $\pm 5\%$ of the sensor's range.
(blank)	Loop's input type is set to SKIP.
F	Open thermocouple (T/C), shorted T/C, reversed T/C, open RTD or shorted RTD.

Table 3.2 explains the control status symbols on the bottom line of bar graph display. Additional symbols may appear with the ramp/soak option. See Bar Graph Display on page 146.

Table 3.2 Control Status Symbols on the Bar Graph and Single Loop Displays

Bar Graph Display Symbol	Single Loop Display Symbol	Description
M	MAN	One or both outputs are enabled. Loop is in manual control.
A	AUTO	Only one output (heat or cool) is enabled. Loop is in automatic control.
T	TUNE	The loop is in autotune mode.
H T	HEAT	Both heat and cool outputs are enabled. Loop is in automatic control and heating.
C L	COOL	Both heat and cool outputs are enabled. Loop is in automatic control and cooling.
(blank)	(blank)	Both outputs disabled, or input type is set to SKIP.

Navigating in Bar Graph Display

When the bar graph display is visible:

- Press the **YES** (up) or **NO** (down) key to see a new group of loops.
- Press **ENTER** twice to scan all groups of loops. The groups will display sequentially for three seconds each. This is called scanning mode.
- Press any key to stop scanning.
- Press **BACK** once to go to the job display, if enabled, or the single loop display.

Single Loop Display

The single loop display shows detailed information for one loop at a time.

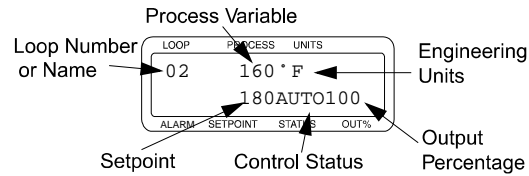


Figure 3.4 Single Loop Display

The control status indicator shows MAN, AUTO or TUNE modes.

If both control outputs for a loop are enabled and the loop is in automatic control, then the single loop display shows HEAT or COOL as the control status:

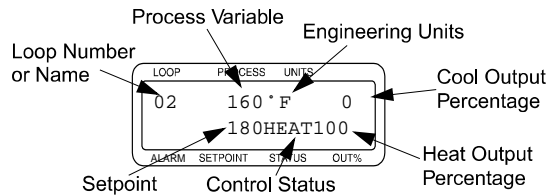


Figure 3.5 Single Loop Display, Heat and Cool Outputs Enabled

Navigating the Single Loop Display

In the single loop display:

- Press **YES** to go to the next loop.
- Press **NO** to go to the previous loop.
- Press **BACK** once to go to the job display (if enabled) or bar graph display.
- Press **ENTER** twice to start the single loop scanning display. The single loop scanning display shows information for each loop in sequence. Data for each loop displays for one second.
- Press any key to stop scanning.

Alarm Displays

If a process, deviation, failed or system sensor alarm occurs, the controller switches from any Single Loop display or Bar Graph display to the Single Loop display for the loop with the alarm. The global alarm output turns on and a two-character alarm code appears in the lower left corner of the Single Loop display. If the alarm is for a failed sensor, a short message appears in place of the process variable and units. Control outputs associated with failed sensors are set to the value of the SENSOR FAIL HT/CL OUTPUT % parameter (default, 0%). The alarm code blinks and displays cannot be changed until the alarm has been acknowledged. Once the alarm is acknowledged, the alarm code stops blinking. When the condition that caused the alarm is corrected, the alarm messages disappear.

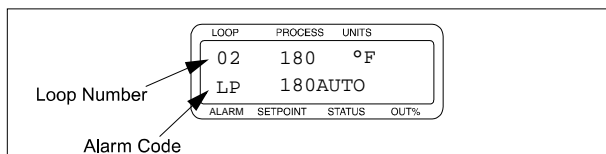


Figure 3.6 Single Loop Display with a Process Alarm

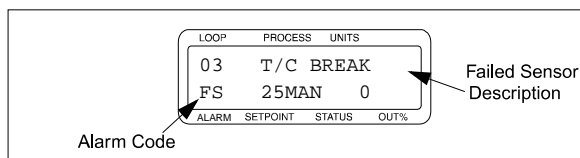


Figure 3.7 Failed Sensor Alarm in the Single Loop Display

Alarms that still exist but have been acknowledged are displayed on the Bar Graph display. A letter or symbol indicates the alarm condition. See Table 3.3 on page 59 for a full list of alarm codes, failed sensor messages and alarm symbols.

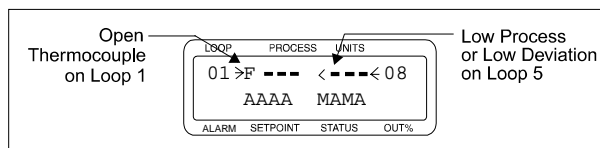


Figure 3.8 Alarm Symbols in the Bar Graph Display

Table 3.3 shows the symbols used in each form of the alarm display.

Table 3.3 Alarm Type and Symbols

Alarm Code	Bar Graph Symbol	Alarm Message	Alarm Description
FS	F	T/C BREAK	Failed Sensor: Break detected in thermocouple circuit.
RO	F	RTD OPEN	RTD Open: Break detected in RTD circuit.
RS	F	RTD SHORTED	RTD Short: Short detected in RTD circuit.
RT	F	REVERSED TC	Reversed Thermocouple: Reversed polarity detected in thermocouple circuit.
ST	F	T/C SHORTED	Shorted Thermocouple: Short detected in thermocouple circuit.
HP	>	No message	High Process Alarm: Process variable has risen above the set limit.
HD	>	No message	High Deviation Alarm: Process variable has risen above the setpoint plus the deviation alarm value.
LP	<	No message	Low Process Alarm: Process variable has dropped below the set limit.
LD	<	No message	Low Deviation Alarm: Process variable has dropped below the setpoint minus the deviation alarm value.
AW	*	No message	Ambient Warning: Controller's ambient temperature has exceeded operating limits by less than 5° C.

Acknowledging an Alarm

Press **ALARM ACK** to acknowledge the alarm. If there are other loops with alarm conditions, the Alarm display switches to the next loop in alarm. Acknowledge all alarms to clear the global alarm digital output (the keypad and display won't work for anything else until you acknowledge each alarm). The alarm symbols are displayed as long as the alarm condition is valid.

System Alarms

When a system alarm occurs, the global alarm output turns on and an alarm message appears on the display. The message continues to be displayed until the error condition is removed and the alarm is acknowledged. The CLS200 can display the following system alarms:


- BATTERY DEAD
See Battery Dead on page 168.
- LOW POWER
See Low Power on page 168.
- AW
See Ambient Warning on page 168.
- H/W FAILURE: AMBIENT
See H/ W Ambient Failure on page 169.
- H/W FAILURE: GAIN
See H/ W Gain or Offset Failure on page 170.
- H/W FAILURE: OFFSET
See H/ W Gain or Offset Failure on page 170.

Job Display


The job display appears only if:

- You have enabled JOB SELECT DIG INPUTS. (See Load Setup From Job on page 75.)
– and –
- You have selected a job from the job load menu.


After loading a job using the LOAD SETUP FROM JOB menu, the job display shows you the following screen:



If parameters are modified while the job is running, this screen will display:



If the job was loaded using digital inputs, the display shows:



Changing the Setpoint

Select the single loop display for the loop you want to change. Press **CHNG SP**. This display appears:

LOOP	PROCESS	UNITS
01	SETPOINT ?	
	25 ° F	

ALARM	SETPOINT	STATUS	OUT%

- Press **YES** to change the setpoint.

Press the up or down keys (**YES** or **NO**) to increase or decrease the setpoint value.

- Press **ENTER** to save your changes and return to single loop display.
– or –
Press **NO** or **BACK** (without pressing **ENTER**) to return to single loop display without saving the new setpoint.

Selecting the Control Status

If you set the control status to **AUTO**, the controller automatically controls the process according to the configuration information you give it.

If you set the control status to **MAN**, you need to set the output level.

If you set the control status to **TUNE**, the controller performs an autotune and chooses PID parameters.

NOTE!

If the loop outputs are disabled, you cannot toggle between manual and automatic control. If you try it, the screen shows an error message telling you that the outputs are disabled, as shown below. Use the SETUP LOOPS OUTPUT menu to enable the outputs. See Setup Loop Outputs Menu on page 93.

LOOP	PROCESS	UNITS
	MAN/AUTO CONTROL	
	OUTPUTS DISABLED	

ALARM	SETPOINT	STATUS	OUT%

Manual and Automatic Control

- Switch to the single loop display for the loop.
- Press **MAN/AUTO**.
- Press **YES** to change the mode
– or –
if the mode is **MAN**, press **NO** to set the output power.

Go to the next subsection, Manual Output Levels.

– or –

press **NO** if in **AUTO** to cancel and remain in **AUTO** mode.

4. Select a mode by pressing the up or down key (**YES** or **NO**) to scroll through the modes.
5. Press **ENTER** to make the mode change
– or –
press **BACK** to return to the single loop display without saving the new mode setting.
6. If you set the loop to manual, you are prompted for the output power. Go to Manual Output Levels below.

Manual Output Levels

If the loop is set to manual control, the controller prompts for output levels for the enabled control outputs. Use this menu to set the manual heat and cool output levels. You should see a display like this:

LOOP	PROCESS	UNITS
01	SET HEAT	
	OUTPUT?	90%

ALARM	SETPOINT	STATUS	OUT%

1. Press **YES** to change the output power level. (If the heat outputs are enabled, you will be able to change the heat output power level. If only the cool outputs are enabled, you will be able to change only the cool output power level.)
– or –
Press **NO** to go to the cool output, if available, and then press **YES** to change the cool output.
2. Press up or down (**YES** or **NO**) to select a new output power level.
3. Press **ENTER** to store your changes
– or –
press **BACK** to discard your changes and return to single loop display.
4. Repeat from Step 1 for the cool output, if available.
5. Press **BACK** at any time to discard your changes and return to single loop display.

Autotuning a Loop

Autotuning is a process by which a controller determines the correct PID parameters for optimum control. This section explains how to autotune the CLS200.

Prerequisites

Before autotuning the controller, it must be installed with control and sensor circuitry and the thermal load in place.

It must be safe to operate the thermal system, and the approximate desired operating temperature (setpoint) must be known.

The technician or engineer performing the autotune should know how to use the controller front panel or MMI software interface (e.g., AnaWin or Anasoft) to do the following:

1. Select a loop to operate and monitor.
2. Set a loop's setpoint.
3. Change a loop's control status (**MAN**, **TUNE**, **AUTO**).
4. Read and change the controller's global and loop setup parameters.

Background

Autotuning is performed at the maximum allowed output. If you have set an output limit, autotuning occurs at that value. Otherwise, the control output is set to 100% during the autotune. Only the heat output (output 1) of a loop may be autotuned.

The PID constants are calculated according to process's response to the output. The loop need not reach or cross setpoint to successfully determine the PID parameters. While autotuning the controller looks at the delay between when power is applied and when the system responds in order to determine the proportional band (PB). The controller then looks for the slope of the rising temperature to become constant in order to determine the integral term (TI). The derivative term (TD) is derived mathematically from the TI.

When the controller has finished autotuning, the loop's control status switches to **AUTO**. If the process reaches 75% of the setpoint or the autotuning time exceeds ten minutes, the controller switches to **AUTO** and applies the PID constants it has calculated up to that point.

The Watlow Anafaze autotune is started at ambient temperature or at a temperature above ambient. However, the temperature must be stable and there must be sufficient time for the controller to determine the new PID parameters.

Performing an Autotune

NOTE!

A loop must be stable at a temperature well below the setpoint in order to successfully autotune. The controller will not complete tuning if the temperature exceeds 75% of setpoint before the new parameters are found.

The following procedure explains how to autotune a loop:

1. Select the single loop display of the loop to be tuned.

2. Ensure the loop's process variable is stable and the loop is in **MAN** control status.
3. Set the setpoint to a value as near the normal operating temperature as is safe for the system.



WARNING! *During autotuning, the controller will set the output to 100% until the process variable rises near the setpoint. Set the setpoint within the safe operating limits of your system.*

4. Use the three-key sequence (**ENTER**, **ALARM ACK**, **CHNG SP**) to access the setup menus. In the **SETUP LOOP INPUT** menu, locate the **INPUT FILTER** parameter. Note the setting and then change it to 0 **SCANS**.
5. Press the **BACK** key until the single loop display appears.
6. Press the **MAN/AUTO** key.
7. Press the **NO** key to toggle to the **TUNE** mode.
8. Press the **ENTER** key to begin tuning the loop. **TUNE** flashes throughout the tuning process. When tuning is completed the control status indicator changes to **AUTO**.
9. Adjust the setpoint to the desired temperature.
10. Restore the **INPUT FILTER** parameter to its original value.

Using Alarms

The CLS200 has three main types of alarms:

- Failed sensor alarms
- Process alarms
- System alarms

Alarm Delay

You can set the controller to delay normal alarm detection and alarm reporting. There are two kinds of alarm delay:

- Start-up alarm delay delays process alarms (but not failed sensor alarms) for all loops for a time period you set at the **STARTUP ALARM DELAY** parameter in the **SETUP GLOBAL PARAMETERS** menu.
- Loop alarm delay delays failed sensor alarms and process alarms for one loop until the alarm condition is continuously present for longer than the loop alarm delay time you set.

Failed sensor alarms are affected by the loop alarm delay even during the start-up alarm delay time period.

Failed Sensor Alarms

Failed sensor alarms alert you if one of the following conditions occurs:

- Thermocouple open
- Thermocouple shorted (must be enabled)
- Thermocouple reversed (must be enabled)
- RTD open positive input or open negative input
- RTD short between the positive and negative inputs

What Happens if a Failed Sensor Alarm Occurs?

If a failed sensor alarm occurs:

- The controller switches to manual mode at the output power indicated by the `SENSOR FAIL HT OUTPUT` and `SENSOR FAIL CL OUTPUT` parameters in the `SETUP LOOP OUTPUTS` menu. (The output power may be different for a thermocouple open alarm; see Thermocouple Open Alarm on page 65.)
- The controller displays an alarm code and alarm message on the display. See Alarm Displays on page 58.
- The global alarm output is activated.

Thermocouple Open Alarm

The thermocouple open alarm occurs if the controller detects a break in a thermocouple or its leads.

If a thermocouple open alarm occurs, the controller switches to manual mode. The output level is determined as follows:

- If the `HEAT/COOL T/C BRK OUT` parameter in the `SETUP LOOP OUTPUTS` menu is set to **ON**, then the controller sets the output power to an average of the recent output.
- If the `HEAT/COOL T/C BRK OUT AVG` parameter is set to **OFF**, then the controller sets the output to the level indicated by the `SENSOR FAIL HT/CL OUTPUT` parameter in the `SETUP LOOP OUTPUTS` menu.

Thermocouple Reversed Alarm

The thermocouple reversed alarm occurs if the temperature goes in the opposite direction and to the opposite side of ambient temperature than expected—for example, a loop is heating and the measured temperature drops below the ambient temperature.

The thermocouple reversed alarm is disabled by default. To enable this alarm, set the `REVERSED T/C DETECT` parameter in the `SETUP LOOP INPUTS` menu to **ON**. It may be disabled if false alarms occur in your application.

Thermocouple Short Alarm

The thermocouple short alarm occurs if the process power is on and the temperature does not rise or fall as expected. To enable the thermocouple short alarm, you must do the following:

- Choose a digital input for the PROCESS POWER DIGIN parameter in the SETUP GLOBAL PARAMETERS menu.
- Connect the digital input to a device that connects the input to controller common when the process power is on.

RTD Open or RTD Shorted Alarm

The RTD open alarm occurs if the controller detects that the positive or negative RTD lead is broken or disconnected.

The RTD shorted alarm occurs if the controller detects that the positive and negative RTD leads are shorted.

You do not have to set any parameters for the RTD alarms.

Restore Automatic Control After a Sensor Failure

This feature returns a loop to automatic control after a failed sensor is repaired. To enable this feature:

- Choose a digital input for the RESTORE PID DIGIN parameter in the SETUP LOOP CONTROL PARAMS menu.
- Connect the digital input to the dc common terminal on the controller.

Process Alarms

The CLS200 has four process alarms, each of which you can configure separately for each loop:

- Low process alarm
- High process alarm
- Low deviation alarm
- High deviation alarm

Setting Up Alarms

To set up an alarm:

- Set the alarm setpoint (limit)
- Set the alarm type
- Choose an output, if desired
- Set the alarm deadband
- Set an alarm delay, if desired

The setpoints, deviation alarm values, and deadband all use the same decimal format as the loop's process variable.

What Happens If a Process Alarm Occurs?

If a process alarm occurs, the controller does the following:

- Shows an alarm code on the display. (See Alarm Displays on page 58.)
- Activates the global alarm output. (See Global Alarm on page 68.)
- Activates the digital output that is assigned to the process alarm (if applicable). The digital output remains active until the process variable returns within the corresponding limit and deadband. The alarm output deactivates when the process returns to normal.

Process Alarm Outputs

Any digital output that is not used as a control output can be assigned to one or more process alarms.

The controller activates the output if any alarm assigned to the output is active. Process alarm outputs are non-latching—that is, the output is deactivated when the process returns to normal, whether or not the alarm has been acknowledged.

Specify the active state of process alarm outputs at the DIG OUT POLARITY ON ALARM setting in the SETUP GLOBAL PARAMETERS.

Alarm Type: Control or Alarm

You can configure each process alarm as either a control or alarm.

- Alarm configuration provides traditional alarm functionality: The operator must acknowledge the alarm message on the controller display, a latching global alarm is activated, and the alarm can activate a user-specified non-latching alarm output.
- Control configuration provides on/off control output using the alarm setpoints. For example, you could configure a high deviation alarm to turn on a fan. The alarm activates a user-specified non-latching output. Alarm messages do not have to be acknowledged, and the global alarm is not activated.

High and Low Process Alarms

A high process alarm occurs if the process variable rises above a user-specified value. A low process alarm occurs if the process variable drops below a separate user-specified value. See Figure 3.9.

Enter the alarm high and low process setpoints at the HI PROC ALARM SETPT and LO PROC ALARM SETPT parameters in the SETUP LOOP ALARMS menu.

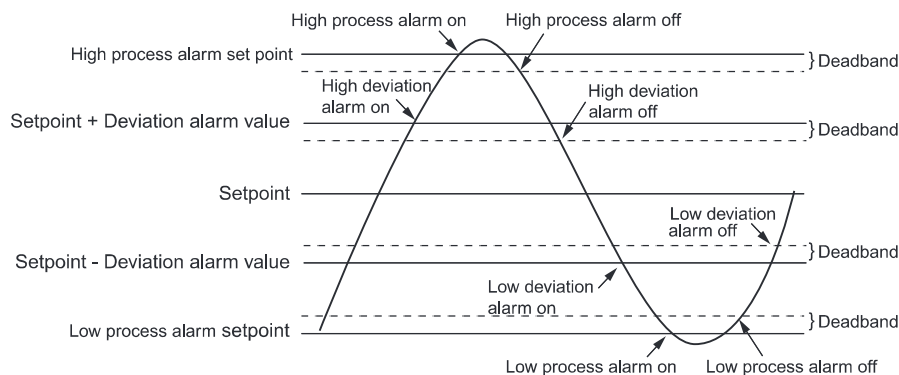


Figure 3.9 Activation and Deactivation of Process Alarms

Deviation Alarms

A deviation alarm occurs if the process deviates from setpoint by more than a user-specified amount. (See Figure 3.9.) Set the deviation with the `DEV ALARM VALUE` parameter in the `SETUP LOOP ALARMS` menu.

Upon power up or when the setpoint changes, the behavior of the deviation alarms depends upon the alarm function:

- If the alarm type parameter is set to **ALARM**, then deviation alarms do not activate until the after the process variable has first come within the deviation alarm band. This prevents nuisance alarms.
- If the alarm type parameter is set to **CONTROL**, then the deviation output switches on whenever the setpoint and process variable differ by more than the deviation setting, regardless of whether the process variable has been within the deviation band. This allows you to use boost control upon power up and setpoint changes.

Global Alarm

The CLS200 comes equipped with a global alarm output. The global output is activated if one or more of the following conditions occurs:

- A system alarm occurs, or
- A failed sensor alarm occurs and is unacknowledged, or

- A process alarm occurs and is unacknowledged. The global alarm occurs only if the alarm type is set to ALARM in the SETUP LOOP ALARMS menu. (The global alarm does not occur if the alarm function is set to CONTROL.)

The global alarm output stays active until all alarms have been acknowledged.

When the global alarm output is active, it conducts current to the controller's dc common. When the global alarm output is not active, it does not conduct current.

NOTE! *You cannot configure any parameters for the global alarm. The active state of the global alarm output is NOT affected by the DIG OUT POLARITY ON ALARM polarity parameter in the SETUP GLOBAL PARAMETERS menu.*

Ramp/Soak

If you have a controller without the Ramp/Soak option, pressing the **RAMP/SOAK** key has no effect.

If you have a controller with this option installed, see Chapter 7, Ramp/ Soak.

4

Setup

The setup menus let you change detailed configuration information. This section describes how to set up the controller from menus in the controller firmware. The following information is included in this chapter:

- Accessing the setup menus
- Changing parameter settings
- Description of controller parameters

If you have not set up a CLS200 series controller before, or if you do not know what values to enter, please read Chapter 8, Tuning and Control, which contains PID tuning constants and useful starting values.

How to Access the Setup Menus

Use the three-key sequence to enter the setup menus:

1. Select the single loop display for the loop you wish to edit.
2. Press **ENTER** then **ALARM ACK** then **CHNG SP** to access the setup menus. Do not press these keys at the same time; press them one at a time.



3. The first setup menu appears.

To prevent unauthorized personnel from accessing setup parameters, the controller reverts to the single loop display if you do not press any keys for three minutes.

How to Change a Parameter

To change a parameter, first select the appropriate menu, then the parameter.

When you enter the setup menus, the first menu is **SETUP GLOBAL PARAMETERS**. Refer to Figure 4.1 for a listing of all top level menus and their related parameters.

1. Select the single loop display for the loop to set up.
2. Enter the three-key sequence. (See *How to Access the Setup Menus* on page 71.) The first menu is displayed: **SETUP GLOBAL PARAMETERS**.
3. To select the appropriate menu:
 - Press **NO** to move from one menu to the next. The menus wrap around; pressing **NO** continuously advances through the top level menus.
 - Press **YES** to enter the displayed menu.
4. To select the parameter to be edited:
 - Press **NO** to advance from one parameter to the next. Parameters do not wrap around.
 - Press **YES** to edit the displayed parameter.
5. To edit the parameter setting:
 - Press up or down (**YES** or **NO**) to scroll to the value or choice you want to select.
 - Press **ENTER** to accept the change
 - or -
 - press **BACK** to cancel the change without saving.
6. Select another parameter and repeat from step 4, or press **BACK** to return to the top level menu.
7. Select another menu and repeat from step 3,
 - or -
 - press **BACK** to exit the setup menus.

The following sections tell more about the parameters for each of the six top level menus. Each display illustration contains the default value for that specific parameter. If you have a controller with the enhanced features option, there will be additional menus. (See Chapter 6, *Enhanced Features*.)

Figure 4.1 shows the top level menus accessible from the single loop display.

SETUP GLOBAL PARAMETERS?	SETUP LOOP INPUT?	SETUP LOOP CONTROL PARAMS?	SETUP LOOP OUTPUTS?	SETUP LOOP ALARMS?	MANUAL I/O TEST
LOAD SETUP FROM JOB?	INPUT TYPE?	HEAT CONTROL PB?	HEAT CONTROL OUTPUT?	HI PROC ALARM SETPT?	DIGITAL INPUTS
SAVE SETUP TO JOB?	LOOP NAME?	HEAT CONTROL TI?	HEAT OUTPUT TYPE?	HI PROC ALARM TYPE?	TEST DIGITAL OUTPUT?
JOB SELECT JOB INPUTS?	INPUT UNITS?	HEAT CONTROL TD?	HEAT OUTPUT CYCLE TIME? (TP)	HI PROC ALARM OUTPUT?	DIGITAL OUTPUT NUMBER XX
JOB SEL DIG INS ACTIVE?	INPUT READING OFFSET	HEAT CONTROL FILTER?	SDAC PARAMETERS (SDAC)	DEV ALARM VALUE?	KEYPAD TEST
OUTPUT OVERRIDE DIG INPUT?	REVERSED T/C DETECT?	COOL CONTROL PB?	HEAT OUTPUT ACTION?	HI DEV ALARM TYPE?	DISPLAY TEST
OVERRIDE DIG IN ACTIVE?	INPUT PULSE SAMPLE TIME? (Pulse input)	COOL CONTROL TI?	HEAT OUTPUT LIMIT?	HI DEV ALARM OUTPUT?	
STARTUP ALARM DELAY?	DISP FORMAT? (Linear and pulse)	COOL CONTROL TD?	HEAT OUTPUT LIMIT TIME?	LO DEV ALARM TYPE?	
RAMP/SOAK TIME BASE? (Ramp/soak)	INPUT SCALING HI PV? (Linear and pulse)	COOL CONTROL FILTER?	SENSOR FAIL HT OUTPUT?	LO DEV ALARM OUTPUT?	
KEYBOARD LOCK STATUS?	INPUT SCALING HI RDG? (Linear and pulse)	SPREAD?	HEAT T/C BRK OUT AVG?	LO PROC ALARM SETPT?	
POWER UP OUTPUT STATUS?	INPUT SCALING LO PV? (Linear and pulse)	RESTORE PID DIGIN?	HEAT OUTPUT?	LO PROC ALARM TYPE?	
PROCESS POWER DIGIN?	INPUT SCALING LO RDG? (Linear and pulse)		COOL CONTROL OUTPUT?	LO PROC ALARM OUTPUT?	
CONTROLLER ADDRESS?	INPUT FILTER?		COOL OUTPUT TYPE?	ALARM DEADBAND?	
COMMUNICATIONS BAUD RATE?			COOL OUTPUT CYCLE TIME? (TP)	ALARM DELAY?	
COMMUNICATIONS PROTOCOL?			SDAC PARAMETERS (SDAC)		
COMMUNICATIONS ERR CHECK?			COOL OUTPUT ACTION?		
AC LINE FREQ?			COOL OUTPUT LIMIT?		
DIG OUT POLARITY ON ALARM?			COOL OUTPUT LIMIT TIME?		
CLS 200 [FIRMWARE INFO]			SENSOR FAIL CL OUTPUT?		
			COOL T/C BRK OUT AVG?		
			COOL OUTPUT?		

If the enhanced features option or ramp/soak feature is installed, refer to Chapter 6, Enhanced Features, or Chapter 7, Ramp/ Soak for additional menus.

Figure 4.1 CLS200 Menu Tree

Setup Global Parameters Menu




Table 4.1 shows the parameters available in this menu.

Table 4.1 Global Parameters

Parameter	Default Value
LOAD SETUP FROM JOB?	1
SAVE SETUP TO JOB?	1
JOB SELECT DIG INPUTS?	NONE
JOB SEL DIG INS ACTIVE?	LOW
OUTPUT OVERRIDE DIG INPUT?	NONE
OVERRIDE DIG IN ACTIVE?	LOW
STARTUP ALARM DELAY?	0 MINS
RAMP/SOAK TIME BASE?*	HOURS/MINS
KEYBOARD LOCK STATUS?	OFF
POWER UP OUTPUT STATUS?	OFF
PROCESS POWER DIGIN?	NONE
CONTROLLER ADDRESS?	1
COMMUNICATIONS BAUD RATE?	9600
COMMUNICATIONS PROTOCOL?	ANA
COMMUNICATIONS ERR CHECK?	BCC
AC LINE FREQ?	60 HERTZ
DIG OUT POLARITY ON ALARM?	LOW
CLS200 [model no., fi mware rev.]	

* The RAMP/SOAK TIME BASE parameter appears only if the ramp/soak feature is installed.

Load Setup From Job

NOTE! *Current settings are overwritten when you select a job from memory. Save your current settings to another job number if you want to keep them.*

Load any one of eight jobs saved in battery-backed RAM.

LOOP	PROCESS	UNITS
LOAD SETUP		
FROM JOB? 1		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 8

The following parameters are loaded for each loop as part of a job:

- PID constants, filter settings, setpoints and spread values.
- Loop control status (automatic or manual) and output values (if the loop is in manual control)
- Alarm function (off, alarm control) setpoints, high/low process setpoints, high/low deviation setpoints and deadband settings, and loop alarm delay.

If you have enabled the remote job select function (see Job Select Digital Inputs on page 76), you will not be able to load a job. If you try, you will see this message:

LOOP	PROCESS	UNITS
CANNOT LOAD JOB		
REMOTE SELECT ON		
ALARM	SETPOINT	STATUS OUT%

Save Setup to Job

Save the job information for every loop to one of eight jobs in the battery-backed RAM.

LOOP	PROCESS	UNITS
SAVE SETUP		
TO JOB? 1		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 8

If you have enabled the remote job select function (see Job Select Digital Inputs on page 76), you will not be able to save a job. If you try, you will see this message:

LOOP	PROCESS	UNITS
CANNOT SAVE JOB		
REMOTE SELECT ON		
ALARM	SETPOINT	STATUS OUT%

Job Select Digital Inputs

Set the number of job select inputs. The controller uses these inputs as a binary code that specifies the job number to run. The number of inputs you choose in this parameter controls the number of jobs you can select remotely.

If you select NONE, digital inputs do not affect job selection. Jobs may be loaded and saved using the LOAD SETUP FROM JOB and SAVE SETUP TO JOB parameters.

LOOP	PROCESS	UNITS
JOB SELECT		
DIG INPUTS? NONE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1, 2 or 3 inputs, or NONE. These choices have the following effect:

Table 4.2 Job Select Inputs

Setting	Enables
1	Jobs 1-2
2	Jobs 1-4
3	Jobs 1-8
NONE	Disables remote job selection

Table 4.3 shows which input states select which jobs. When nothing is connected, the inputs are all false and job 1 is selected.

Table 4.3 Job Selected for Various Input States

Digital Input 3	Digital Input 2	Digital Input 1	Job No.
F	F	F	1
F	F	T	2
F	T	F	3
F	T	T	4
T	F	F	5
T	F	T	6
T	T	F	7
T	T	T	8

Job Select Digital Inputs Active

Specify which state is considered “true” for the digital inputs used for job selection. Default is LOW, meaning that an input must be pulled low to be considered true. If HIGH is selected, an input will be considered true unless it is pulled low.

LOOP	PROCESS	UNITS
JOB SEL DIG INS		
ACTIVE ? LOW		
ALARM	SETPOINT	STATUS OUT%

Selectable values: HIGH or LOW.

Changing this setting has the effect of reversing the order of the jobs in Table 4.3.

Output Override Digital Input

To enable the output override feature, select a digital input. When the specified input is activated, the controller sets all loops to manual mode at the output levels specified at the SENSOR FAIL HT OUTPUT and SENSOR FAIL CL OUTPUT parameters in the SETUP LOOP OUTPUTS menu.

LOOP	PROCESS	UNITS
OUTPUT OVERRIDE		
DIG INPUT? NONE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: NONE or input number 1 to 8.

Use the next parameter, OVERRIDE DIG IN ACTIVE, to set the signal state that activates the output override feature.



WARNING! *Do not rely solely on the output override feature to shut down your process. Install external safety devices or over-temperature devices for emergency shutdowns.*

Override Digital Input Active

Specify whether a low or high signal activates the output override feature (see OUTPUT OVERRIDE DIG INPUT above).

LOOP	PROCESS	UNITS
OVERRIDE DIG IN		
ACTIVE ? LOW		
ALARM	SETPOINT	STATUS OUT%

Selectable values: HIGH or LOW.

You can set the input to be active when low or active when high. When the input selected for OUTPUT OVERRIDE DIG INPUT changes to the specified state, all the loop's outputs are set to their sensor fail levels.

Startup Alarm Delay

Set a startup delay for process and deviation alarms for all loops. The controller does not report these alarm conditions for the specified number of minutes after the controller powers up. This feature does not delay failed sensor alarms.

LOOP	PROCESS	UNITS
STARTUP ALARM		
DELAY ?	0	MINS
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 60 minutes.

Keyboard Lock Status

Set this parameter to ON to disable the **CHNG SP**, **MAN/AUTO**, and **RAMP/SOAK** keys on the keypad. If the keys are disabled, pressing them has no effect. If you want to use these functions, turn off the keyboard lock.

LOOP	PROCESS	UNITS
KEYBOARD LOCK		
STATUS ?	OFF	
ALARM	SETPOINT	STATUS OUT%

Selectable values: ON or OFF.

Power Up Output Status



WARNING! *Do not set the controller to start from memory if it may be unsafe for your process to have outputs on upon power-up.*

Set the initial power-up state of the control outputs. If you choose OFF, all loops are initially set to manual mode at 0% output. If you choose MEMORY, the loops are restored to the control status and output value prior to powering down.

See In Case of a Power Failure on page 152 for information about how this feature affects ramp/soak profiles.

LOOP	PROCESS	UNITS
POWER UP OUTPUT		
STATUS ? OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: OFF or MEMORY.

Process Power Digital Input

To enable the thermocouple short detection feature, select a digital input (1 to 8). Connect the specified input to a device that pulls the input low when the process power is on. A short is indicated when the process power is on and the temperature does not rise as expected.

If the controller determines that there is a thermocouple short, it sets the loop to manual mode at the power level set for the SENSOR FAIL HT OUTPUT or SENSOR FAIL CL OUTPUT parameter in the SETUP LOOP OUTPUTS menu.

LOOP	PROCESS	UNITS
PROCESS POWER		
DIGIN ? NONE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 8, or NONE.

Controller Address

Set the communications address for the controller. On an EIA/TIA-485 communication loop, each controller must have a unique address. Begin with address 1 for the first controller and assign each subsequent controller the next higher address.

LOOP	PROCESS	UNITS
CONTROLLER		
ADDRESS ? 1		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 247. When using one controller with Anasoft, select address 1. When using multiple controllers with Anasoft, use consecutive addresses from 1 to 16 only.

Communications Baud Rate

Set the communications baud rate.

LOOP	PROCESS	UNITS
COMMUNICATIONS		
BAUD RATE ? 9600		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 9600, 2400 or 19200.

NOTE!

Set the baud rate to the same speed in both the controller and the HMI software or panel.

Communications Protocol

Set the communications protocol. Choose the correct protocol for the software or device with which the controller will communicate. You must switch power to the controller off, then back on, to make a change to this parameter take effect.

LOOP	PROCESS	UNITS
COMMUNICATIONS		
PROTOCOL ? ANA		
ALARM	SETPOINT	STATUS OUT%

Selectable values: MOD (Modbus RTU), ANA (Anafaze), AB (Allen Bradley).

Communications Error Checking

If you selected the ANA or AB communications protocol, set the data check algorithm for CLS200 communications.

CRC (Cyclic Redundancy Check) is a more secure error checking algorithm than BCC, but it requires more calculation time and slows communications. BCC (Block Check Character) ensures a high degree of communications integrity. We recommend BCC unless your application requires CRC.

LOOP	PROCESS	UNITS
COMMUNICATIONS		
ERR CHECK ? BCC		
ALARM	SETPOINT	STATUS OUT%

Selectable values: BCC or CRC.

NOTE!

If you are using Anasoft, configure it with ANAINSTL for the same error checking method and baud rate set in the controller.

AC Line Frequency

Specify the ac line frequency. Since the controller reduces the effect of power line noise on the analog measurement by integrating the signal over the period of the ac line frequency, the controller must know the frequency of power in use. You must switch power to the controller off, then back on, to make a change to this parameter take effect.

LOOP

PROCESS

UNITS

AC LINE FREQ ?

60 HERTZ

ALARM

SETPOINT

STATUS

OUT%

Selectable values: 50 or 60 Hz.

Digital Output Polarity on Alarm

Set the polarity of all digital outputs used for alarms. If LOW is selected, if an alarm occurs the outputs sink to analog common. If HIGH is selected, the outputs sink to common when no alarm is active and go high when an alarm occurs.

LOOP

PROCESS

UNITS

DIG OUT POLARITY ON

ALARM ? LOW

ALARM

SETPOINT

STATUS

OUT%

Selectable values: HIGH or LOW.

This parameter does not affect the Global Alarm output or the Watchdog Alarm output.

EPROM Information

The display shows the controller type, firmware options, the firmware version and the EPROM checksum. Table 4.4 lists the available firmware options.

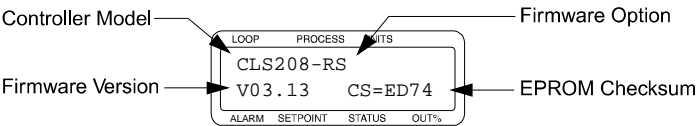


Table 4.4 *Firmware Option Codes*

Firmware Option	Description
(none)	Standard Firmware
-EF	Enhanced Features Option
-RS	Ramp/Soak Option
-EX	Extruder Option

NOTE! *If the EPROM information does not match this description, the EPROM probably contains a custom program. Custom programs may not work as described in this manual. If that is the case, contact your dealer for more information about the firmware.*

Setup Loop Input Menu

LOOP	PROCESS	UNITS
SETUP LOOP 01		
INPUT ?		
ALARM	SETPOINT	STATUS OUT%

The SETUP LOOP INPUT menu includes parameters related to the loop input:

- Input type
- Input units
- Input scaling and calibration
- Input filtering

Table 4.5 Setup Loop Input

Parameter	Default Value
INPUT TYPE?	J
LOOP NAME?	01
INPUT UNITS?	°F
INPUT READING OFFSET?	0° F
REVERSED T/C DETECT? ³	OFF
INPUT PULSE SAMPLE TIME? ¹	1
DISP FORMAT? ²	-999 TO 3000
INPUT SCALING HI PV? ²	1000
INPUT SCALING HI RDG? ²	100.0% FS
INPUT SCALING LO PV? ²	0
INPUT SCALING LO RDG? ²	0.0% FS
INPUT FILTER?	3 SCANS

¹ This parameter is available only for the pulse loop (loop 5 on CLS204, loop 9 on CLS208, loop 17 on CLS216).

² These parameters are available only if LINEAR is selected for INPUT TYPE.

³ These parameter is available only if INPUT TYPE is set to one of the thermocouple or RTD options.

Input Type

Specify the type of input sensor used on this loop:

- Thermocouple type J, K, T, S, R, B or E.
- RTD 1 or RTD 2.
- Linear input.
- Skip (an input type available for unused loops).
Alarms are not detected, and the scanning display does not show loops that are set to SKIP.
- Pulse input (available only for loop 5 on CLS204, loop 9 on CLS208 or loop 17 on CLS216).

LOOP	PROCESS	UNITS
01	INPUT	
TYPE ? J T/C		
ALARM	SETPOINT	STATUS OUT%

Selectable values: See Table 4.6.

Table 4.6 *CLS200 Input Types and Ranges*

Input Type	Input Range
J T/C	-350 to +1,400° F (-212 to +760° C)
K T/C	-450 to +2,500° F (-268 to +1,371° C)
T T/C	-450 to +750° F (-268 to +399° C)
S T/C	0 to +3,200° F (-18 to +1,760° C)
R T/C	0 to +3,210° F (-18 to +1,766° C)
B T/C	+150 to 3,200° F (+66 to 1,760° C)
E T/C	+150 to 3,200° F (+66 to 1,760° C)
RTD1	-148.0 to +572.0° F (-100.0 to +275.0° C)
RTD2	-184 to +1,544° F (-120 to +840° C)
PULSE	0 to 2 kHz
SKIP	Loop not used.
LINEAR	See <i>Linear Scaling Parameters</i> on page 86.

Loop Name

Assign a two-character name to the loop. This name is shown on the single loop display in place of the loop number.

LOOP	PROCESS	UNITS
01	LOOP	
NAME ? 01		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 9, A to Z, %, /, ° (degree symbol).

Input Units

For loops with temperature sensor input types, choose a temperature scale: Fahrenheit or Celsius. For a linear or pulse loop, choose a three-character description of the loop's engineering units.

LOOP	PROCESS	UNITS
01	INPUT	
UNITS ? °F		
ALARM	SETPOINT	STATUS OUT%

Selectable values: The table below shows the character set for input units.

Table 4.7 Input Character Sets

Input	Character Sets for Units
Thermocouple or RTD	°F or °C
Linear or Pulse	0 to 9, A to Z, %, /, °, space

Input Reading Offset

If the input type is a thermocouple or RTD, specify the offset to correct for signal inaccuracy at a given point. For example, at temperatures below 400° F, a type J thermocouple may be inaccurate or "offset" by several degrees. Use an independent thermocouple or your own calibration equipment to find the offset for your equipment.

A positive value increases the reading and a negative value decreases it.

LOOP	PROCESS	UNITS
01	INPUT	READING
OFFSET ? 0 °F		
ALARM	SETPOINT	STATUS OUT%

Selectable values: See Table 4.8.

Table 4.8 Input Reading Offset

Type of Sensor	Offset Range	
	°F	°C
RTD2 J K T	-300 to +300	-300 to +300
RTD1	-300.0 to +300.0	-300.0 to +300.0
B S	-300 to +76	-300 to +300
R	-300 to +66	-300 to +300

Reversed T/C Detection

Set this parameter to ON to enable polarity checking for thermocouples. If a reversed thermocouple is detected, the controller sets the loop to manual control at the SENSOR FAIL HT OUTPUT or SENSOR FAIL CL OUTPUT power level and displays the alarm.

LOOP	PROCESS	UNITS
01	REVERSED T/C	
DETECT ?	OFF	
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: ON or OFF.

Input Pulse Sample Time

You can connect a digital pulse signal of up to 2 kHz to the pulse input. Use this parameter to set the time over which pulses are counted. The controller counts pulses for the amount of time you set here before calculating the frequency. The controller scales this frequency and uses the resulting value as the process variable for the pulse loop. Generally, the longer the pulse sample time, the more stable the process variable, but the slower the response of the pulse loop.

This parameter is available only for loop 5 on the CLS204, loop 9 on the CLS208 or loop 17 on the CLS216.

LOOP	PROCESS	UNITS
17	INPUT PULSE	
SAMPLE TIME ?	1S	
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: 1 to 20 seconds.

Linear Scaling Parameters

The following parameters are only available if the input type is **LINEAR** or **PULSE**. These parameters let you scale the raw input readings (in millivolts or Hertz) to the engineering units of the process variable.

For linear inputs, the input reading is in percent (0 to 100%) representing the 0 to 60mV input range of the controller. For pulse inputs, the input reading is in Hertz (cycles per second.)

The scaling function is defined by two points on a conversion line. This line relates the process variable (PV) to the input signal. The engineering units of the process variable can be any units—the graph in Figure 4.2 shows PSI as an example.

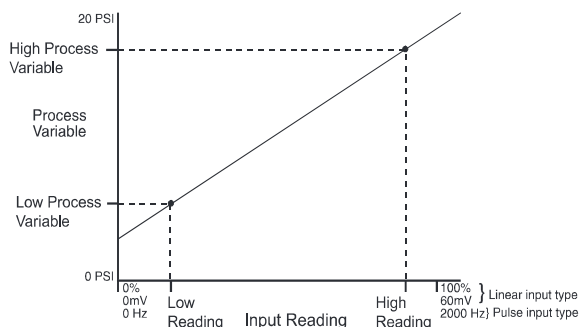


Figure 4.2 Two Points Determine Process Variable Conversion

Before you enter the values determining the two points for the conversion line, you must choose an appropriate display format. The controller has six characters available for process display; select the setting with the desired number of decimal places. Use a display format that matches the range of the process variable and resolution of the sensor. The display format you choose is used for the process variable setpoint, alarms limits, deadband, spread and proportional band.

The process variable range for the scaled input is between the process variable values that correspond to the 0% and 100% input readings. For the pulse input, it is between the 0 Hz and 2000 Hz readings. The process variable range defines the limits for the setpoint and alarms. See Figure 4.3.

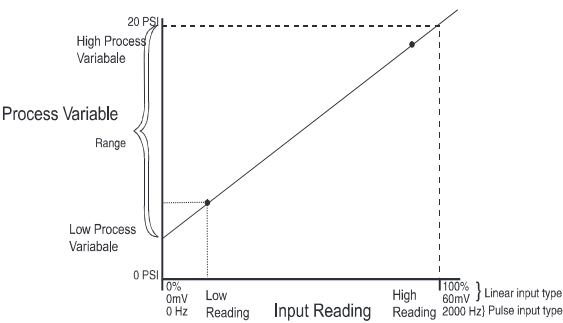


Figure 4.3 *Process Variable Limited by Input Reading Range*

Display Format

Select a display format for a linear or pulse input. Choose a format appropriate for the input range and sensor accuracy.

LOOP PROCESS UNITS

01 DISP FORMAT ?

-999 TO 3000

ALARM SETPOINT STATUS OUT%

Selectable values: The controller has several available display formats, as shown in Table 4.9. The table also shows the maximum and minimum process variable for each display format.

Table 4.9 *Display Formats*

Display Format	Maximum Process Variable	Minimum Process Variable
-9999 TO +30000	30,000	-9,999
-999 TO +3000	3,000	-999
-999.9 TO +3000.0	3,000.0	-999.9
-99.99 TO +300.00	300.00	-99.99
-9.999 TO +30.000	30.000	-9.999
-.9999 TO +3.0000	3.0000	-0.9999

High Process Variable

Set a high process variable for input scaling purposes. The high process variable and the high reading (HI RDG) together define one of the points on the linear scaling function's conversion line. Set HI PV to the value you want displayed when the signal is at the level set for the high reading (HI RDG).

LOOP	PROCESS	UNITS
01	INPUT	SCALING
HI PV	?	1000

ALARM	SETPOINT	STATUS	OUT%

Selectable values: Any value between the low process variable (LO PV) and the maximum process variable for the selected display format. See Table 4.9.

High Reading

Enter the input signal level that corresponds to the high process variable (HI PV) you entered in the previous parameter.

LOOP	PROCESS	UNITS
01	INPUT	SCALING
HI RDG?		100.0%FS

ALARM	SETPOINT	STATUS	OUT%

Selectable values: For linear inputs, any value between -99.9% and 999.9% of full scale, where 100% corresponds to 60mV and 0% corresponds to 0mV. For pulse inputs, any value between 0 and 2000 HZ. The high reading must be greater than the low reading (LO RDG).

Low Process Variable

Set a low process variable for input scaling purposes. The low process variable and the low reading (LO RDG) together define one of the points on the linear scaling function's conversion line. Set LO PV to the value you want displayed when the signal is at the level set for the low reading (LO RDG).

LOOP	PROCESS	UNITS
01	INPUT	SCALING
LO PV	?	0

ALARM	SETPOINT	STATUS	OUT%

Selectable values: Any value between the minimum process variable and the high process variable for the selected display format. See Table 4.9 on page 87.

Low Reading

Enter the input signal level that corresponds to the low process variable (LO PV) you entered in the previous parameter.

LOOP	PROCESS	UNITS
01	INPUT	SCALING
LO	RDG?	0.0%FS
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: For linear inputs, any value between -99.9% and 999.9% percent of full scale, where 100% corresponds to 60mV and 0% corresponds to 0mV. For pulse inputs, any value between 0 and 2000 HZ. The low reading must be less than the high reading (HI RDG).

Input Filter

The controller has two types of input filtering:

- The rejection filter ignores sensor readings outside the acceptance band when subsequent readings are within the band. For temperature sensors, the band is $\pm 5^{\circ}$ about the last accepted reading. For linear inputs the band is $\pm 0.5\%$ of the input range. This filter is not adjustable.
- A simulated resistor-capacitor (RC) filter damps the input response if inputs change unrealistically or change faster than the system can respond. If the input filter is enabled, the process variable responds to a step change by going to 2/3 of the actual value within the number of scans you set.

LOOP	PROCESS	UNITS
01	INPUT	FILTER?
3	SCANS	
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: 0 to 255 scans. 0 disables the filter.

Setup Loop Control Parameters Menu

Use the **SETUP LOOP CONTROL PARAMS** menu to adjust heat and cool control parameters, including:

- Proportional band (PB, or gain), integral (TI or reset), and derivative (TD, or rate) settings
- Output filter
- Spread between heat and cool outputs

The controller has separate PID and filter settings for heat and cool outputs. The screens used to set these parameters are nearly identical. In this section, only the heat screens are shown and explained. The heat and cool parameters appear only if the corresponding output is enabled.

See **Setup Loop Outputs Menu** on page 93 for help enabling and disabling heat and cool outputs.




Table 4.10 shows the parameters available in the **SETUP LOOP CONTROL PARAMS** menu.

Table 4.10 Setup Loop Control Parameters

Parameter	Default Value
HEAT CONTROL PB?	Depends upon the INPUT TYPE setting; 50 for J-type thermocouple.
HEAT CONTROL TI?	Depends upon the INPUT TYPE setting; 180 SEC/R for J-type thermocouple.
HEAT CONTROL TD?	0
HEAT CONTROL FILTER?	3
COOL CONTROL PB	50
COOL CONTROL TI?	Depends upon the INPUT TYPE setting; 60 SEC/R for J-type thermocouple.
COOL CONTROL TD?	Depends upon the INPUT TYPE setting; 0 SECONDS for J-type thermocouple.
COOL CONTROL FILTER?	3
SPREAD?	5
RESTORE PID DIGIN?	NONE

Heat or Cool Control PB

Set the proportional band (also known as gain). A larger value yields less proportional action for a given deviation from setpoint.

LOOP	PROCESS	UNITS
01	HEAT CONTROL	
PB	?	50
ALARM	SETPOINT	STATUS OUT%

Selectable values: Dependent upon sensor type.

The controller internally represents the proportional band (PB) as a gain value. When you edit the proportional band, you will see the values change in predefined steps; small steps for narrow proportional band values and large steps for wide proportional band values.

The controller calculates the default proportional band for each input type according to the following equation:

Default PB= $\frac{\text{High Range} - \text{Low Range}}{\text{Gain}}$

Heat or Cool Control TI

Set the integral term (also known as reset). A larger value yields less integral action.

LOOP	PROCESS	UNITS
01	HEAT CONTROL	
TI	?	180 SEC/R
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 (off) to 6000 seconds.

Heat or Cool Control TD

Set the derivative constant. A larger value yields greater derivative action.

LOOP	PROCESS	UNITS
01	HEAT CONTROL	
TD	?	0
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 255 seconds.

Heat or Cool Output Filter

Dampen the response of the heat or cool output. The output responds to a step change by going to approximately 2/3 of its final value within the number of scans you set here. A

larger value results in a slower, or more dampened, response to changes in the process variable.

LOOP	PROCESS	UNITS
01	HEAT CONTROL	
	FILTER ?	3
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 255. 0 disables the output filter.

Spread

For a loop using on/off control, the spread is the control hysteresis. This determines the difference between the point at which a heat output turns off as the temperature rises, and the point at which it turns back on as the temperature falls.

For a loop using PID control, the spread determines how far the process variable must be from the setpoint before the controller can switch from heating to cooling. A loop will not switch from heat to cool or vice versa unless the process variable deviates from setpoint by more than the spread.

When the loop is using PID control and the spread is set to 0, the PID calculation alone determines when the heat or cool output should be on.

LOOP	PROCESS	UNITS
01	SPREAD ?	
		5
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 255, 25.5, 2.55, .255, or .0255, depending upon the DISP FORMAT setting.

Restore PID Digital Input

To enable the sensor failure recovery feature, select a digital input at this parameter. If the specified input is held low when the sensor fails, the loop returns to automatic control after a failed sensor is corrected.

LOOP	PROCESS	UNITS
01	RESTORE PID	
	DIGIN ?	NONE
ALARM	SETPOINT	STATUS OUT%

Selectable range: NONE (disable the sensor failure recovery feature), 1 to 8.

Setup Loop Outputs Menu

Use the SETUP LOOP OUTPUTS menu to:

- Enable or disable outputs
- Set output type
- Set cycle time for time proportioning outputs
- Enter Serial DAC parameters (for Serial DAC outputs)
- Select control action
- Set output level limit and limit time
- Select sensor fail output (output override)
- Select a nonlinear output curve

LOOP	PROCESS	UNITS
SETUP LOOP 01		
OUTPUTS ?		

ALARM	SETPOINT	STATUS	OUT%

Table 4.11 shows the parameters available in the SETUP LOOP OUTPUTS menu. Both heat and cool outputs have the same parameters; only one of each parameter is shown.

Table 4.11 Setup Loop Outputs

Parameter	Default Value
HEAT CONTROL OUTPUT?	ENABLED
HEAT OUTPUT TYPE?	TP
HEAT OUTPUT CYCLE TIME?	10S
SDAC MODE?*	VOLTAGE
SDAC LO VALUE?*	0.00 VDC
SDAC HI VALUE?*	10.00 VDC
HEAT OUTPUT ACTION?	REVERSE
HEAT OUTPUT LIMIT?	100%
HEAT OUTPUT LIMIT TIME?	CONT
SENSOR FAIL HT OUTPUT?	0%
HEAT T/C BRK OUT AVG?	OFF
HEAT OUTPUT?	LINEAR
COOL CONTROL OUTPUT?	DISABLED

* The SDAC parameters are available only if you select SDAC as the output type. Use these parameters to configure the Serial DAC signal output.

Enable or Disable Heat or Cool Outputs

Enable or disable the heat or cool output for the loop. If you want the loop to have a control output, you must enable at least one output. You can also disable a heat or cool control output and use the output for something else, such as an alarm.

LOOP	PROCESS	UNITS
01	HEAT CONTROL	
	OUTPUT ?	ENABLED
ALARM	SETPOINT	STATUS OUT%

Selectable values: ENABLED or DISABLED.

Heat or Cool Output Type

Select the output type.

LOOP	PROCESS	UNITS
01	HEAT OUTPUT	
	TYPE ?	TP
ALARM	SETPOINT	STATUS OUT%

Selectable values: TP, DZC, SDAC, ON/OFF, 3P DZC. See Table 4.12 for a description of the output types.

NOTE! *The controller assigns digital output 34 as a clock line for the Serial DAC. You will not be able to assign another function to output 34 if any loop's output is set to SDAC.*

Table 4.12 Heat / Cool Output Types

Display Code	Output Type	Definition
TP	Time Proportioning	Percent output converted to a percent duty cycle over the user-selected, fixed time base.
DZC	Distributed Zero Crossing	Output on/off state calculated for every ac line cycle. Use with Dual DAC.
SDAC	Serial DAC	Use with Serial DAC.
ON/OFF	On/Off	Output either full on or full off.
3P DZC	3-Phase Distributed Zero Crossing	Use with 3-phase heaters when wired in delta configuration. (For grounded Y configuration, use DZC instead.)

For an expanded description of these output types, see Chapter 8, Tuning and Control.

Heat or Cool Cycle Time

Set the cycle time for time proportioning outputs.

LOOP	PROCESS	UNITS
01	HEAT OUTPUT	
CYCLE TIME? 10S		
ALARM	SETPOINT	STATUS OUT%

This parameter appears only if the heat or cool output type for the loop is set to time proportioning (TP).

Selectable values: 1 to 255 seconds.

SDAC Mode

Select the Serial DAC output signal.

LOOP	PROCESS	UNITS
01	SDAC MODE?	
VOLTAGE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: CURRENT or VOLTAGE.

SDAC Low Value

Set the low output signal level for the Serial DAC. The Serial DAC converts 0% output from the controller to the value set here.

Set the high and low values to match the input range of the output device. For instance, if the output device has a 0.00-10.00 V range, set the SDAC LO VALUE to 0.00 VDC and set the SDAC HI VALUE to 10.00 VDC.

LOOP	PROCESS	UNITS
01	SDAC LO VALUE?	
0.00 VDC		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0.00 to 9.00 VDC or 0.0 to 19.90 MA. This value must be less than the SDAC HI VALUE.

SDAC High Value

Set the high output signal level for the Serial DAC. The Serial DAC converts 100% output from the controller to the value set here.

Set the high and low values to match the range of the output device. For instance, if the output device has a 4 to 20

mA range, set the SDAC HI VALUE to 20.00 MA and the SDAC LO VALUE to 4.00 MA.

LOOP	PROCESS	UNITS
01	SDAC HI VALUE?	10.00 VDC

ALARM	SETPOINT	STATUS	OUT%

Selectable values: 0.10 to 10.00 VDC or 0.10 to 20.00 mA. This value must be greater than the SDAC LO VALUE.

Heat or Cool Output Action

Select the control action for the output. Normally, heat outputs are set to reverse action and cool outputs are set to direct action. When output action is set to REVERSE, the output goes up when the process variable goes down. When set to DIRECT, the output goes up when the process variable goes up.

LOOP	PROCESS	UNITS
01	HEAT OUTPUT ACTION?	REVERSE

ALARM	SETPOINT	STATUS	OUT%

Selectable values: REVERSE or DIRECT.

Heat or Cool Output Limit

This parameter limits the maximum PID control output for a loop's heat or cool output. This limit may be continuous, or it may be in effect for a specified number of seconds (see the next parameter). If you choose a timed limit, the output limit time restarts when the controller powers up and whenever the loop goes from manual to automatic control. The output limit only affects loops under automatic control. It does not affect loops under manual control.

LOOP	PROCESS	UNITS
01	HEAT OUTPUT LIMIT ?	100%

ALARM	SETPOINT	STATUS	OUT%

Selectable values: 0 to 100%.

Heat or Cool Output Limit Time

Set a time limit for the output limit set at the previous parameter.

LOOP	PROCESS	UNITS
01	HEAT OUTPUT LIMIT TIME?	CONT

ALARM	SETPOINT	STATUS	OUT%

Selectable values: 1 to 999 seconds, or to CONT (continuous).

Sensor Fail Heat or Cool Output

When a sensor fail alarm occurs or when the OUTPUT OVERRIDE DIG INPUT (page 77) becomes active on a loop that is in automatic control, that loop goes to manual control at the percent power output set here.

LOOP	PROCESS	UNITS
01	SENSOR FAIL	
HT OUTPUT ?	0%	

ALARM	SETPOINT	STATUS	OUT%
-------	----------	--------	------

Selectable values: 0 to 100%.

NOTE!

When a sensor fails or the override input is detected, both the heat and cool outputs are set to their fail settings. In most applications, SENSOR FAIL HT OUTPUT and SENSOR FAIL CL OUTPUT should be set to 0%.



WARNING!

Do not rely solely on the sensor fail alarm to adjust the output in the event of a sensor failure. If the loop is in manual control when a failed sensor alarm occurs, the output is not adjusted. Install independent external safety devices that will shut down the system if a failure occurs.

Heat or Cool Thermocouple Break Output Average

If you set this parameter to ON and a thermocouple break occurs, a loop set to automatic control status will go to manual mode at a percentage equal to the average output prior to the break.

LOOP	PROCESS	UNITS
01	HEAT T/C BRK	
OUT AVG ?	OFF	

ALARM	SETPOINT	STATUS	OUT%
-------	----------	--------	------

Selectable range: ON or OFF

Heat or Cool Linearity

Select an output curve. For a nonlinear process, select CURVE 1 or CURVE 2.

LOOP	PROCESS	UNITS
01	HEAT	OUTPUT?
LINEAR		
ALARM	SETPOINT	STATUS OUT%

Selectable values: CURVE 1, CURVE 2, or LINEAR. Refer to Figure 4.4.

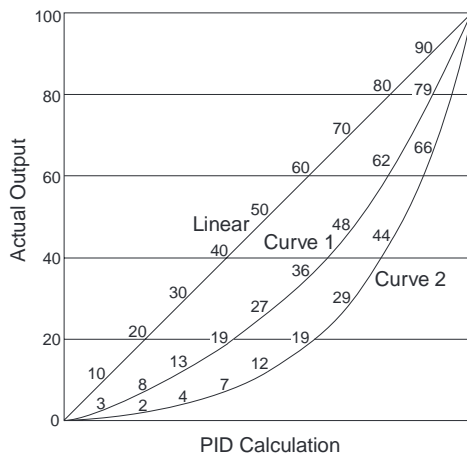


Figure 4.4 Linear and Nonlinear Outputs

If curve 1 or 2 is selected, a PID calculation results in a lower actual output level than the linear output requires. One of the nonlinear curves may be used when the response of the system to the output device is nonlinear.

Setup Loop Alarms Menu

Use the SETUP LOOP ALARMS menu to set:

- High and low process and deviation alarm limits
- Alarm outputs
- Alarm/control behavior
- Alarm deadband
- Alarm delay




Table 4.13 shows the parameters available in the SETUP LOOP ALARMS menu.

Table 4.13 Setup Loop Alarms

Parameter	Default Value
HI PROC ALARM SETPT?	1000
HI PROC ALARM TYPE?	OFF
HI PROC ALARM OUTPUT?	NONE
DEV ALARM VALUE?	5
HI DEV ALARM TYPE?	OFF
HI DEV ALARM OUTPUT?	NONE
LO DEV ALARM TYPE?	OFF
LO DEV ALARM OUTPUT?	NONE
LO PROC ALARM SETPT?	0
LO PROC ALARM TYPE?	OFF
LO PROC ALARM OUTPUT?	NONE
ALARM DEADBAND?	2
ALARM DELAY?	0 SECONDS

High Process Alarm Setpoint

Set the value at which the high process alarm activates.

LOOP	PROCESS	UNITS
01	HI PROC ALARM	
SETPT ? 1000		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any point within the scaled sensor range.

High Process Alarm Type

Select an alarm type for the high process alarm.

LOOP	PROCESS	UNITS
01	HI PROC ALARM	
TYPE ? OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: OFF, ALARM, or CONTROL.

High Process Alarm Output Number

Choose a digital output to activate when the high process alarm occurs, if desired.

LOOP	PROCESS	UNITS
01	HI PROC ALARM	
OUTPUT? NONE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: NONE, or any output from 1 to 34 not enabled for closed-loop control or for the Serial DAC clock.

Deviation Alarm Value

Set the deviation from setpoint at which the high and low deviation alarms occur.

LOOP	PROCESS	UNITS
01	DEV ALARM	
VALUE ? 5		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 255, 25.5, 2.55, .255 or .0255, depending on the INPUT TYPE and DISP FORMAT settings.

High Deviation Alarm Type

Select an alarm type for the high deviation alarm.

LOOP	PROCESS	UNITS
01	HI	DEV ALARM
TYPE	?	OFF
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: ALARM, CONTROL or OFF

High Deviation Alarm Output Number

Choose a digital output to activate when the high deviation alarm occurs, if desired.

LOOP	PROCESS	UNITS
01	HI	DEV ALARM
OUTPUT	?	NONE
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: NONE, or any output from 1 to 34 not enabled for closed-loop control or for the Serial DAC clock.

Low Deviation Alarm Type

Select an alarm type for the low deviation alarm.

LOOP	PROCESS	UNITS
01	LO	DEV ALARM
TYPE	?	OFF
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: ALARM, CONTROL or OFF.

Low Deviation Alarm Output Number

Choose a digital output to activate when the low deviation alarm occurs, if desired.

LOOP	PROCESS	UNITS
01	LO	DEV ALARM
OUTPUT	?	NONE
ALARM	SETPOINT	STATUS
		OUT%

Selectable values: NONE, or any output from 1 to 34 not enabled for closed-loop control or for the Serial DAC clock.

Low Process Alarm Setpoint

Set a low process alarm setpoint. See Process Alarms on page 66.

LOOP	PROCESS	UNITS
01	LO PROC ALARM	
SETPT?	0	
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any value within the input sensor's range.

Low Process Alarm Type

Select an alarm type for the low process alarm.

LOOP	PROCESS	UNITS
01	LO PROC ALARM	
TYPE ?	OFF	
ALARM	SETPOINT	STATUS OUT%

Selectable values: ALARM, CONTROL or OFF.

Low Process Alarm Output Number

Choose a digital output to activate when the low process alarm occurs, if desired.

LOOP	PROCESS	UNITS
01	LO PROC ALARM	
OUTPUT ?	NONE	
ALARM	SETPOINT	STATUS OUT%

Selectable values: NONE, or any output from 1 to 34 not enabled for closed-loop control or for the Serial DAC clock.

Alarm Deadband

Set an alarm deadband. This deadband value applies to the high process, low process, high deviation and low deviation alarms for the loop. Use the alarm deadband to avoid repeated alarms as the process variable cycles around an alarm value.

LOOP	PROCESS	UNITS
01	ALARM DEAD-	
BAND ?	2	
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0 to 255, 25.5, 2.55, .255 or .0255, depending on the INPUT TYPE and DISP FORMAT settings.

Alarm Delay

Set a loop alarm delay. This parameter delays failed sensor and process alarms until the alarm condition has been continuously present for longer than the alarm delay time.

LOOPPROCESSUNITS

01ALARM DELAY ?

0SECONDS

ALARMSETPOINTSTATUSOUT%

Selectable range: 0 to 255 seconds.

Manual I/O Test

This menu facilitates testing of:

- Digital inputs
- Digital outputs
- The keypad buttons

LOOPPROCESSUNITS

MANUAL I/O

TEST ?

ALARMSETPOINTSTATUSOUT%

Table 4.14 shows the screens available in the MANUAL I/O TEST menu.

Table 4.14 Manual I/O Test

Parameter	Default Value
DIGITAL INPUTS	HHHHHHHH
TEST DIGITAL OUTPUT?	1: IN USE
DIGITAL OUTPUT NUMBER XX?	OFF
KEYPAD TEST	N/A

NOTE! The **DIGITAL OUTPUT NUMBER** screen appears only if an unassigned output has been selected in the **TEST DIGITAL OUTPUT** screen.

Digital Inputs

View the logic state of the eight digital inputs as H (high) meaning the input is not pulled low, or L (low) meaning the input is connected to the controller common.

This screen shows the state of inputs 1 to 8 from left to right. See Figure 4.5. Since inputs are pulled high when they are not connected, test an input by shorting it to controller common and making sure this screen shows the correct state for that input.





Figure 4.5 Digital Inputs Screen

When you are done testing digital inputs, press **YES** or **NO** to advance to the next screen, or press **BACK** to return to the **MANUAL I/O TEST** menu.

Test Digital Output

Select one of the digital alarm outputs to test. You will test the output on the next screen.

You cannot force the state of an output enabled for control.




Selectable values: Any output from 1 to 34 that is not enabled for closed-loop control or for the Serial DAC clock and GA, the global alarm output.

Digital Output Number

This screen appears only if you selected an output that is not in use for control at the **TEST DIGITAL OUTPUT** screen.

Use this parameter to manually toggle a digital output on or off to test it. Toggling an output **ON** sinks current from the output to the controller common. Toggling the output **OFF** stops current flow. All tested outputs are set to **OFF** when you exit the **MANUAL I/O TEST** menu.

You cannot toggle outputs enabled for control. To test a control loop output, first disable it using the **SETUP LOOP OUTPUTS** menu.



Selectable values: **ON** or **OFF**.

Keypad Test

Test the keypad. The test begins automatically when the screen appears.

LOOP	PROCESS	UNITS	
KEYPAD TEST			
QUIT = "NO" + "NO"			
ALARM	SETPOINT	STATUS	OUT%

- Press any key to test the keypad. The controller will display the name of the key you have pressed.
- Press **NO** twice to end the test and return to the top of the MANUAL I/O TEST menu.

Display Test

Use this function to test the display.

LOOP	PROCESS	UNITS	
DISPLAY TEST?			
ALARM	SETPOINT	STATUS	OUT%

Press **YES** to enter the test and display the instruction screen.

LOOP	PROCESS	UNITS	
TO TEST DISPLAY			
Y-TOGGLE N-QUIT			
ALARM	SETPOINT	STATUS	OUT%

Press **YES** to begin the display of a discernable pixel pattern.

- Press **YES** to toggle the pixel pattern.
- Press **NO** to end the test and return to the top of the MANUAL I/O TEST menu.

5

Extruder Control

This chapter explains the additional features for the CLS200 series controller equipped with Extruder Control Firmware. Except for setup, default and control algorithm differences described below, the Extruder Control Firmware operates the same as the standard control firmware.

Setup Loop Outputs Menu

The SETUP LOOP OUTPUTS menu contains a parameter with descriptors for the selections that are different than those in the standard control firmware.

LOOP	PROCESS	UNITS
SETUP LOOP 01		
OUTPUTS ?		
ALARM	SETPOINT	STATUS OUT%

Cool Output Nonlinear Output Curve

Select linear or nonlinear output curves for the cool output.

LOOP	PROCESS	UNITS
01	COOL OUTPUT	
FAN		
ALARM	SETPOINT	STATUS OUT%

Selectable Values: FAN, OIL or H2O. See Figure 5.1.

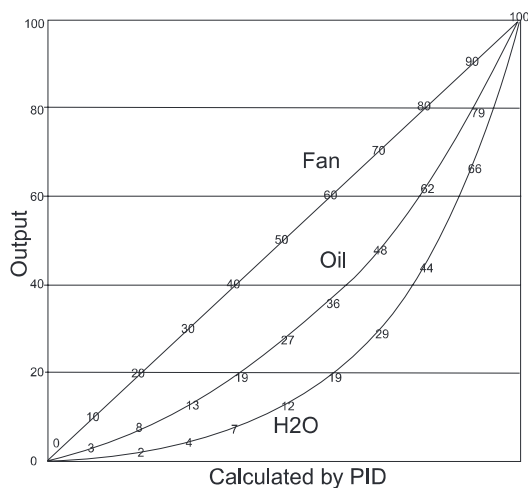


Figure 5.1 Cool Output Nonlinear Output Curve

The COOL OUTPUT parameter is located in the SETUP LOOP OUTPUTS menu. Select one of three nonlinear or linear output curves for cooling.

Defaults

The Extruder Control Firmware uses different defaults for some parameters in the SETUP LOOP CONTROL PARAMS menu. Furthermore, a unique set of control defaults are asserted whenever the COOL OUTPUT parameter on the SETUP LOOP OUTPUTS menu is changed. Table 5.1 through Table 5.3 on page 109 list the default parameter settings for each cool output curve.

NOTE! *Changing the cool output curve parameter will change control parameter settings to defaults for that particular cool output curve.*

Table 5.1 Default Control Parameters for Fan Cool Output

Parameter	Default Value
HEAT CONTROL PB?	50 (for J-type thermocouple) depends on Input Type setting
HEAT CONTROL TI?	500 sec/repeat
HEAT CONTROL TD?	125 sec
HEAT CONTROL FILTER	6
COOL CONTROL PB?	10 (for J-type thermocouple) depends on Input Type setting
COOL CONTROL TI?	0 sec/repeat
COOL CONTROL TD?	0 sec
COOL CONTROL FILTER?	4

Table 5.2 Default Control Parameters for Oil Cool Output

Parameter	Default Value
HEAT CONTROL PB?	50 (for J-type thermocouple) depends on Input Type setting
HEAT CONTROL TI?	500 sec/repeat
HEAT CONTROL TD?	125 sec
HEAT CONTROL FILTER	6
COOL CONTROL PB?	35 (for J-type thermocouple) depends on Input Type setting
COOL CONTROL TI?	300 sec/repeat
COOL CONTROL TD?	60 sec
COOL CONTROL FILTER?	3

Table 5.3 Default Control Parameters for H2O Cool Output

Parameter	Default Value
HEAT CONTROL PB?	50 (for J-type thermocouple) depends on Input Type setting
HEAT CONTROL TI?	500 sec/repeat
HEAT CONTROL TD?	125 sec
HEAT CONTROL FILTER	6
COOL CONTROL PB?	70 (for J-type thermocouple) depends on Input Type setting
COOL CONTROL TI?	500 sec/repeat
COOL CONTROL TD?	90 sec
COOL CONTROL FILTER?	2

Extruder Control Algorithm

The Extruder Control Firmware uses a control algorithm that has been optimized for controlling temperature loops in plastic extruder equipment. Typically, overshoot is undesirable and ambient cooling is not sufficient to dampen the effects of self heating that are inherent in the extrusion process. This control method uses both heat and cool outputs. Under some conditions both heat and cool outputs may be on at the same time.

6

Enhanced Features

This chapter explains five additional features for the CLS200 controller when enabled with enhanced features option firmware:

- Process variable retransmit
- Cascade control
- Ratio control
- Remote analog setpoint
- Differential control

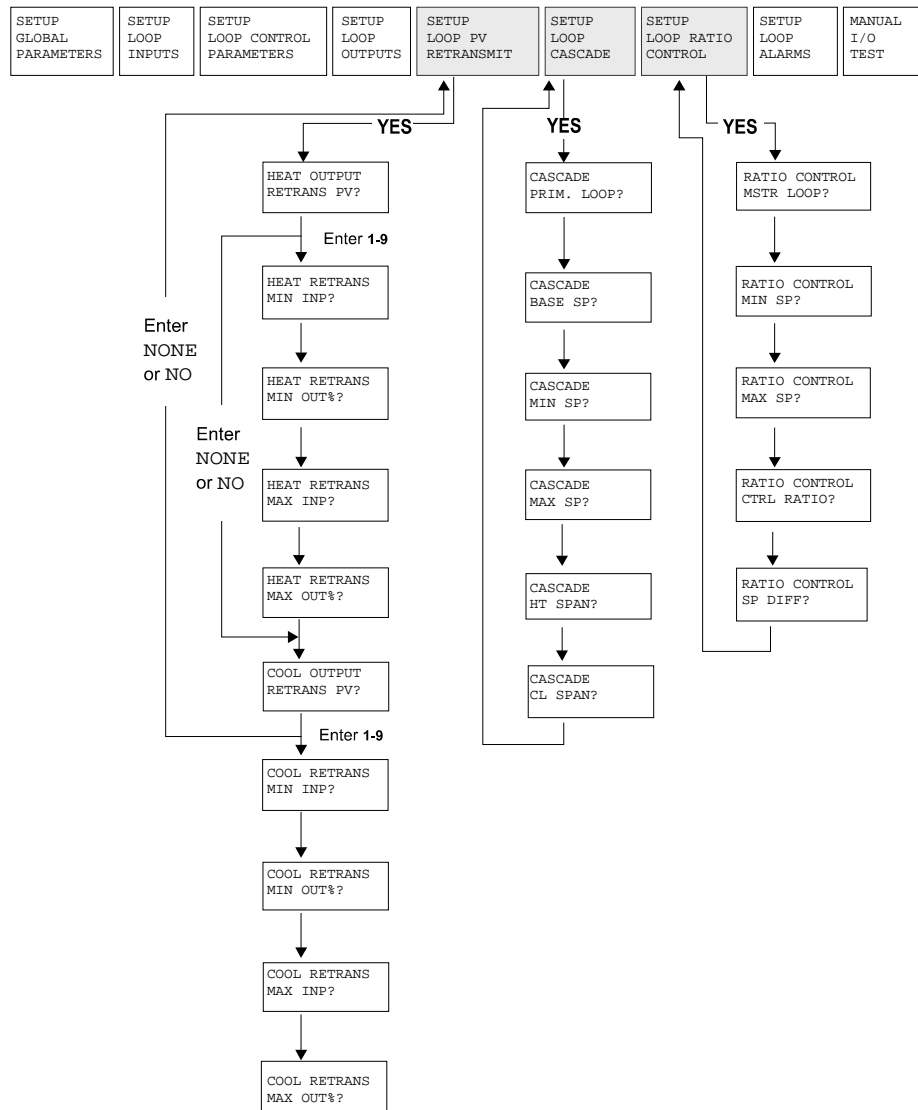


Figure 6.1 Enhanced Features Option Menus

Process Variable Retransmit

The process variable retransmit feature retransmits the process signal of one loop (primary) via the control output of another loop (secondary). This signal is linear and proportional to the engineering units of the primary loop input.

Typical uses include data logging to analog recording systems and long distance transmission of the primary signal to avoid degradation of the primary signal. The signal can also be used as an input to other types of control systems such as a PLC.

Any available output (heat or cool) may be used as a retransmit output. Any process variable (including the same loop number input) may be retransmitted.

The controller output signal must be connected to a Dual DAC or Serial DAC converter to get a 4 to 20 mA^{DC} or 0 to 5V^{DC} signal. The choice of converter depends on application requirements.

The process variable retransmit feature is included in both the ramp/soak and enhanced features options.

NOTE!

If an output is defined as a process variable retransmit, it cannot be used for PID control.

Setup Loop Process Variable Retransmit Menu

The setup parameters for the process variable retransmit feature appear in the SETUP LOOP PV RETRANSMIT menu.

LOOP PROCESS UNITS

SETUP LOOP 02

PV RETRANSMIT?

ALARM SETPOINT STATUS OUT%

Press **YES** to view the process variable retransmit parameters.

Retransmit Process Variable

Enter the number of the loop that provides the process variable for the retransmit calculation.

LOOP	PROCESS	UNITS
02	HEAT	OUTPUT
RETRANS PV? 02		
ALARM	SETPOINT	STATUS
OUT%		

If you set this parameter NONE and press **NO**, the controller skips to the COOL OUTPUT RETRANS PV screen. The COOL parameter is set up the same way as the HEAT parameter.

Selectable values: Any loop or NONE.

Minimum Input

Enter the lowest value of the process variable to be retransmitted. This value is expressed in the same engineering units as the input loop.

LOOP	PROCESS	UNITS
02	HEAT	RETRANS
MIN INP? 1000		
ALARM	SETPOINT	STATUS
OUT%		

If the process variable falls below the minimum, the output will stay at the minimum value.

Selectable values: Any value in the input loop's range.

Minimum Output

Enter the output value (0 to 100%) that corresponds to the minimum input.

LOOP	PROCESS	UNITS
02	HEAT	RETRANS
MIN OUT%? 0%		
ALARM	SETPOINT	STATUS
OUT%		

Selectable values: 0 to 100%

If you select a minimum output value other than 0%, the output will never drop below MIN OUT, even if the process variable drops below the MIN INP that you specified.

Maximum Input

Enter the highest value of the process variable to be retransmitted. This value is expressed in the same engineering units as the input loop.

LOOP	PROCESS	UNITS
02	HEAT	RETRANS
MAX INP? 10000		
ALARM	SETPOINT	STATUS
OUT%		

If the process variable goes above the maximum, the output will stay at the maximum value.

Selectable values: Any value in the input loop's range.

By adjusting the maximum and minimum inputs, you can scale the output appropriately. See Figure 6.2.

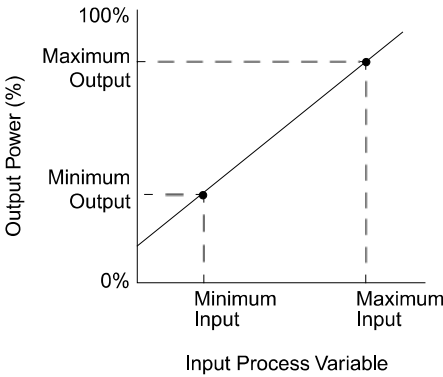


Figure 6.2 *Linear Scaling of Process Variable for Retransmit*

Maximum Output

Enter the output value (0 to 100%) which corresponds to the maximum input.

LOOP	PROCESS	UNITS
02	HEAT	RETRANS
MAX OUT%? 100%		
ALARM	SETPOINT	STATUS OUT%

The output will never go above the this maximum output percentage, regardless of how high the process variable goes.

Selectable values: 0 to 100%

Process Variable Retransmit Example: Data Logging

The CLS200 controls the temperature of a furnace. The thermocouple in one of the zones is connected to the controller and is used for closed-loop PID control. An analog recorder data logging system is also in place, and a recording of the process temperature is required. The recorder input is a linear 4 to 20 mA^{ac} (dc) signal representing a process variable range of 0 to 1000° F.

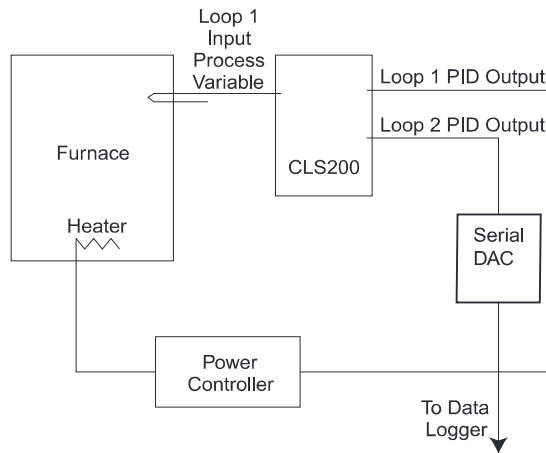









Figure 6.3 Application Using Process Variable Retransmit

To set up this application, you would do the following:

1. First, set up the standard control loop parameters according to the furnace application, in this case on loop 1.
2. Select another unused PID output for retransmitting the thermocouple value (for example, loop 2 heat output).
3. Change the display to loop 2, and then enter the three-key sequence (**ENTER**, then **ALARM ACK**, then **CHNG SP**) and go to the first screen in Table 6.1.
4. Follow the steps in Table 6.1 to configure the process variable retransmit option.
5. After following the steps in Table 6.1, press **BACK** several times until the normal loop display appears. The controller will now produce an output on loop 2 which is linear and proportional to the loop 1 process variable.

Table 6.1 Application Example: Setting Up Process Variable Retransmit

Display	User Input
	Press YES .
	Enter 01 for loop 1 process variable. Press ENTER .
	Enter the minimum input value, which corresponds to the minimum output percentage. For a range of 0 to 1000° F, set the minimum input value to 0° F. Press ENTER .
	Enter the minimum output percentage, from 0 to 100%. For this example we will assume a full span with a minimum of 0%. Press ENTER .
	Enter the maximum input value, which corresponds to the maximum output percentage. For a range of 0 to 1000° F, set the maximum input value to 1000° F. Press ENTER .
	Enter the maximum output percentage, from 0 to 100%. For this example we will assume a full span with a maximum of 100%. Press ENTER .
	The process variable retransmit section of the controller programming is now completed. We are not using the cool output of loop 2 to retransmit a process variable, so choose NONE . Press ENTER .

Notes about this application:

- This is not a thermocouple curve type of signal and requires a linear input range in the recorder.
- To complete this configuration, the loop 2 output must be enabled and tailored to meet the requirements of the data-application. In this example, the data logger requires an analog input of 4 to 20 mA.
- The CLS200 Series controllers must be used with a Watlow Anafaze Serial DAC.


Consult Chapter 4, Setup for information on setting up the other options of the controller.

Cascade Control

Cascade control is used to control thermal systems with long lag times, which cannot be as accurately controlled with a single control loop. The output of the first (primary) loop is used to adjust the setpoint of the second (secondary) loop. The secondary loop normally executes the actual control.

The cascade control feature allows the output percentage of one control loop to determine the setpoint of a second control loop. By adjusting the setpoint (SP) parameters, the user can adjust the influence that the primary loop has on the setpoint of the secondary loop. See Figure 6.4.

Some applications, such as aluminum casting, use two-zone cascade control where the primary output is used for the primary heat control and the cascaded output is used for boost heat. The CLS200 allows you to use the primary heat output for both control and for determining the setpoint of the secondary loop.

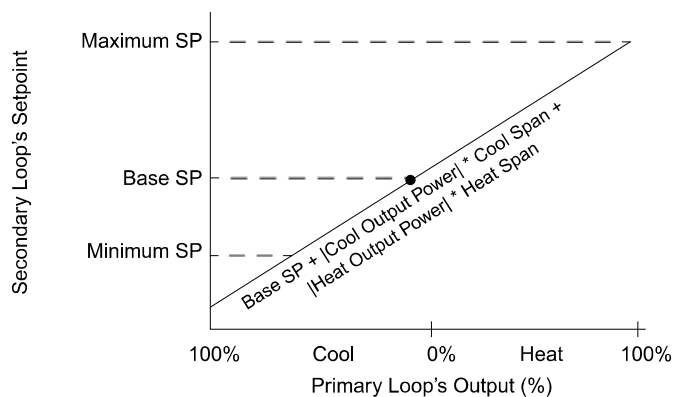

Calculation of new secondary loop setpoint:

$$SP2 = \text{Base SP} + |\text{Cool Output Power}| * \text{Cool Span} + |\text{Heat Output Power}| * \text{Heat Span}$$

Figure 6.4 Relationship Between the Primary Loop's Output and the Secondary Loop's Setpoint

NOTE!

Cascade control cannot be used on the same control loop as ratio control. However, both features may be used in the same multiloop controller.

Setup Loop Cascade Menu

The setup parameters for cascade control appear under the **SETUP LOOP CASCADE** menu.

LOOP	PROCESS	UNITS
SETUP LOOP 02		
CASCADE?		
ALARM	SETPOINT	STATUS OUT%

Press **YES** to set up the cascade parameters. The loop currently displayed (loop 02 in this case) will be the secondary control loop, which performs the actual control.

Primary Loop

Enter the primary loop number. The output percentage of this loop will control the setpoint of the secondary loop.

LOOP	PROCESS	UNITS
02 CASCADE		
PRIM. LOOP? 03		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any loop except the secondary loop.

Base Setpoint

Enter the setpoint that corresponds to 0% (heat and cool) output from the primary loop (PRIM. LOOP). This value is expressed in the same engineering units as the secondary loop's process variable.

LOOP	PROCESS	UNITS
02	CASCADE	
BASE SP? 25		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any value from the secondary loop's minimum process variable to its maximum process variable.

Minimum Setpoint

Enter the lowest value of the secondary loop setpoint. This minimum setpoint overrides any calculation caused by the primary loop calling for a lower setpoint. This value is expressed in the same engineering units as the secondary loop's process variable.

LOOP	PROCESS	UNITS
02	CASCADE	
MIN SP? 25		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any value from the secondary loop's minimum process variable to its maximum process variable.

Maximum Setpoint

Enter the highest value of the secondary loop setpoint. This maximum setpoint overrides any calculation caused by the primary loop calling for a higher setpoint. This value is expressed in the same engineering units as the secondary loop's process variable.

LOOP	PROCESS	UNITS
02	CASCADE	
MAX SP? 180		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any value from the secondary loop's minimum process variable to its maximum process variable.

Heat Span

Enter the multiplier to apply to the primary loop heat output percentage.

LOOP	PROCESS	UNITS	
02	CASCADE		
HT SPAN? +9999			
ALARM	SETPOINT	STATUS	OUT%

Selectable values: -9999 to +9999.

Cool Span

Enter the multiplier to apply to the primary loop cool output percentage.

LOOP	PROCESS	UNITS	
02	CASCADE		
CL SPAN? +9999			
ALARM	SETPOINT	STATUS	OUT%

Selectable values: -9999 to +9999.

Cascade Control Example: Water Tank

A tank of water has an inner and outer thermocouple. The outer thermocouple is located in the center of the water. The inner thermocouple is located near the heating element. The desired temperature of the water is 150° F, which is measured at the outer thermocouple. Using cascade control, the outer thermocouple is used on the primary loop (in this example, loop 1), and the inner thermocouple is used on the secondary loop (loop 2). The heater is controlled by loop 2 with a setpoint range of 150 to 190° F.

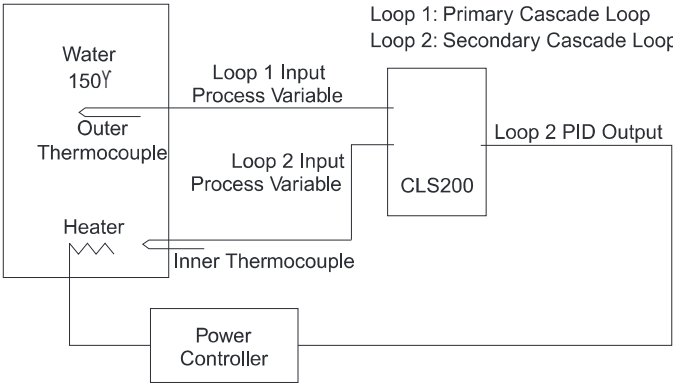









Figure 6.5 Application Using Cascade Control

To set up this application, you would do the following:

1. Change the display to loop 2, which will be the secondary loop, and then enter the three-key sequence (**ENTER**, then **ALARM ACK**, then **CHNG SP**) and go to the first screen in Table 6.2.
2. Follow the steps in Table 6.2 to configure cascade control.

Table 6.2 Application Example: Setting Up Cascade Control

Display	User Input
	Press YES to set up the cascade parameters with loop 2 as the secondary loop.
	Enter 01 to make loop 1 the primary loop. Press ENTER .
	The base setpoint corresponds to the 0% level output of the primary loop. Enter the base setpoint of the secondary loop. For this example, we will assume a base setpoint of 150° F, which is the desired water temperature. Press ENTER .
	Enter the minimum setpoint of the secondary loop. For this example, we will use a minimum setpoint of -350° F. Press ENTER .
	Enter the maximum setpoint of the secondary loop. For this example, we will use a maximum setpoint of 1400° F. Press ENTER .
	Enter the heat span of the secondary loop. This is the span over which the primary output from 0 to 100% is used to change the setpoint. The desired setpoint range is 150 to 190° F. We will assume a linear rise in setpoint, so the heat span is 40° F. Press ENTER .
	Enter the cool span of the secondary loop. For this example we will assume no low-side adjustment to the setpoint, so the cool span is 0° F. Press ENTER .

3. Press **BACK** several times until the normal loop display appears. The output percentage of loop 1 will now control the setpoint of loop 2.

To verify that cascade is working as expected, you would follow these steps:

1. Set loop 1 to **MANUAL** and the **OUTPUT** to 0%. Loop 2 setpoint should equal 150 (BASE SP).
2. Adjust loop 1 **MANUAL OUTPUT** to 50%. Loop 2 setpoint should equal 170 (BASE SP + 50% of HT SPAN).
3. Adjust loop 1 **MANUAL OUTPUT** to 100%. Loop 2 setpoint should equal 190 (BASE SP + HT SPAN).
4. To complete the cascade setup, both loop 1 and loop 2 must be configured for inputs, outputs, and alarms.

In addition, the PID parameters of loop 1 must be tuned to produce the desired effect for the application on the setpoint of loop 2. For a cascade control application that uses the secondary loop for PID control, loop 1 typically uses only proportional mode. This must be set for the amount of change in the process variable to cause a 100% change in the output level.

The proportional band is selected so the setpoint of the secondary loop has the desired relationship to the process variable of the primary loop. In this application, the proportional band (PB) of the primary loop is set to 10° F and the integral and derivative are turned off.

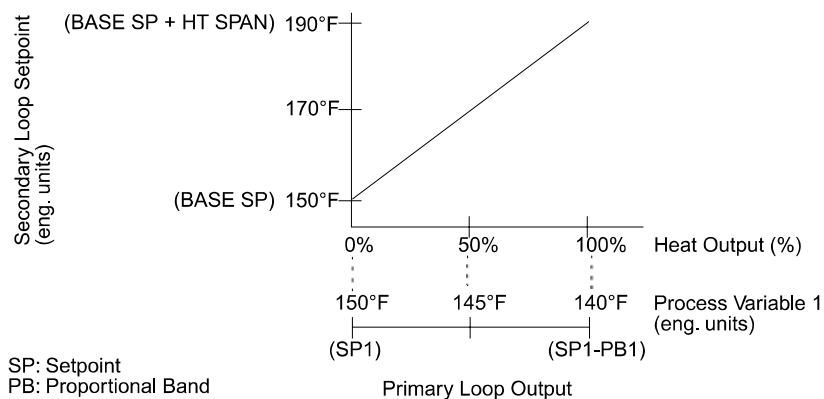


Figure 6.6 Secondary Loop Setpoint Related to Primary Loop Output

As the temperature of loop 1 drops, the output of loop 1 goes up proportionally and the setpoint of loop 2 goes up proportionally. Thus heat is added to the system at the element

even though the temperature near the element may have been at setpoint (150° F).

With proportional control, when loop 1 is at setpoint, its output is 0%, and the setpoint of loop 2 is equal to the base setpoint (150° F). If the temperature of loop 1 drops to 149° F, the deviation results in a proportional output of 10%. This times the span of 40° F results in an increase in setpoint for loop 2 of 4° F. The loop 2 setpoint increases to 154° F. For every degree that loop 1 drops, loop 2 increases by 4° F until the output of loop 1 is 100% and the loop 2 setpoint is 190° F. Any further drop in the loop 1 process variable does not affect loop 2.

The PID parameters of loop 2 must be tuned to perform efficient control.


For two-zone cascade control systems, the PID settings for both loops, the primary plus the secondary, must be optimized for good temperature control.

See Chapter 4, Setup for information on tuning PID loops.

Ratio Control

Ratio control allows the process variable of one loop (master loop), multiplied by a ratio, to be the setpoint of another loop (ratio loop). You can assign any process variable to determine the setpoint of a ratio loop.

By adjusting the ratio control parameters, you can adjust the influence that the master loop process variable has on the setpoint of the ratio loop.

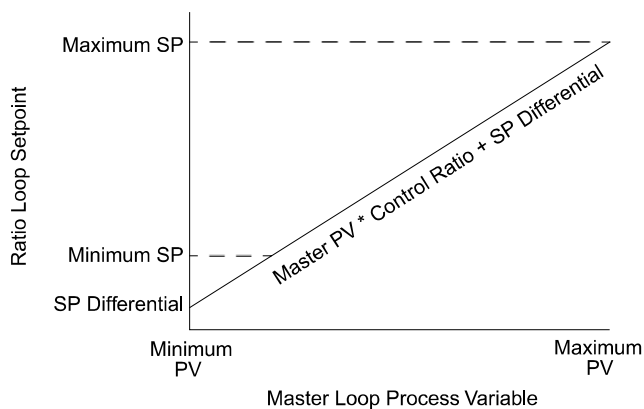

SP: Setpoint
PV: Process Variable

Figure 6.7 *Relationship Between the Master Loop's Process Variable and the Ratio Loop's Setpoint*

NOTE! *Ratio control cannot be used on the same control loop as cascade control. However, both features may be used in the same multi-loop controller.*

Setup Loop Ratio Control Menu

The ratio control parameters appear in the SETUP LOOP RATIO CONTROL menu.

LOOP	PROCESS	UNITS
SETUP LOOP 02		
RATIO CONTROL?		
ALARM	SETPOINT	STATUS OUT%

Press **YES** to set up the ratio control parameters with loop number 2 as the ratio loop.

Master Loop

Enter the master loop which will provide the output to the internal controller setpoint calculation for the ratio loop setpoint.

LOOP	PROCESS	UNITS
02 RATIO CONTROL		
MSTR LOOP? NONE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any loop except the loop currently selected (in this case, loop 02). Choose NONE for no ratio control.

Minimum Setpoint

Enter the lowest allowable setpoint for the ratio loop. This minimum setpoint overrides any ratio calculation calling for a lower setpoint. This value is expressed in the same engineering units as the ratio loop's process variable.

LOOP	PROCESS	UNITS
02 RATIO CONTROL		
MIN SP? 25		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any value from the minimum value of the ratio loop's process variable to its maximum value.

Maximum Setpoint

Enter the highest allowable setpoint for the ratio loop. This maximum setpoint overrides any ratio calculation calling

for a higher setpoint. This value is expressed in the same engineering units as the ratio loop's process variable.

LOOP	PROCESS	UNITS
02	RATIO CONTROL	
MAX SP? 25		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any value from the minimum value of the ratio loop's process variable to its maximum value.

Control Ratio

Enter the multiplier to apply to the master loop's process variable.

LOOP	PROCESS	UNITS
02	RATIO CONTROL	
CTRL RATIO? 1.0		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0.1 to 999.9.

Setpoint Differential

Enter the value to add or subtract from the ratio loop setpoint calculation before using it as the setpoint. This value is expressed in the same engineering units as the ratio loop's process variable.

LOOP	PROCESS	UNITS
02	RATIO CONTROL	
SP DIFF? 0		
ALARM	SETPOINT	STATUS OUT%

Selectable values: -9999 to 9999 with the decimal placement determined by the DISP FORMAT setting for the ratio loop.

Ratio Control Example: Diluting KOH

A chemical process requires a formula of two parts water (H₂O) to one part potassium hydroxide (KOH) to produce diluted potassium hydroxide. The desired flow of H₂O is 10 gallons per second (gps), so the KOH should flow at 5 gps. Separate pipes for each chemical feed a common pipe. The flow rate of each feeder pipe is measured by a CLS200, with H₂O flow as process variable 1 and KOH flow as process variable 2. The outputs of loops 1 and 2 adjust motorized valves.

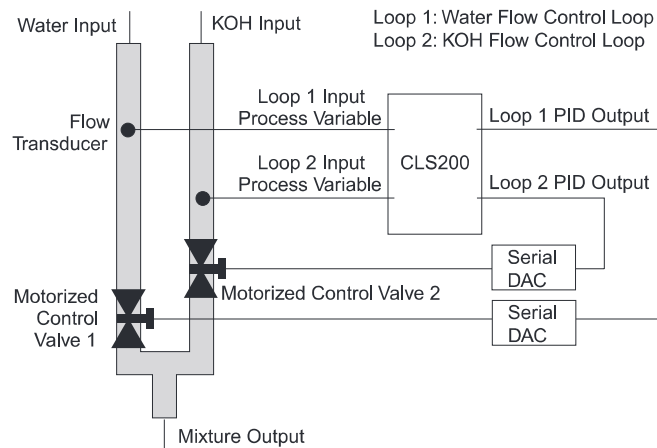


Figure 6.8 Application Using Ratio Control

To set up this application, you would do the following:

1. Adjust and tune loop 1 (H₂O) for optimal performance before implementing the ratio setup.
2. Switch the controller to display loop 2 (KOH), and then enter the three-key sequence (**ENTER**, then **ALARM ACK**, then **CHNG SP**) and go to the first screen in Table 6.3.
3. Follow the steps in Table 6.3 to configure ratio control.

Table 6.3 Application Example: Setting Up Ratio Control

Display	User Input
<div> <div>LOOP PROCESS UNITS</div> <div>SETUP LOOP 02</div> <div>RATIO CONTROL?</div> <div>ALARM SETPOINT STATUS OUT%</div> </div>	Press YES to set up the ratio control parameters for loop 02.
<div> <div>LOOP PROCESS UNITS</div> <div>02 RATIO CONTROL</div> <div>MSTR LOOP? 01</div> <div>ALARM SETPOINT STATUS OUT%</div> </div>	Assign loop 01 as the master loop. Press ENTER .
<div> <div>LOOP PROCESS UNITS</div> <div>02 RATIO CONTROL</div> <div>MIN SP? 0.0</div> <div>ALARM SETPOINT STATUS OUT%</div> </div>	Enter the minimum ratio loop setpoint. For this example, we will use 0.0 gallons per second as a minimum. Press ENTER .
<div> <div>LOOP PROCESS UNITS</div> <div>02 RATIO CONTROL</div> <div>MAX SP? 7.0</div> <div>ALARM SETPOINT STATUS OUT%</div> </div>	Enter the maximum ratio loop setpoint. For this example, we will use 7.0 gallons per second as a maximum. Press ENTER .
<div> <div>LOOP PROCESS UNITS</div> <div>02 RATIO CONTROL</div> <div>CTRL RATIO? 0.5</div> <div>ALARM SETPOINT STATUS OUT%</div> </div>	Enter the control ratio, which is the multiple applied to the master. The H ₂ O fl w rate is multiplied by 0.5 to obtain the KOH fl w rate setpoint. Press ENTER .
<div> <div>LOOP PROCESS UNITS</div> <div>02 RATIO CONTROL</div> <div>SP DIFF.? 0</div> <div>ALARM SETPOINT STATUS OUT%</div> </div>	Enter the setpoint differential (or offset). For this example we have no offset requirement and will use 0. Press ENTER .

- Press **BACK** several times until the normal loop display appears. The setpoint of loop 2 will now be equal to one half of the process variable of loop 2.
- To complete the ratio setup, configure both loops 1 and 2 for inputs, outputs, and alarms. See Chapter 4, Setup for information on loop setup.

Remote Analog Setpoint

The remote analog setpoint is set up identically to ratio control. To provide a setpoint remotely, typically a voltage or current source is connected to an analog input on the controller. This input is configured as a linear input type and the master loop for ratio control. All other input types are also usable as remote analog setpoint inputs.

Specify the loop to which the analog input is connected as the master loop and setup the rest of the ratio control parameters as outlined in Setup Loop Ratio Control Menu on page 125.

Remote Analog Setpoint Example: Setting a Setpoint with a PLC

Remote analog setpoint allows external equipment, such as a PLC or other control system, to change the setpoint of a loop.







Both the remote analog setpoint feature and the process variable retransmit feature can be used with PLC systems as the link between multiloop PID control systems and PLC systems.

For example, a 0 to 5 V_{DC} (dc) signal representing 0 to 300° F will be used as a remote setpoint input to the CLS200. The input signal will be received on loop 1 with the control being performed on loop 2. Note that proper scaling resistors must be installed on the input of loop 1 to allow it to accept a 0 to 5 V_{DC} (dc) input.

To set up this application, you would do the following:

1. In the loop 1 **SETUP LOOP INPUT** menu, set the **INPUT TYPE** to **LINEAR**, set **HI PV** to 300, set **LO PV** to 0, set **HI RDG** to 100.0% and set **LO RDG** to 0.0%.
2. Change the display to loop 2, and then enter the setup parameters. Go to the first screen in Table 6.4.
3. Follow the steps in Table 6.4 to configure the process variable retransmit option.

Table 6.4 Application Example: Setting Up Remote Setpoint

Display	User Input
	Press YES to set up the ratio control parameters for loop 2.
	Assign loop 01 to be the master loop. Press ENTER .
	Enter the minimum ratio loop setpoint. For this example, we will use 0° F. Press ENTER .
	Enter the maximum ratio loop setpoint. For this example, we will use 300.0° F as a maximum. Press ENTER .
	Enter the control ratio, which is the multiple applied to the master process variable. In this example the ratio is 1.0. Press ENTER .
	Enter the setpoint differential (or offset). For this example we have no offset requirement and will use 0. Press ENTER .

- Press **BACK** several times until the normal loop display appears. The setpoint of loop 2 will now be equal to the process variable of loop 1.
- To complete the remote analog setpoint setup, loop 1 may be configured for outputs and alarms. Likewise, loop 2 must be configured for inputs, outputs, and alarms. See Chapter 4, Setup for information on loop setup.

Differential Control

Differential control is a simple application of the ratio control option, used to control one process (ratio loop) at a differential, or offset, to another (master loop). To use differential control, set the ratio value to 1.0 to provide the desired offset.

Differential Control Example: Thermoforming

A thermal forming application requires that the outside heaters operate at a higher temperature than the center heaters. The differential control point is determined by the master loop which is using infrared (IR) sensors for temperature feedback. Secondary loops use thermocouples for feedback.

The loop using the IR sensor as an input is assigned to the master loop in the `SETUP LOOP RATIO CONTROL` menu. The secondary loop is the differential control loop. Setting the setpoint differential (`SP DIFF`) to the desired offset will produce the desired offset between the secondary and master loops.







For example, the master loop can be controlled at 325° F and the secondary loop at 375° F by using a differential of 50° F.

Loop 1 must be set up for PID control of the setpoint at 325° F.

To set up this application, you would do the following:

1. Change the display to loop 2, and then enter the setup parameters. Go to the first screen in Table 6.5.
2. Follow the steps in Table 6.5 to configure the process variable retransmit option.

Table 6.5 Application Example: Setting Up Differential Control

Display	User Input
	Press YES to setup the ratio control parameters for loop 2.
	Assign loop 01 to be the master loop. Press ENTER .
	Enter the minimum ratio loop setpoint. For this example, we will use 300.0° F. Press ENTER .
	Enter the maximum ratio loop setpoint. For this example, we will use 400.0° F. Press ENTER .
	Enter the control ratio, which is the multiple applied to the master process variable. In this example the ratio is 1.0. Press ENTER .
	Enter the setpoint differential (or offset). For this example, we have an offset of +50. Press ENTER .

- Press **BACK** several times until the normal loop display appears. The setpoint of loop 2 will now be equal to process variable of loop 1 plus 50° F.
- To complete the differential control setup, loop 1 and loop 2 must be configured for inputs, outputs, and alarms. See Chapter 4, Setup for information on loop setup.

Ramp/Soak

This chapter covers setup and operation of ramp/soak profiles in CLS200 series controllers.

These features are available in controllers that have the optional ramp/soak firmware installed.

The ramp/soak feature turns your controller into a powerful and flexible batch controller. Ramp/soak lets you program the controller to change a process setpoint in a preset pattern over time. This preset pattern, or temperature profile, consists of several segments. During a segment, the temperature goes from the previous segment's setpoint to the current segment's setpoint.

- If the current segment's setpoint is higher or lower than the previous segment's setpoint, it is called a ramp segment.
- If the current segment's setpoint is the same as the previous segment's setpoint, it is called a soak segment.

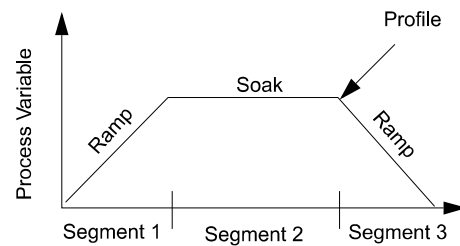


Figure 7.1 Sample Ramp/Soak Profile

Features

Ramp/soak in the CLS200 includes the following features:

- Ready segment sets loop up for profile: Ready segment can control at setpoint until profile needs to run. Ready segment events set all available event outputs to desired states before profile starts.
- Up to 20 segments per profile: The controller can store up to 17 profiles, each with up to 20 segments.
- Multiple profiles run independently: Each loop can run a different profile or the same profile can be run independently on more than one loop.
- Up to two triggers per segment: Triggers are digital inputs that can be programmed to start and hold segments based on the trigger's digital state. You can use any one of the eight digital inputs for triggers. You can also use the same trigger for more than one segment or more than one profile.
- Up to four events per segment: Digital outputs controlled by the ramp/soak profile. Events outputs are set at the end of a segment. You can use any of the digital outputs that are not used for control or for the Serial DAC clock.
- Tolerance hold ensures time at temperature: Set a limit on how far the process variable can vary above or below setpoint. The profile clock only runs when the process variable is within the limit.
- Tolerance alarm indicates process not tracking setpoint: Set a maximum amount of time for the tolerance hold to wait for a process deviation before notifying the operator. The operator can acknowledge the alarm and proceed if desired.
- User-configurable time base: Program profiles to run for hours and minutes or for minutes and seconds.
- Repeatable profiles: Set any profile to repeat from 1 to 99 times or continuously.
- Fast setup for similar profiles: Set up one profile, then copy it and alter it to set up the rest.
- External reset: Select a digital input you can use to hold a profile in the "start" state and restart it.

Table 7.1 summarizes the ramp/soak features of the CLS200.

Table 7.1 Ramp/Soak Specifications

Number of possible profile	17
Number of times to repeat a profil	1 to 99 or Continuous
Number of segments per profil	1 to 20
Number of triggers per segment	Up to 2
Type of triggers	On, On Latched, Off Off Latched
Number of possible inputs for triggers	8
Number of events per segment	Up to 4
Number of possible outputs for events (At least one of these outputs must be used for control)	34

Ramp/Soak Menus

The **SETUP R/S PROFILES** menu appears between the **SETUP LOOP ALARMS** and **MANUAL I/O TEST** menus. Figure 7.2 shows the ramp/soak setup menu tree.

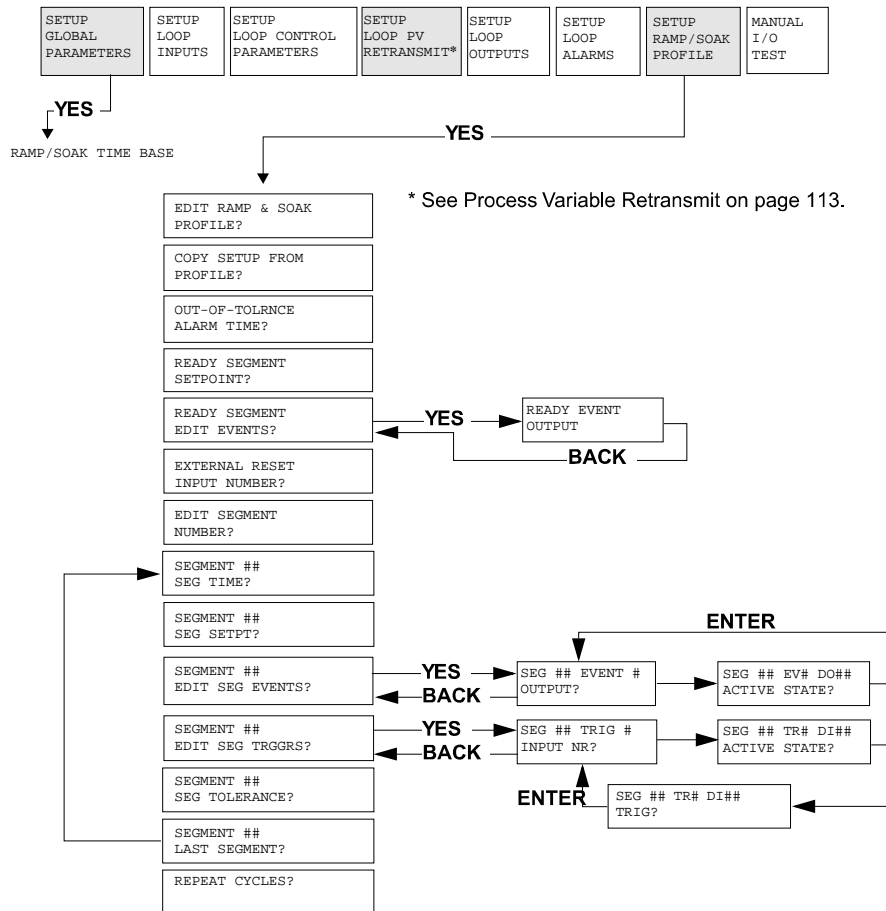


Figure 7.2 Setup Ramp/Soak Profiles Menu

Setup Global Parameters Menu

With the Ramp and Soak option an additional menu appears on the Setup Global Parameters Menu

Ramp/Soak Time Base

The RAMP/SOAK TIME BASE parameter is in the SETUP GLOBAL PARAMETERS menu.

Use this parameter to set the time base in all your ramp/soak profiles. When set to HOURS/MINS, the setpoint is updated once every minute. When set to MINS/SECS, the setpoint is updated once every second.

LOOP	PROCESS	UNITS
RAMP/SOAK TIME		
BASE? HOURS/MINS		
ALARM	SETPOINT	STATUS OUT%

Selectable values: HOURS/MINS (hours/minutes) or MINS/SECS (minutes/seconds).

Setup Ramp/Soak Profile Menu

The SETUP RAMP/SOAK PROFILE menu is located between the SETUP LOOP ALARMS and the MANUAL I/O TEST menus if the ramp/soak option is installed.

LOOP	PROCESS	UNITS
SETUP RAMP/SOAK		
PROFILE?		
ALARM	SETPOINT	STATUS OUT%

Press **YES** to set up or edit ramp/soak profiles.

Edit Ramp/Soak Profile

Choose a profile to set up or edit.

LOOP	PROCESS	UNITS
EDIT RAMP & SOAK		
PROFILE? A		
ALARM	SETPOINT	STATUS OUT%

Selectable values: A to Q (17 profiles).

Copy Setup From Profile

Set up similar profiles quickly by copying the setup of an existing profile.

LOOP	PROCESS	UNITS
COPY SETUP		
FROM PROFILE ? Q		
ALARM	SETPOINT	STATUS OUT%

Selectable values: A to Q.

Tolerance Alarm Time

Set a limit on how long the process variable can be outside the tolerance set for the segment before the tolerance alarm occurs.

LOOP	PROCESS	UNITS
A OUT-OF-TOLRNC		
ALARM TIME? 1:00		
ALARM	SETPOINT	STATUS OUT%

If the process variable does not return within the tolerance, the tolerance alarm will recur after the tolerance alarm time elapses again.

If the alarm persists, you may want to reset the profile.

Selectable values: 0:00 to 99:59 (minutes or hours, depending on the time base setting).

Ready Segment Setpoint

When you assign a profile to a loop, the profile does not start immediately. Instead, it goes to the ready segment (segment 0) and stays there until you put the profile in run mode.

You can set a setpoint, assign events, and set event states for the ready segment. Use this parameter to set the ready segment setpoint. Setting the setpoint to OFF ensures that control outputs for the loop running the profile will not come on.

LOOP	PROCESS	UNITS
A READY SEGMENT		
SETPOINT? OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: -999 to 9999, or OFF. See Setpoints and Tolerances for Various Input Types on page 144.

Ready Segment Edit Events

Press **YES** to set or edit the ready state for all outputs that are not used for control or for the Serial DAC clock. When you assign a profile, the controller starts the ready segment: it goes to the setpoint and puts all the outputs in the state you set here. The outputs stay in the states they are set to until their states are changed at the end of subsequent segments.

LOOP	PROCESS	UNITS
A READY SEGMENT		
EDIT EVENTS ?		
ALARM	SETPOINT	STATUS OUT%

Press **NO** to advance to EXTERNAL RESET INPUT NUMBER.

Ready Event Output

Press **NO** to increment the output number. Press **YES** to set the event state to **ON** or **OFF**.

This parameter appears only if you answered **YES** to READY SEGMENT EDIT EVENTS?.

LOOP	PROCESS	UNITS
A READY EVENT		
OUTPUT 15? OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: ON or OFF.

When you are done, press **BACK** to return to READY SEGMENT EDIT EVENTS, then press **NO** to go to the next parameter.

External Reset Input Number

Select one of the eight digital inputs as an external reset. When the reset input is on, the profile is set to RUN mode at the beginning of the first segment. As long as the reset input is on, the profile is held at the beginning of the first segment. Once the reset input turns off the profile begins to run.

LOOP	PROCESS	UNITS
A EXTERNAL RESET		
INPUT NUMBER? N		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 8, or N (for no external reset).

Edit Segment Number

Each profile is made up of several segments (up to 20). Choose the segment to edit.

LOOP	PROCESS	UNITS
A	EDIT SEGMENT	
	NUMBER?	15
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 20.

The first time you use this parameter, it defaults to segment 1. When you finish editing a segment, the controller goes to the next segment. This loop continues until you make a segment the last segment of a profile.

Segment Time

Enter the duration of the segment.

LOOP	PROCESS	UNITS
A	SEGMENT 11	
	SEG TIME?	000:00
ALARM	SETPOINT	STATUS OUT%

Selectable values: 0:00 to 999:59 (hours and minutes or minutes and seconds, depending on the selected time base).

Segment Setpoint

Enter the ending setpoint for the segment you are editing. For a ramp, the setpoint changes steadily over the segment time from the end setpoint of the previous segment to the value set here. For a soak, set the value here equal to the end setpoint of the previous segment.

LOOP	PROCESS	UNITS
C	SEGMENT 5	
	SEG SETPT?	OFF
ALARM	SETPOINT	STATUS OUT%

Selectable values: -999 to 3276, or OFF (no output during segment). See Setpoints and Tolerances for Various Input Types on page 144.

Edit Segment Events

You can assign up to four digital outputs, or events, to each segment. When the segment ends, the outputs you select are set to the state you specify. Press **YES** to select outputs and specify their states.

LOOP	PROCESS	UNITS
A SEGMENT 5		
EDIT SEG EVENTS?		
ALARM	SETPOINT	STATUS OUT%

Press **NO** to advance to the EDIT SEG TRGGRS parameter.

NOTE!

Events are set at the end of segments. If you want a segment to start with an event, program the event in the previous segment. You can also create a segment with zero time preceding the segment during which you want the event on.

Segment Event Output

Select a digital output for the event. Use a digital output that is not being used for PID control or for Serial DAC clock.

This parameter appears only if you answered **YES** to EDIT SEG EVENTS?

LOOP	PROCESS	UNITS
A SEG 20 EVENT 3		
OUTPUT? 30		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any digital output from 1 to 34, except those in use, or NONE (no event).

When you are done setting segment events, press **BACK** to return to EDIT SEG EVENTS, then press **NO** to go to the next parameter.

Segment Events Output States

Assign a state to the event. At the end of the segment, the output goes to the state you assign here.

This parameter appears only if you answered **YES** to EDIT SEG EVENTS?

LOOP	PROCESS	UNITS
A SEG20 EV3 DO 30		
ACTIVE STATE? OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: OFF (high) or ON (low).

Edit Segment Triggers

Each segment may have up to two triggers (digital inputs). Both triggers must be true in order for the segment to run. If a trigger is not true, the profile goes into the trigger wait state.

LOOP	PROCESS	UNITS
A	SEGMENT 15	
EDIT SEG TRGGRS?		
ALARM	SETPOINT	STATUS OUT%

Press **YES** to edit triggers for the current segment, or **NO** to advance to the SEGMENT TOLERANCE parameter.

Trigger Input Number

Assign a digital input to a segment trigger. You can assign any digital input to any trigger. You can also assign the same digital input as a trigger in more than one segment and more than one profile.

This parameter appears only if you answered **YES** to EDIT SEG TRGGRS?

LOOP	PROCESS	UNITS
A	SEG 15 TRIG 1	
INPUT NR ? NONE		
ALARM	SETPOINT	STATUS OUT%

Selectable values: Any digital input from 1 to 8, or NONE (disable trigger).

When you are done editing segment triggers, press **BACK** to return to EDIT SEG TRGGRS.

Trigger Active State

Choose the state that will satisfy the trigger condition. A trigger input is ON when pulled low by an external device. A trigger input is OFF when the digital input is high.

This parameter appears only if you answered **YES** to EDIT SEG TRGGRS?

LOOP	PROCESS	UNITS
A	SEG01 TR1 DIO8	
ACTIVE STATE?OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: OFF or ON.

Trigger Latch Status

- Choose whether the trigger is latched or unlatched.
- A latched trigger is checked once, at the beginning of a segment.
 - An unlatched trigger is checked constantly while a segment is running. If an unlatched trigger becomes false, the segment timer stops and the loop goes into trigger wait state.

When using two triggers with a segment, the following logic applies:

Table 7.2 Trigger Latch Logic

Trigger Settings	Trigger Logic
Both Triggers Latched	ORed Trigger starts a segment
Both Triggers Unlatched	ANDed Triggers start/continue a segment
One Trigger Latched, One Trigger Unlatched	<ul style="list-style-type: none">• The unlatched trigger starts/continues a segment.• The latched trigger has no effect.

This parameter appears only if you answered **YES** to EDIT SEG TRGGRS?

LOOP

PROCESS

UNITS

A SEG01 TR1 DI08

TRIG? UNLATCHED

ALARM

SETPOINT

STATUS

OUT%

Selectable values: LATCHED or UNLATCHED.

Segment Tolerance

Set a positive or negative tolerance value for each segment. Tolerance works as shown in Figure 7.3.



Figure 7.3 Positive and Negative Tolerances

If you enter a positive tolerance, the process is out of tolerance when the process variable goes above the setpoint plus the tolerance.

If you enter a negative tolerance, the process goes out of tolerance when the process variable goes below the setpoint minus the tolerance.

LOOP	PROCESS	UNITS
A SEGMENT 01		
SEG TOLERANCE? OFF		
ALARM	SETPOINT	STATUS OUT%

Selectable values: -99 to 99, or OFF (no tolerance limit).
See Setpoints and Tolerances for Various Input Types on page 144.

Last Segment

Specify whether the current segment is the last one in the profile.

LOOP	PROCESS	UNITS
A SEGMENT 01		
LAST SEGMENT? NO		
ALARM	SETPOINT	STATUS OUT%

Selectable values: NO or YES.

Repeat Cycles

Set the number of times you want a profile to repeat or cycle.

The profile returns to START mode after completing the number of cycles specified here.

LOOP	PROCESS	UNITS
A REPEAT CYCLES		
? 1		
ALARM	SETPOINT	STATUS OUT%

Selectable values: 1 to 99, or C (continuous cycling).

Setpoints and Tolerances for Various Input Types

Setpoints and tolerances are set in segments before the profile is assigned to a particular loop. When the profile is used with a loop, the INPUT TYPE and DISP FORMATS settings are applied to the following parameters:

- Ready setpoint
- Segment setpoint
- Segment tolerance

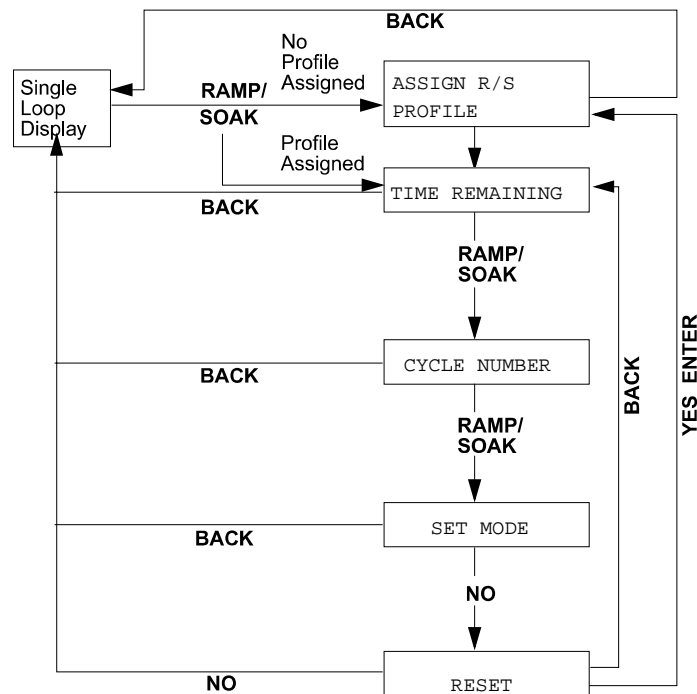
Refer to Table 7.3 to determine how these parameters are affected for the various INPUT TYPE and DISP FORMAT settings.

Table 7.3 Display Formats

Input Type	Display Format	Effect on Parameter
Thermocouples and RTDs	N/A	No decimal shift
Linear	-999 to 3000	No decimal shift
	-9999 to 30000	Setting multiplied by 10
	-999.9 to 3000.0	No decimal shift; additional tenth in display
	-99.99 to 300.00	Settings divided by 10
	-9.999 to 30.000	Settings divided by 100
	-0.9999 to 3.0000	Settings divided by 1,000

Using Ramp/Soak

This section explains how to assign a profile to a loop, how to put a profile in RUN or HOLD mode, how to reset a profile, and how to display profile statistics. Figure 7.4 shows the ramp/soak screens:

**Figure 7.4 Ramp/Soak Screens**

Ramp/Soak Displays

The single loop and bar graph displays show additional codes when ramp/soak firmware is installed.


Single Loop Display

When the controller is running a profile, the single loop display shows the ramp/soak mode where it would usually show MAN or AUTO. Table 7.4 describes the modes.

Table 7.4 Ramp/Soak Single Loop Display

Ramp/Soak Mode	Description
STRT	The profile is in the ready segment
RUN	The profile is running.
HOLD	The user has put the profile in hold mode.
TOHO	The profile is in tolerance hold.
WAIT	The profile is in trigger wait state.

This is the single loop display when a profile is running. If a tolerance alarm occurs, the controller displays a flashing T in the alarm symbol position.

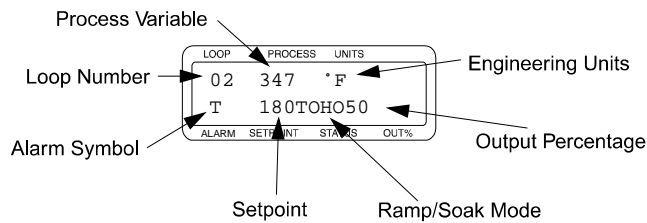

Bar Graph Display

The ramp/soak mode is also displayed on the bar graph display.

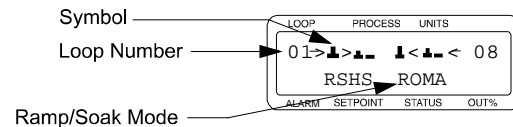


Table 7.5 describes the control status symbols used for loops with ramp/soak profiles assigned.


Table 7.5 Ramp/Soak Control Status Symbols

Ramp/Soak Symbol	Description
R	A profile is unning.
H	A profile is holding
S	A profile is in ready stat .
O	A profile is in tole ance hold.
W	A profile is in t igger wait.

Time Remaining Display


From the single loop display, press the **RAMP/SOAK** key once.

This screen shows how much time remains to complete the profile. All screens that are accessed by pressing **RAMP/SOAK** key have the same information on the top line.

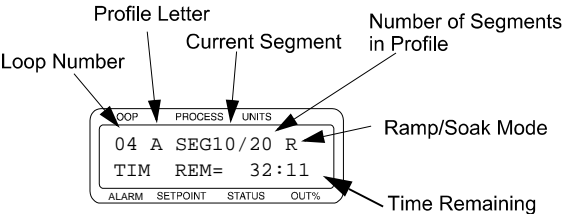


Cycle Number Display

From the single loop display, press the **RAMP/SOAK** key twice. This screen displays the number of times the profile has run out of the total number of cycles. In this example, the ramp/soak profile is on the 10th of 15 cycles to be performed.



Set Mode Display

From the single loop display, press the **RAMP/SOAK** key three times. The **SET MODE** parameter allows you to change the ramp/soak mode.



See Running a Profile on page 148 and Holding a Profile or Continuing from Hold on page 150 for instructions on changing the ramp/soak mode.

Assigning a Profile to a Loop

Use this parameter to assign a profile to a loop.

LOOP	PROCESS	UNITS
01	ASSIGN R/S	
	PROFILE?	A

ALARM	SETPOINT	STATUS	OUT%

Selectable Values: A to Q or NONE

Assigning a Profile the First Time

To assign a profile to a loop that does not have a profile currently assigned:

1. In the single loop display, switch to the loop you want to assign a profile to.
2. Press the **RAMP/SOAK** key. The **ASSIGN R/S PROFILE** parameter appears.
3. Choose one of the available profiles and press **ENTER** - or - press **BACK** to return to single loop display without sending profile data to the controller.

Assigning, Changing and Unassigning a Profile

To assign a new profile to a loop that already has one assigned:

1. In the single loop display, switch to the loop in which you want to change or unassign the profile.
2. Press the **RAMP/SOAK** key three times.
3. Press the **NO** key. You will see the **RESET PROFILE** parameter. See Resetting a Profile on page 151.
4. Press **YES** then **ENTER** to reset the profile. You will see the **ASSIGN PROFILE** parameter. See Assigning a Profile to a Loop on page 148.
5. Choose one of the available profiles or **NONE** (to unassign) and press **ENTER**.
6. To return to the single loop display without changing the profile assignments, press **BACK**.

Running a Profile

When you assign a profile, it does not start running immediately. Instead, the loop is in the **START** mode and the

READY segment (segment 0). Use the SET MODE parameter to start a profile (put it in RUN mode).

LOOP	PROCESS	UNITS
01	A	SEG01/05 R
SET MODE? RUN		
ALARM	SETPOINT	STATUS
		OUT%

Starting a Profile

You can start a profile only when it is in the READY segment.

1. In the single loop display, switch to the loop you want to start.
2. Press the **RAMP/SOAK** key three times. The SET MODE parameter appears.
3. Press **YES** and **ENTER** to start the profile. While the profile is in START mode, the only mode available is the RUN mode.

Running Several Profiles Simultaneously

To run several profiles simultaneously, follow these steps:

1. Set up the profiles so that segment 1 of each profile has the same latched trigger.
2. Assign the profiles to the appropriate loops. The loops will go to the READY segment of each profile.
3. Set each profile to RUN mode.
4. Trip the trigger.

Editing a Profile While It Is Running

You can edit a profile while it is running. Changes made to segments after the current segment will take effect when the segment is reached. Changes made to the segments that have already been completed will take effect the next time the profile is run. Do not edit the current segment. Changes to the current segment can have unexpected consequences.

Holding a Profile or Continuing from Hold

Use the SET MODE parameter to select the ramp/soak profile mode. Table 7.6 shows the available modes.

Table 7.6 Ramp/Soak Profile Modes

Current Mode	Available Mode	Description
START	RUN	Begin running the assigned profile.
HOLD	CONT	Continue from user-selected hold. The profile runs from the point when you put the profile in HOLD mode. (You cannot continue from a tolerance hold or a trigger wait.) After you choose this mode, the controller switches back to RUN mode.
RUN	HOLD	Hold the profile.

Holding a Profile

In HOLD mode, all loop parameters stay at their current settings until you change the mode or reset the profile. To put a profile into HOLD mode, follow these steps:

1. In the single loop display, switch to the loop you want to hold.
2. Press the **RAMP/SOAK** key three times to see the SET MODE parameter:

LOOP	PROCESS	UNITS		
01	A	SEG01/05 R		
SET MODE? HOLD				
AI	ARM	SETPOINT	STATUS	OUT%

3. Press **YES** to set the mode. While the profile is running, the only mode you will be able to select is HOLD.
4. Press **ENTER** to hold the profile.

Continuing a Profile

To resume or continue a profile that is holding:

1. In the single loop display, switch to the loop you want to run.
2. Press the **RAMP/SOAK** key three times. The SET MODE parameter appears.
3. Press **YES** to set the mode. While the profile is holding, the only mode you will be able to select is **CONT** (continue).
4. Press **ENTER** to run the profile.

Responding to a Tolerance Alarm

A tolerance can be set for each segment. The following occurs when the process variable goes outside this tolerance:

- The profile goes into tolerance hold
- The segment timer holds
- The loop's single loop display shows TOHO
- The tolerance alarm timer starts

If the process variable returns within the segment tolerance before the tolerance alarm time elapses, the profile returns to RUN mode and the tolerance alarm timer resets.

The following occurs if the profile remains out of tolerance for longer than the tolerance alarm time:

- The controller displays the single loop display with the tolerance alarm (a flashing T)
- The global alarm output turns on

Press **ALARM ACK** to:

- Turn off the global alarm output
- Reset the tolerance alarm timer
- Clear the tolerance alarm

If the process variable does not return within the tolerance, the tolerance alarm will recur after the tolerance alarm time elapses again.

If the alarm persists you may want to reset the profile.

Resetting a Profile

To reset a profile, follow these steps:

1. In the single loop display, switch to the loop you want to reset.
2. Press the **RAMP/SOAK** key three times to see the SET MODE parameter.
3. Press the **NO** key. The following screen will display:

LOOP	PROCESS	UNITS
01	A	SEG01/05 R
SET MODE? RESET		
ALARM	SETPOINT	STATUS
		OUT%

4. Press **YES** to reset the profile, and then **ENTER** to confirm your choice.

When you reset a profile, the following happens:

- The profile returns to the ready segment. The setpoint goes to the ready setpoint, and the event outputs go to the states you specified for the READY EVENT OUTPUT parameter in the READY SEGMENT EDIT EVENTS sub-menu (See Ready Segment Edit Events on page 139.)

- The controller shows you the `ASSIGN R/S PROFILE` screen in case you would like to assign a different profile to the loop or select `NONE` to unassign the profile.

In Case of a Power Failure

If the power fails or the controller is otherwise powered down while running a ramp/soak profile, by default the profile is set to the `START` mode when power is restored.

If the `POWER UP OUTPUT STATUS` parameter in the `SETUP GLOBAL PARAMETERS` menu is set to `MEMORY`, then after a power failure the profile will resume operation at the elapsed time of the segment that was active when the power failure occurred.

8

Tuning and Control

This chapter describes the different methods of control available with the CLS200. This chapter covers control algorithms, control methods, PID control, starting PID values and tuning instructions to help appropriately set control parameters in the CLS200 system. For more information on PID control, consult the Watlow Anafaze Practical Guide to PID.

Control Algorithms

This section explains the algorithms available for controlling a loop.

The control algorithm dictates how the controller responds to an input signal. Do not confuse control algorithms with control output signals (for example, analog or pulsed dc voltage). There are several control algorithms available:

- On/off
- Proportional (P)
- Proportional and integral (PI)
- Proportional with derivative (PD)
- Proportional with integral and derivative (PID)

P, PI or PID control is necessary when process variable cycling is unacceptable or if the load or setpoint varies.

NOTE! *For any of these control statuses to function, the loop must be in automatic mode.*

On/Off Control

On/off control is the simplest way to control a process. The controller turns an output on or off when the process variable reaches limits around the desired setpoint. This limit is adjustable; Watlow Anafaze controllers use an adjustable spread.

For example, if the setpoint is 1,000° F and the spread is 20° F, the heat output switches on when the process variable drops below 980° F and off when the process rises above 1,000° F. A process using on/off control cycles around the setpoint. Figure 8.1 illustrates this example.

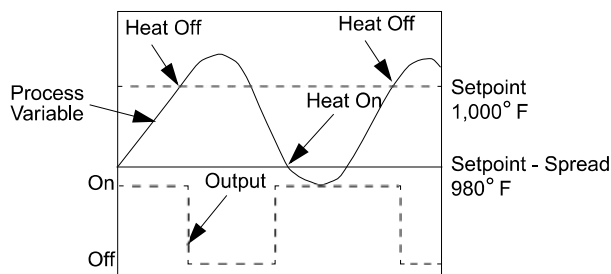


Figure 8.1 On/Off Control

Proportional Control

Proportional control eliminates cycling by increasing or decreasing the output proportionally with the process variable's deviation from the setpoint.

The magnitude of proportional response is defined by the proportional band. Outside this band, the output is either 100% or 0%. Within the proportional band the output power is proportional to the process variable's deviation from the setpoint.

For example, if the setpoint is 1,000° F and the proportional band is 20° F, the output is:

- 0% when the process variable is 1,000° F or above
- 50% when the process variable is 990° F
- 75% when the process variable is 985° F
- 100% when the process variable is 980° F or below

However, a process which uses only proportional control settles at a point above or below the setpoint; it never reaches the setpoint by itself. This behavior is known as off-set or droop.

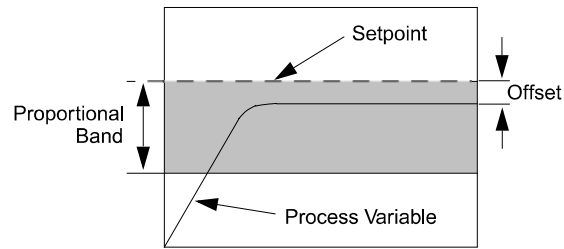


Figure 8.2 *Proportional Control*

Proportional and Integral Control

With proportional and integral control, the integral term corrects for offset by repeating the proportional band's error correction until there is no error. For example, if a process tends to settle about 5° F below the setpoint, appropriate integral control brings it to the desired setting by gradually increasing the output until there is no deviation.

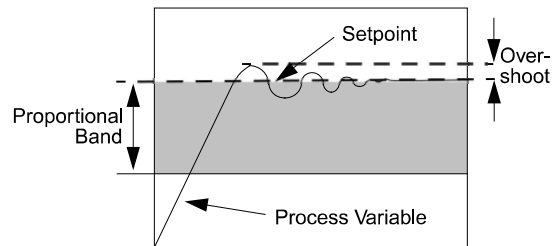


Figure 8.3 *Proportional and Integral Control*

Proportional and integral action working together can bring a process to setpoint and stabilize it. However, with some processes the user may be faced with choosing between parameters that make the process very slow to reach setpoint and parameters that make the controller respond quickly, but introduce some transient oscillations when the setpoint or load changes. The extent to which these oscillations of the process variable exceed the setpoint is called overshoot.

Proportional, Integral and Derivative Control

Derivative control corrects for overshoot by anticipating the behavior of the process variable and adjusting the output appropriately. For example, if the process variable is

rapidly approaching the setpoint from below, derivative control reduces the output, anticipating that the process variable will reach setpoint. Use it to reduce overshoot and oscillation of the process variable common to PI control. Figure 8.4 shows a process under full PID control.

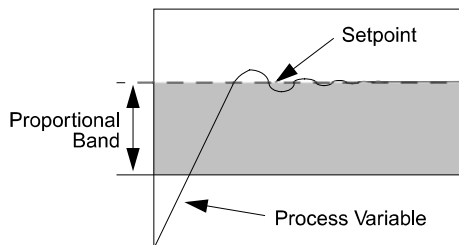


Figure 8.4 *Proportional, Integral and Derivative Control*

Heat and Cool Outputs

Each loop may have one or two outputs. Often a heater is controlled according to the feedback from a thermocouple, in which case only one output is needed.

In other applications, two outputs may be used for control according to one input. For example, a system with a heater and a proportional valve that controls cooling water flow can be controlled according to feedback from one thermocouple.

In such systems, the control algorithm avoids switching too frequently between heat and cool outputs. The on/off algorithm uses the *SPREAD* parameter to prevent such oscillations (see *Spread* on page 92). When PID control is used for one or both loop outputs, both the *SPREAD* parameter and PID parameters determine when control switches between heating and cooling.

Control Outputs

The controller provides open collector outputs for control. These outputs normally control the process using solid state relays.

Open collector outputs can be configured to drive a serial digital-to-analog converter (Serial DAC) which, in turn, can provide 0 to 5 V_{DC} (dc), 0 to 10 V_{DC} (dc) or 4 to 20 mA control signals to operate field output devices.

Output Control Signals

The following sections explain the different control output signals available.

On/Off

When on/off control is used, the output is on or off depending on the difference between the setpoint and the process variable. PID algorithms are not used with on/off control. The output variable is always off or on (0% or 100%).

Time Proportioning (TP)

With time proportioning outputs, the PID algorithm calculates an output between 0 and 100%, which is represented by turning on an output for that percent of a fixed, user-selected time base or cycle time.

The cycle time is the time over which the output is proportioned, and it can be any value from 1 to 255 seconds. For example, if the output is 30% and the cycle time is 10 seconds, then the output will be on for 3 seconds and off for 7 seconds. Figure 8.5 shows examples of time proportioning and distributed zero crossing (DZC) waveforms.

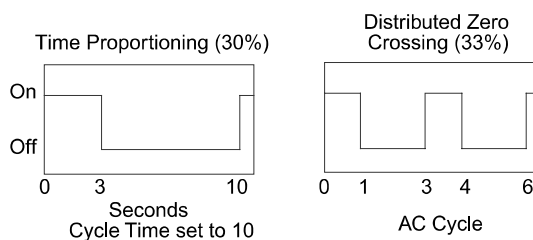


Figure 8.5 *Time Proportioning and Distributed Zero Crossing Waveforms*

Distributed Zero Crossing (DZC)

With DZC outputs, the PID algorithm calculates an output between 0 and 100%, but the output is distributed on a variable time base. For each ac line cycle, the controller decides whether the power should be on or off. There is no fixed cycle time since the decision is made for each line cycle. When used in conjunction with a zero crossing device, such as a solid state relay (SSR), switching is done only at the zero crossing of the ac line, which helps reduce electrical noise.

Using a DZC output should extend the life of heaters. Since the time period for 60 Hz power is 16.6 ms, the switching interval is very short and the power is applied uniformly. DZC should be used with SSRs. Do not use DZC output for electromechanical relays.

The combination of DZC output and a solid state relay can inexpensively approach the effect of analog, phase-angle fired control. Note, however, DZC switching does not limit the current and voltage applied to the heater as phase-angle firing does.

Three-Phase Distributed Zero Crossing (3P DZC)

This output type performs exactly the same as DZC except that the minimum switching time is three ac line cycles. This may be advantageous in some applications using three-phase heaters and three-phase power switching.

Analog Outputs

For analog outputs, the PID algorithm calculates an output between 0 and 100%. This percentage of the analog output range can be applied to an output device via a Dual DAC or a Serial DAC.

Output Filter

The output filter digitally smooths PID control output signals. It has a range of 0 to 255 scans, which gives a time constant of 0 to 170 seconds for a CLS216, 0 to 85 seconds for a CLS208 or 0 to 43 seconds for a CLS204. Use the output filter if you need to filter out erratic output swings due to extremely sensitive input signals, like a turbine flow signal or an open air thermocouple in a dry air gas oven.

The output filter can also enhance PID control. Some processes are very sensitive and would otherwise require a large proportional band, making normal control methods ineffective. Using the output filter allows a smaller proportional band to be used, achieving better control.

Also, use the filter to reduce the process output swings and output noise when a large derivative is necessary, or to make badly tuned PID loops and poorly designed processes behave properly.

Reverse and Direct Action

With reverse action an increase in the process variable causes a decrease in the output. Conversely, with direct action an increase in the process variable causes an increase in the output. Heating applications normally use reverse action and cooling applications usually use direct action.

Setting Up and Tuning PID Loops

After installing your control system, tune each control loop and then set the loop to automatic control. When tuning a loop, choose PID parameters that will best control the process. This section gives PID values for a variety of heating and cooling applications.

NOTE! *Tuning is a slow process. After adjusting a loop, allow about 20 minutes for the change to take effect.*

Proportional Band (PB) Settings

Table 8.1 shows proportional band settings for various temperatures in degrees Fahrenheit or Celsius.

Table 8.1 Proportional Band Settings

Temperature Setpoint	PB	Temperature Setpoint	PB	Temperature Setpoint	PB
-100 to 99	20	1100 to 1199	75	2200 to 2299	135
100 to 199	20	1200 to 1299	80	2300 to 2399	140
200 to 299	30	1300 to 1399	85	2400 to 2499	145
300 to 399	35	1400 to 1499	90	2500 to 2599	150
400 to 499	40	1500 to 1599	95	2600 to 2699	155
500 to 599	45	1600 to 1699	100	2700 to 2799	160
600 to 699	50	1700 to 1799	105	2800 to 2899	165
700 to 799	55	1800 to 1899	110	2900 to 2999	170
800 to 899	60	1900 to 1999	120	3000 to 3099	175
900 to 999	65	2000 to 2099	125	3100 to 3199	180
1000 to 1099	70	2100 to 2199	130	3200 to 3299	185

As a general rule, set the proportional band to 10% of the setpoint below 1000° and 5% of the setpoint above 1000°. This setting is useful as a starting value.

Integral Settings

The controller's integral parameter (TI) is set in seconds per repeat. Some other products use an integral term called reset, in units of repeats per minute. Table 8.2 shows integral settings versus reset settings.

Table 8.2 Integral Term and Reset Settings

Integral (Seconds/Repeat)	Reset (Repeats/Minute)	Integral (Seconds/Repeat)	Reset (Repeats/Minute)
30	2.0	210	0.28
45	1.3	240	0.25
60	1.0	270	0.22
90	0.66	300	0.20
120	0.50	400	0.15
150	0.40	500	0.12
180	0.33	600	0.10

As a general rule, use 60, 120, 180 or 240 as a starting value for the integral.

Derivative Settings

The controller's derivative parameter (TD) is programmed in seconds. Some other products use a derivative term called rate programmed in minutes. Use the table or the formula to convert parameters from one form to the other. Table 8.3 shows derivative versus rate. $\text{Rate} = \text{Derivative} / 60$.

Table 8.3 Derivative Term Versus Rate

Derivative (seconds)	Rate (minutes)	Derivative (seconds)	Rate (minutes)
5	0.08	35	0.58
10	0.16	40	0.66
15	0.25	45	0.75
20	0.33	50	0.83
25	0.41	55	0.91
30	0.50	60	1.0

As a general rule, set the derivative to 15% of integral as a starting value.

NOTE! *While the basic PID algorithm is well defined and widely recognized, various controllers implement it differently. Parameters may not be taken from one controller and applied to another with optimum results even if the above unit conversions are performed.*

General PID Constants by Application

This section gives PID values for many applications. They are useful as control values or as starting points for PID tuning.

Proportional Band Only (P)

Set the proportional band to 7% of the setpoint.
(Example: Setpoint set to 450, proportional band set to 31).

Proportional with Integral (PI)

- Set the proportional band to 10% of setpoint.
(Example: Setpoint set to 450, proportional band set to 45).
- Set integral to 60.
- Set derivative to Off.
- Set the output filter to 2.

PI with Derivative (PID)

- Set the proportional band to 10% of the setpoint.
(Example: Setpoint set to 450, proportional band set to 45).
- Set the integral to 60.
- Set the derivative to 15% of the integral.
(Example: Integral set to 60, derivative set to 9).
- Set the output filter to 2.

Table 8.4 on page 162 shows general PID constants by application.

Table 8.4 General PID Constants

Application	Proportional Band	Integral	Derivative	Filter	Output Type	Cycle Time	Action
Electrical heat with solid state relays	50°	60	15	4	DZC	-	Reverse
Electrical heat with electromechanical relays	50°	60	15	6	TP	20	Reverse
Cool with solenoid valve	70°	500	90	4	TP	10	Direct
Cool with fans	10°	Off	10	4	TP	10	Direct
Electric heat with open heat coils	30°	20	Off	4	DZC	-	Reverse
Gas heat with motorized valves	60°	120	25	8	Analog	-	Reverse
Setpoint>1200	100°	240	40				

Troubleshooting and Reconfiguring

When There is a Problem

The controller is only one part of your control system. Often, what appears to be a problem with the controller is really a problem with other equipment, so check these things first:

- Controller is installed correctly. (See Chapter 2, Installation for help.)
- Sensors, such as thermocouples and RTDs, are installed correctly and working.

NOTE!

If you suspect your controller has been damaged, do not attempt to repair it yourself, or you may void the warranty.

If the troubleshooting procedures in this chapter do not solve your system's problems, call Application Engineering for additional troubleshooting help. If you need to return the unit to Watlow Anafaze for testing and repair, Customer Service will issue you an RMA number. See Returning Your Unit on page 164.



CAUTION!

Before trying to troubleshoot a problem by replacing your controller with another one, first check the installation. If you have shorted sensor inputs to high voltage lines or a transformer is shorted out, and you replace the controller, you will risk damage to the new controller.

If you are certain the installation is correct, you can try replacing the controller. If the second unit works correctly, then the problem is specific to the controller you replaced.

Returning Your Unit

Before returning a controller, contact your supplier or call Watlow for technical support.

Controllers purchased as part of a piece of equipment must be serviced or returned through the equipment manufacturer. Equipment manufacturers and authorized distributors should call customer service to obtain a return materials authorization (RMA) number. Shipments without an RMA will not be accepted. Other users should contact their suppliers for instructions on returning products for repair.

Troubleshooting Controllers

A problem may be indicated by one or more of several types of symptoms:

- A process or deviation alarm
- A failed sensor alarm
- A system alarm
- Unexpected or undesired behavior

The following sections list symptoms in each of these categories and suggest possible causes and corrective actions.

Process and Deviation Alarms

When a process or deviation alarm occurs, the controller switches to the single loop display for the loop with the alarm and displays the alarm code on the screen. Software such as AnaWin or WatView displays a message on the alarm screen and logs the alarm in the event log.

Table 9.1 Controller Alarm Codes for Process and Deviation Alarms

Code	Alarm	Description
HP	High Process	Process variable has risen above the high process alarm setpoint.
HD	High Deviation	Process variable has risen above the setpoint by more than the deviation alarm value.
LD	Low Deviation	Process variable has dropped below the setpoint by more than the deviation alarm value.
LP	Low Process	Process variable has dropped below the low process alarm setpoint.

Responding to Process and Deviation Alarms

In a heating application, a low process or low deviation alarm may indicate one of the following:

- The heater has not had time to raise the temperature.
- The load has increased and the temperature has fallen.
- The control status is set to manual instead of automatic.
- The heaters are not working due to a hardware failure.
- The sensor is not placed correctly and is not measuring the load's temperature.
- The deviation limit is too narrow.
- The system is so poorly tuned that the temperature is cycling about setpoint by more than the alarm limit.

NOTE! *In cooling applications, similar issues cause high process and high deviation alarms.*

In a heating application, a high process alarm or high deviation alarm may indicate one of the following:

- The setpoint and high process limit have been lowered and the system has not had time to cool to within the new alarm limit.
- The control status is set to manual and the heat output is greater than 0%.
- The load has decreased such that the temperature has risen.
- The heater is full-on due to a hardware failure.
- The system is so poorly tuned that the temperature is cycling about setpoint by more than the alarm limit.

Resetting a Process or Deviation Alarm

Your response to an alarm depends upon the alarm type setting, as explained in Table 9.2 below.

Table 9.2 Operator Response to Alarms

Alarm Type	Operator Response
Control	The operator does not need to do anything. The alarm clears automatically when the process variable returns within limits.
Alarm	Acknowledge the alarm by pressing ALARM ACK on the controller or by using software. The alarm clears after the process variable returns within the limits and the operator has acknowledged it.

Failed Sensor Alarms

When a failed sensor alarm occurs, the controller switches to the single loop display for the loop with the alarm and displays an alarm code on the screen. AnaWin or WatView displays a message on the alarm screen and logs the alarm in the event log.

Table 9.3 Failed Sensor Alarm Codes

Code	Alarm	Description
FS	Failed Sensor	Open thermocouple.
RT	Reversed Thermocouple	Temperature changed in the opposite direction than expected.
ST	Shorted Thermocouple	Temperature failed to change as expected.
RO	RTD Open	Positive or negative lead is broken or disconnected.
RS	RTD Shorted	Positive and negative leads are shorted.

A failed sensor alarm clears once it has been acknowledged and the sensor is repaired.

System Alarms

If the controller detects a hardware problem, it displays a message. The message persists until the condition is corrected.

Table 9.4 Hardware Error Messages

Message	Possible Cause	Recommended Action
LOW POWER	Power supply failed.	See Low Power on page 168.
BATTERY DEAD	RAM battery is dead.	See Battery Dead on page 168.
AW	Ambient warning. Ambient temperature exceeds operating limits by less than 5° C (9° F).	See Ambient Warning on page 168.
H/W AMBIENT FAILURE	Ambient temperature exceeds operating limits by 5° C (9° F). Reference voltage (5V _I [dc]) shorted to common. Hardware failed due to excessive voltage on inputs.	See H/W Ambient Failure on page 169.
H/W GAIN FAILURE	Hardware failed due to excessive voltage on inputs.	See H/W Gain or Offset Failure on page 170.
H/W OFFSET FAILURE	Hardware failed due to excessive voltage on inputs.	See H/W Gain or Offset Failure on page 170.

Other Behaviors

The following table indicates potential problems with the system or controller and recommends corrective actions.

Table 9.5 Other Symptoms

Symptom	Possible Causes	Recommended Action
Indicated temperature not as expected	Controller not communicating Sensor wiring incorrect Noise	See <i>Checking Analog Inputs</i> on page 171.
CLS 200 display is not lit	Power connection incorrect	Check wiring and service. See <i>Wiring the Power Supply</i> on page 25.
	No EPROM or bad EPROM	Replace the EPROM. See <i>Replacing the EPROM</i> on page 176.
	CLS200 damaged or failed	Return the CLS200 for repair. See <i>Returning Your Unit</i> on page 164.
CLS200 display is lit, but keys do not work	Keypad is locked	See <i>Keys Do Not Respond</i> on page 170.
	CLS200 damaged or failed	Return the CLS200 for repair. See <i>Returning Your Unit</i> on page 164.
Control status of one or more loops changes from auto-manual to manual	Failed sensor	Check the display or software for a failed sensor message.
	Digital job select feature is enabled and has changed jobs	Set <code>JOB SELECT DIG INPUTS</code> to NONE. This parameter is only accessible using the controller's keypad and display. See <i>Job Select Digital Inputs</i> on page 76.
All loops are set to manual 0%	Power is intermittent	Check wiring and service. See <i>Wiring the Power Supply</i> on page 25. Use a separate dc supply for the controller. Provide backup power (UPS). Set <code>POWER UP OUTPUT STATUS</code> to MEMORY. See <i>Power Up Output Status</i> on page 78.
	Analog reference voltage is overloaded	Disconnect any wiring from the +5V Ref connection on TB1.
	Hardware failure	Check the controller front panel for a hardware alarm. See <i>System Alarms</i> on page 166.
Controller does not behave as expected	Corrupt or incorrect values in RAM	Perform a NO -key reset. See <i>NO-Key Reset</i> on page 176.

Corrective and Diagnostic Procedures

The following sections detail procedures you may use to diagnose and correct problems with the controller.

Low Power

If the controller displays LOW POWER or the display is not lit:

1. Acknowledge the alarm.
2. If the error message remains, turn the power to the controller off, then on again.
3. If the error message returns, check that the power supplied to the controller is at least 12.0V $\overline{\text{dc}}$ @ 1 A. See Wiring the Power Supply on page 25.
4. If the error message returns again, make a record of the settings if possible (using software). Then, perform a **NO**-key reset (see NO-Key Reset on page 176).
5. If the error is not cleared, contact your supplier for further troubleshooting guidance. See Returning Your Unit on page 164.

Battery Dead

The dead battery alarm indicates that the CLS200 battery is not functioning correctly or has low power or no power. If this alarm occurs, parameters have reset to the factory default settings.

NOTE!

The controller will retain its settings when powered. The battery is required to keep the settings in memory only when the controller is powered down.

If the controller displays BATTERY DEAD:

1. Acknowledge the alarm.
2. If the error message remains, turn the power to the controller off, then on again.
3. If the error message returns when power is restored, perform a **NO**-key reset. See NO-Key Reset on page 176.
4. If the error is not cleared, contact your supplier for further troubleshooting guidelines. See Returning Your Unit on page 164.

Ambient Warning

The ambient warning alarm indicates that the ambient temperature of the controller is too hot or too cold. Ambient warning occurs when the controller's temperature is in the

range of 23 to 32° F or 122 to 131° F (-5 to 0° C or 50 to 55° C). The operating limits are 32 to 122° F (0 to 50° C).

If the controller displays **AW** in the lower left corner of the display:

1. Acknowledge the alarm.
2. If the error message remains, check the ambient air temperature near the controller. Adjust ventilation, cooling or heating to ensure that the temperature around the controller is 32 to 122° F (0 to 50° C). If the unit is functioning correctly, the error will clear when the ambient temperature is within range and the alarm has been acknowledged.
3. If the ambient temperature is within range and the error persists:
 - a) Turn the power to the controller off.
 - b) Remove the boards from the CLS200 housing. See Replacing the EPROM on page 176.
 - c) Reseat the boards and turn the power on.
4. If the error persists, make a record of the settings then perform a **NO**-key reset. See NO-Key Reset on page 176.
5. If the error is not cleared, contact your supplier for further troubleshooting guidelines. See Returning Your Unit on page 164.

H/W Ambient Failure

The hardware ambient failure alarm indicates that the ambient sensor in the CLS200 is reporting that the temperature around the controller is outside of the acceptable range of 0 to 50° C. This error can also occur when there is a hardware failure.

If the controller displays **H/W AMBIENT FAILURE**:

1. Acknowledge the alarm.
2. If the error message remains, check the ambient air temperature near the controller. Adjust ventilation, cooling or heating to ensure that the temperature around the controller is 0 to 50° C. If the unit is functioning correctly, the error will clear automatically when the ambient temperature is within range and the alarm has been acknowledged.
3. Remove any connections to the 5V $\overline{\text{m}}$ (dc) reference (TB1-18) on the back of the controller. If this corrects the problem, there was an error in the wiring. You may need to consult technical support to determine the correct wiring.
4. If the ambient temperature is within range and the error persists:

- a) Turn the power to the controller off.
 - b) Remove the boards from the CLS200 housing.
 - c) Reseat the boards and turn power on.
5. If the error persists, make a record of the settings, then perform a **NO**-key reset. See NO-Key Reset on page 176.
 6. If the error is not cleared, contact your supplier for further troubleshooting guidelines. See Returning Your Unit on page 164.

NOTE! *If the controller has failed, it is likely that it was damaged by excessive voltage or noise. Before replacing the controller, troubleshoot for noise and ground loops.*

H/W Gain or Offset Failure

If the controller displays H/W GAIN FAILURE or H/W OFFSET FAILURE:

1. Acknowledge the alarm.
2. If the error message remains, turn the power to the controller off, then on again.
3. If the H/W Gain error is reported, remove any connections to the 5V_{DC} (dc) reference (TB1-18) on the back of the controller. If this corrects the problem, there was an error in the wiring. You may need to consult technical support to determine the correct wiring.
4. If the error persists, make a record of the settings (using software), then perform a **NO**-key reset. See NO-Key Reset on page 176.
5. If the error is not cleared, contact your supplier for further troubleshooting guidelines. See Returning Your Unit on page 164.

NOTE! *If the controller has failed, it is likely that it was damaged by excessive voltage or noise. Before replacing the controller, troubleshoot for noise and ground loops.*

Keys Do Not Respond

If the CLS200 seems to function but the **MAN/AUTO**, **CHNG SP**, **ALARM ACK**, and **RAMP/SOAK** keys do not respond when you press them, the keypad is probably locked. Unlock the keypad according to the instructions in Keyboard Lock Status on page 78.

Checking Analog Inputs

If the process variable displayed in the software and on the controller do not agree:

1. Verify that the controller is communicating.
2. If the process variable indicated on the controller display is incorrect:
 - a) Verify that you have selected the correct input type for the affected loops.
 - b) Verify that sensors are properly connected.
3. If the sensors are correctly connected, with power on to the heaters check for high common mode voltage:
 - a) Set a voltmeter to measure volts ac.
 - b) Connect the negative lead to a good earth ground.
 - c) One by one, check each input for ac voltage by connecting the positive lead on the voltmeter to the positive and negative sensor input connections. The process variable should indicate ambient temperature. If it does not, contact your supplier to return the unit for repair. See *Returning Your Unit* on page 164.

NOTE!

Noise in excess of 1V~ (ac) should be eliminated by correctly grounding the CLS200. See *Wiring the Power Supply* on page 25.

4. Verify the sensors:
 - For thermocouples, remove the thermocouple leads and use a digital voltmeter to measure the resistance between the positive and negative thermocouple leads. A value of 2 to 20 Ω is normal. Readings in excess of 200 Ω indicate a problem with the sensor.
 - For RTDs, measure between the IN+ and IN- terminals of TB1. RTD inputs should read between 20 and 250 Ω .
5. To verify that the controller hardware is working correctly, check any input (except the pulse input or an RTD) as follows:
 - a) Disconnect the sensor wiring.
 - b) Set the INPUT TYPE to J T/C in the SETUP LOOP INPUT menu.
 - c) Place a short across the input. The controller should indicate the ambient temperature on the channel you are testing.

Earth Grounding

If you suspect a problem with the ac ground or a ground loop:

- Measure for ac voltage between ac neutral and panel chassis ground. If ac voltage above 2V~ (ac) is observed, then there may be a problem with the ac power wiring. This should be corrected per local electrical codes.
- With ac power on, measure for ac voltage that may be present between control panels' chassis grounds. Any ac voltage above 2V~ (ac) may indicate problems with the ac ground circuit.
- Check for ac voltage on thermocouples with the heater power on. A control output providing power to the heaters will increase the ac voltage if there is heater leakage and an improper grounding circuit. Measure from either positive or negative thermocouple lead to ac ground. AC voltage above 2V~ (ac) may indicate the ground lead is not connected to the CLS200 TB2 ground terminal.

If the above tests indicate proper ac grounding but the controller is indicating incorrect temperatures or process readings:

- Verify which type of sensor is installed and that the `INPUT TYPE` parameter is set accordingly.
- For an RTD or linear voltage or current input, check that the correct input scaling resistors are installed (page 180) and check the input scaling parameter settings (page 86).
- If readings are erratic, look for sources of electrical noise. See Noise Suppression on page 22.
- Eliminate possible ground loops. See Ground Loops on page 24.
- Contact your supplier for further troubleshooting guidance. See Returning Your Unit on page 164.

Checking Control Outputs

To check control outputs:

- Set the loop you want to check to manual mode.
- Set the output power percentage to the desired level.
- Set the output type to ON/OFF or TP (see Chapter 4, Setup).

If the control output is not connected to an output device like an SSR, connect an LED in series with a 1 k Ω resistor from +5V to the output. (Tie the anode of the LED to +5V.) The LED should be off when the output is 0% and on when the output is 100%.

Testing Control Output Devices

Connect the solid state relay (SSR) control terminals to the CLS200 control output and connect a light bulb (or other load that can easily be verified) to the output terminals on the SSR. Put the loop in manual mode and set the output to 100%. The ac load should turn on.

Do not attempt to measure ac voltage at the SSR's output terminals. Without a load connected, the SSR's output terminals do not turn off. This makes it difficult to determine whether the SSR is actually working. Measure the voltage across a load or use a load that can be visually verified, such as a light bulb.

Testing the TB18 and TB50

1. Turn on power to the controller.
2. Measure the +5V $\overline{\text{dc}}$ supply at the TB18 or TB50. The voltage should be +4.75 to +5.25V $\overline{\text{dc}}$:
 - a) Connect the voltmeter's common lead to the TB18 screw terminal 2 or TB50 screw terminal 3.
 - b) Connect the voltmeter's positive lead to the TB18 or TB50 screw terminal 1.

Testing Control and Digital Outputs

1. Turn off power to the controller.
2. Disconnect any process output wiring on the output to be tested.
3. Connect a 500 Ω to 100 k Ω resistor between the +5V terminal (TB18 or TB50 screw terminal 1) and the output terminal you want to test.
4. Connect the voltmeter's common lead to the output terminal, and connect the voltmeter's positive lead to the +5V terminal.
5. Restore power to the controller.
6. If you are testing a PID control output, use the **MAN/AUTO** key to turn the output on (100%) and off (0%). When the output is off, the output voltage should be less than 1V. When the output is on, the output voltage should be between +3.75 and +5.25V.
7. If you are testing a digital output not used for control, use the **MANUAL I/O TEST** menu to turn the output on and off. See Manual I/O Test on page 103.

Testing Digital Inputs

1. Turn off power to the controller.
2. Disconnect any system wiring from the input to be tested.

3. Restore power to the controller.
4. Go to the `DIGITAL INPUTS` parameter in the `MANUAL I/O TEST` menu. This parameter shows whether the digital inputs are H (high, or open) or L (low, or closed).
5. Attach a wire to the terminal of the digital input to test. When the wire is connected only to the digital input terminal, the `DIGITAL INPUTS` parameter should show that the input is H (high). When you connect the other end of the wire to controller common (TB50 terminal 3), the `DIGITAL INPUTS` parameter should show that the input is L (low).

Additional Troubleshooting for Computer Supervised Systems

These four elements must work properly in a computer-supervised system:

- The controller
- The computer and its EIA/TIA-232 or EIA/TIA-485 serial interface
- The EIA/TIA-232 or EIA/TIA-485 communication lines
- The computer software

For troubleshooting, disconnect the communications line from the computer and follow the troubleshooting steps in the first section of this chapter. The next few sections explain troubleshooting for the other elements of computer supervised systems.

Computer Problems

If you are having computer or serial interface problems, check the following:

- Check your software manual and make sure your computer meets the software and system requirements.
- Check the communications interface, cables, and connections. Make sure the serial interface is set according to the manufacturer's instructions.
- To test an EIA/TIA-232 interface, purchase an EIA/TIA-232 tester with LED indicators. Attach the tester between the controller and the computer. When the computer sends data to the controller, the tester's TX LED should blink. When the computer receives data from the controller, the RX LED should blink.
- You can also connect an oscilloscope to the transmit or receive line to see whether data is being sent or received. If the serial port does not appear to be working, the software setup may need to be modified or the hardware may need to be repaired or replaced.

Communications

Most communications problems are due to incorrect wiring or incorrectly set communications parameters. Therefore, when there is a problem, check the wiring and communications settings first. Verify the following:

- **Communications port:** Software must be configured to use the communications port to which the controller is connected.
- **Software protocol:** Set the controller to MOD (Modbus) for AnaWin or WatView, ANA (Anafaze) for Anasoft or Anascan.
- **Controller address:** Configure software to look for the controller at the correct address. In a multiple-controller installation, each controller must have a unique address.
- **Baud rate:** Software and controller must be set the same.
- **Error checking (ANA protocol only):** Software and controller must be set the same (CRC or BCC).
- **Hardware protocol:** PC and controller must use the same protocol, or a converter must be used. The controller is typically configured for EIA/TIA-232 when it is shipped. See Changing Communications on page 179 to change between EIA/TIA-232 and EIA/TIA-485. To communicate with more than one controller, or when more than 50 feet of cable is required, use EIA/TIA-485. Even for a single controller, you may use EIA/TIA-485 and an optically isolating converter to eliminate ground loops.
- **Converter:** Make sure that the EIA/TIA-232-to-485 converter is powered, configured and wired correctly.
- **Cables:** Check continuity by placing a resistor across each pair of wires and measuring the resistance with an ohmmeter at the other end.

Ground Loops

Many PC communications ports have their common wires connected to chassis ground. Once connected to the controller, this can provide a path to ground for current from the process that can enter the controller through a sensor (such as a thermocouple). This creates a ground loop that can affect communications and other controller functions. To eliminate a ground loop, either use an optically isolated communications adapter or take measures to ensure that sensors and all other connections to the controller are isolated and not conducting current into the unit.

Software Problems

If the controller and serial communications connections seem to be working correctly, but you are still not getting the result you expect, consult the resources you have available for the software program you are using.

WatView, AnaWin or Anasoft

Consult the AnaWin or Anasoft User's Guide for help with the user interface. WatView comes with a context-sensitive help explaining operation of the software. Context-sensitive means that you can press the F1 key to get help related to the part of the program you are using.

User-Written Software

You can request a communications specification from Watlow Anafaze if you want to write your own software. Watlow Anafaze will answer technical questions that arise during your software development process, but does not otherwise support user-developed or third-party software in any way.

NO-Key Reset

Performing a **NO**-key reset returns all controller settings to their defaults. All recipes are also cleared.

To perform a **NO**-key reset:

1. Make a record of the controller's settings.
2. Turn off power to the unit.
3. Press and hold the **NO** key on the keypad.
4. Turn on power to the controller still holding the **NO** key.
5. When prompted **RESET WITH DEFAULTS?**, release the **NO** key and press the **YES** key.
6. If you do not see the **RESET WITH DEFAULTS?** prompt or do not get a chance to press **YES**, repeat the procedure.
7. Restore the controller settings.

If you have a stand-alone system, there is no way to recover your original parameters. If you have a computer-supervised system with AnaWin or Anasoft, a copy of your parameters can be saved to a job file.

Replacing the EPROM

Replacing the EPROM involves minor mechanical disassembly and reassembly of the controller. You will need a Phillips screwdriver and a small flathead screwdriver.

**CAUTION!**

The EPROM and other components are sensitive to damage from electrostatic discharge (ESD). To prevent ESD damage, use an ESD wrist strap or other antistatic device.

NOTE!

Replacing the EPROM with another version results in full erasure of RAM. Make a record of all parameters before changing the EPROM.

1. Make a record of system parameters.
2. Power down the controller.
3. Remove the four screws from the sides of the controller front panel.
4. Remove the electronics assembly from the case, as shown in Figure 9.1.

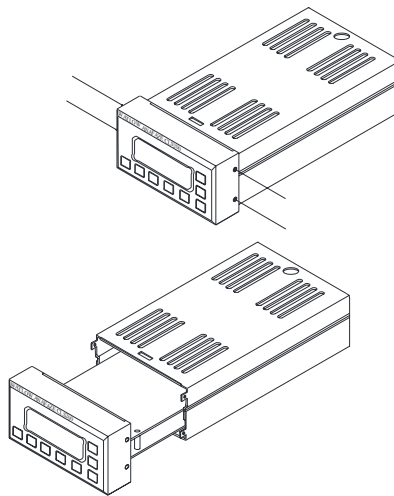


Figure 9.1 Removal of Electronics Assembly from Case

5. Unscrew the four screws at the corners of the top board and carefully unplug this board to access the bottom board (processor board). Figure 9.2 shows the screws to remove:

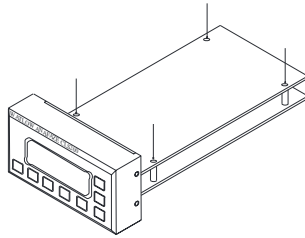


Figure 9.2 Screws Locations on PC Board

6. Locate the EPROM on the circuit board. The EPROM is a 32-pin socketed chip that is labeled with the model, version and checksum.

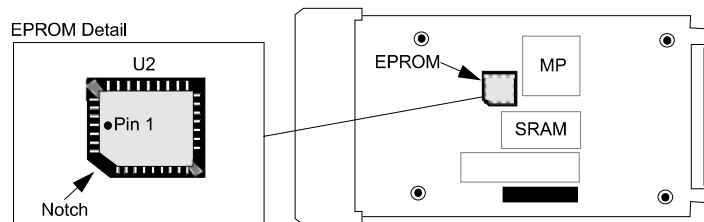


Figure 9.3 EPROM Location

7. Remove the existing EPROM from its socket with an IC extraction tool or a jeweler's flathead screwdriver.

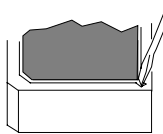


Figure 9.4 Remove EPROM

8. Carefully insert the new EPROM into the EPROM socket. Make sure that the chip is oriented so that its notch fits in the corresponding corner of the socket.
9. Reverse steps 2 through 4 to reassemble the unit.
10. Power up the controller.
11. Re-enter parameters.

Changing Communications

To switch between EIA/TIA-232 and EIA/TIA-485, change the jumpers as shown in Figure 9.5.

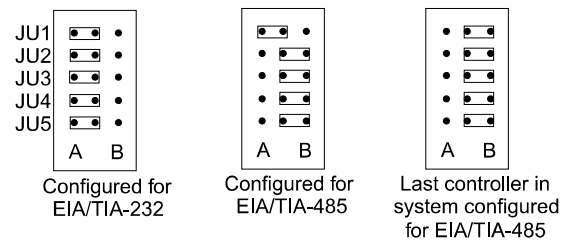


Figure 9.5 Jumper Configurations

You will need tweezers and a Phillips head screwdriver to switch between EIA/TIA-232 and EIA/TIA-485. Follow these steps:

1. Power down the unit.
2. Remove the controller's metal casing. See Replacing the EPROM on page 176 for step-by-step instructions.
3. Find jumpers JU2, JU3, JU4, and JU5 on the board.
4. Use tweezers to carefully grasp the jumpers and gently slide them off the pins.
5. Use tweezers to gently slide jumpers JU2, JU3, JU4 and JU5 onto the correct pins (see Figure 9.5).
6. If you are configuring the controller as the last device on an EIA/TIA-485 network, move JU1 to the B position.
7. Reassemble the controller.

Installing Scaling Resistors

Resistors are installed for all inputs on the CLS200. Inputs with signal ranges between -10 and +60 mV use 0 Ω resistors in the RC position only. All other input signals require special input scaling resistors.

**CAUTION!**

Scaling resistors are soldered to the circuit board. Only qualified technicians should attempt to install or remove these components. Improper techniques, tools or materials can result in damage to the controller that is not covered by the warranty.

CLS204 and CLS208 Input Circuit

The CLS204 and CLS208 can accept differential thermocouple, mV $\overline{\text{dc}}$, V $\overline{\text{dc}}$, mA $\overline{\text{dc}}$ and RTD inputs. Unless ordered with special inputs these controller accept only signals within the standard range -10 to 60mV $\overline{\text{dc}}$.

To accommodate other signals, the input circuit must be modified. When configured for thermocouple inputs, 0 Ω resistors are installed in all RC locations. To accommodate voltage signals outside the standard range, milliamp current signals or RTDs, resistors are added or replaced to scale the signals to the standard range. These resistor can be installed by Watlow Anafaze or by a qualified electronics technician using scaling resistors supplied by Watlow Anafaze.

Figure 9.6 shows the input circuit for one differential, analog input. See CLS204 and CLS208 Current Inputs on page 181 through CLS204 and CLS208 RTDs and Thermistors on page 183 for specific instructions and resistor values for voltage, current and RTD inputs.

NOTE!

When adding your own scaling resistors to the controller, for voltage and RTD inputs you will have to carefully remove one of the RC resistors in order to install the resistor listed in the table.

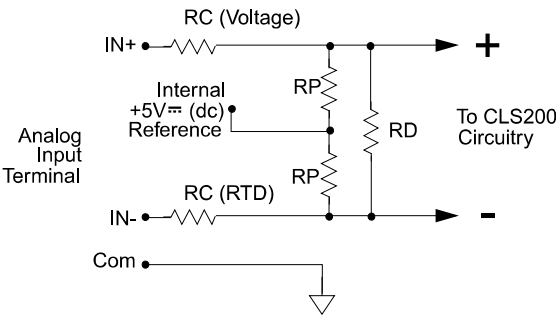


Figure 9.6 CLS204 and CLS208 Input Circuit

CLS204 and CLS208 Current Inputs

For each current input on a CLS204 or CLS208 controller you must install a resistor. The value of the resistor must be correct for the expected input range. Install the resistor in the listed resistor pack (RP) location. Note the resistor pack locations have three through holes. Install the resistor as shown in the illustration below.

Table 9.6 Resistor Values for CLS204 and CLS208 Current Inputs

Input Range	Resistor Value RD
0 to 10 mA	6.0 Ω
0 to 20 mA	3.0 Ω

Resistor tolerance: ±0.1%




Table 9.7 Resistor Locations for CLS204 and CLS208 Current Inputs

Loop	Resistor Location RD	Loop	Resistor Location RD
1	RP1	5	RP5
2	RP2	6	RP6
3	RP3	7	RP7
4	RP4	8	RP8

CLS204 and CLS208 Voltage Inputs

For each voltage input on a CLS204 and CLS208 controller you must install two resistors. The resistances must be correct for the expected input range. Note the resistor pack (RP) locations have three through holes. Install the RD resistor as indicated in the illustration below.

Table 9.8 Resistor Values for CLS204 and CLS208 Voltage Inputs

Input Range	Resistor Values	
	RC	RD
0 to 100mV $\overline{=}$ (dc)	499 Ω	750 Ω
0 to 500mV $\overline{=}$ (dc)	5.49 k Ω	750 Ω
0 to 1V $\overline{=}$ (dc)	6.91 k Ω	442.0 Ω
0 to 5V $\overline{=}$ (dc)	39.2 k Ω	475.0 Ω
0 to 10V $\overline{=}$ (dc)	49.9 k Ω	301.0 Ω
0 to 12V $\overline{=}$ (dc)	84.5 k Ω	422.0 Ω

Resistor tolerance: $\pm 0.1\%$




Table 9.9 Resistor Locations for CLS204 and CLS208 Voltage Inputs

Loop	Resistor Locations	
	RC	RD
1	R58	RP1
2	R56	RP2
3	R54	RP3
4	R52	RP4
5	R50	RP5
6	R48	RP6
7	R46	RP7
8	R44	RP8

CLS204 and CLS208 RTDs and Thermistors

For each RTD or thermistor input on a CLS204 or CLS208 controller, you must install three resistors: RA, RB, and RC. The resistance must be correct for the expected input range. RA and RB are a matched pair of resistors. Install them in the resistor pack (RP) locations as shown in the illustration below.

Table 9.10 *Resistor Values for CLS204/208 RTD and Thermistor Inputs*

Input	Resistor Values	
	RA/RB	RC
RTD1	10.0 kΩ	80 Ω
RTD2	25.0 kΩ	100 Ω

Resistor tolerances: RA/RB matched to 0.02% (2 ppm/°C) and absolute tolerance is 0.1% (10 ppm/°C) RC accurate to 0.05%.




Table 9.11 *Resistor Locations for CLS204/208 RTD and Thermistor Inputs*

Loop	Resistor Locations	
	RA/RB	RC
1	RP1	R57
2	RP2	R55
3	RP3	R53
4	RP4	R51
5	RP5	R49
6	RP6	R47
7	RP7	R45
8	RP8	R43

CLS216 Input Circuit

The CLS216 can accept single-ended thermocouple, mV $\overline{\text{dc}}$ (dc), V $\overline{\text{dc}}$ (dc) and mA $\overline{\text{dc}}$ (dc) inputs. Unless ordered with special inputs, the controller accepts only signals within the standard range of -10 to 60mV $\overline{\text{dc}}$ (dc).

To accommodate other signals, the input circuit must be modified. When configured for thermocouple inputs, 0 Ω resistors are installed in all RC locations. To accommodate milliamp current signals or voltage signals outside the standard range, resistors are added or replaced to scale the signals to the standard range. These resistors can be installed by Watlow Anafaze or by a qualified electronics technician using scaling resistors supplied by Watlow Anafaze.

Figure 9.7 shows the schematic for one single-ended sensor input to the CLS216. See CLS216 Current Inputs on page 184 and CLS216 Voltage Inputs on page 185 for specific instructions and resistor values for voltage and current inputs.

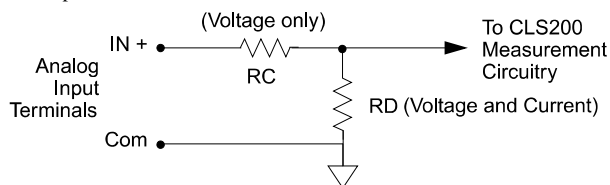


Figure 9.7 CLS216 Input Circuit

CLS216 Current Inputs

For each current input on a CLS216 controller, you must install one resistor. The value of the resistor must be correct for the expected input range. Install the resistor in the listed resistor location.

Table 9.12 Resistor Values for CLS216 Current Inputs

Input Range	Resistor Value RD
0 to 10 mA	6.0 Ω
0 to 20 mA	3.0 Ω

Resistor tolerance: $\pm 0.1\%$

Table 9.13 Resistor Locations for CLS216 Current Inputs

Loop	Resistor Location RD	Loop	Resistor Location RD
1	R42	9	R41
2	R40	10	R39
3	R38	11	R37
4	R36	12	R35
5	R34	13	R33
6	R32	14	R31
7	R30	15	R29
8	R28	16	R27

CLS216 Voltage Inputs

For each voltage input on a CLS216 controller, you must install two resistors. The resistance must be correct for the expected input range. Install the resistors in the listed locations.

Table 9.14 Resistor Values for CLS216 Voltage Inputs

Input Range	Resistor Values	
	RC	RD
0 to 100mV $\overline{=}$ (dc)	499 Ω	750 Ω
0 to 500mV $\overline{=}$ (dc)	5.49 k Ω	750 Ω
0 to 1V $\overline{=}$ (dc)	6.91 k Ω	442.0 Ω
0 to 5V $\overline{=}$ (dc)	39.2 k Ω	475.0 Ω
0 to 10V $\overline{=}$ (dc)	49.9 k Ω	301.0 Ω
0 to 12V $\overline{=}$ (dc)	84.5 k Ω	422.0 Ω

Resistor tolerance: $\pm 0.1\%$

Table 9.15 Resistor Locations for CLS216 Voltage Inputs

Resistor Locations			Resistor Locations		
Loop	RC	RD	Loop	RC	RD
1	R58	R42	9	R57	R41
2	R56	R40	10	R55	R39
3	R54	R38	11	R53	R37
4	R52	R36	12	R51	R35
5	R50	R34	13	R49	R33
6	R48	R32	14	R47	R31
7	R46	R30	15	R45	R29
8	R44	R28	16	R43	R27

Scaling and Calibration

The controller provides offset calibration for thermocouple, RTD, and other fixed ranges, and offset and span (gain) calibration for linear and pulse inputs. In order to scale linear input signals, you must:

1. Install appropriate scaling resistors. (Contact Watlow Anafaze's Customer Service Department for more information about installing scaling resistors.)
2. Select the display format. The smallest possible range is -.9999 to +3.0000; the largest possible range is -9,999 to 30,000.
3. Enter the appropriate scaling values for your process.

Configuring Dual DAC Outputs

Dual DAC modules ship with both outputs configured for the signal type and span ordered. The module contains two independent circuits (DAC1 and DAC2). These circuits can be configured for different output types. Remove the board from the housing and set the jumpers. The odd numbered jumpers determine the signal from DAC1; the even numbered jumpers determine the output from DAC2.

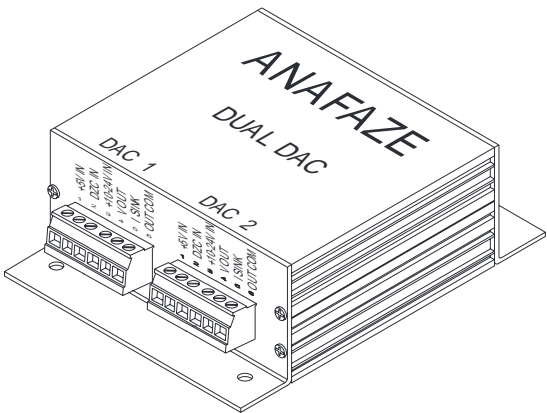


Figure 9.8 Dual DAC

Table 9.16 Dual DAC Jumper Settings

Output Type	Jumper Settings						
	1/2	3/4	5/6	7/8	9/10	11/12	13/14
0 to 5V $\overline{\text{m}}$ (dc)	B	A	A	O	B	A	O
0 to 10V $\overline{\text{m}}$ (dc)	B	A	A	O	B	O	O
4 to 20 mA	O	A	B	A	A	O	A
A = Load jumper in the "A" position, or load jumper if header has only two pins. B = Load jumper in the "B" position. O = Open. Do not load jumper.							

1. Power down the system (if the Dual DAC is already installed and wired).
2. Ensure the DAC1 and DAC2 terminal blocks or associated wires are labeled such that you will know which terminal block connects to which side of the board if the module is already installed and wired.
3. Unplug the two terminal blocks.
4. Depending on the installation, you may need to unmount the Dual DAC module before proceeding. Remove the four screws from the end plate on the opposite side of the module from the terminal blocks.

5. If necessary, remove the two mounting screws holding the loosened end plate in place.
6. Slide the board out of the housing.
7. Set the jumpers for the two outputs as desired. See Table 9.16.
8. Replace the board such that the connectors extend through the opposite end plate. The board fits in the third slot from the bottom.
9. Reconnect the two terminal blocks to the DAC1 and DAC2 connectors.
10. Replace the end plate, end plate screws and, if necessary, mounting screws.
11. Check the wire connections to the DAC1 and DAC2 terminal blocks.
12. If necessary, change the wiring connections to the correct configuration for the new output type. See Wiring the Dual DAC on page 43.
13. Restore system power.

Configuring Serial DAC Outputs

The Serial DAC's voltage and current output is jumper selectable. Refer to Figure 9.9. Configure the jumpers as indicated on the Serial DAC label.

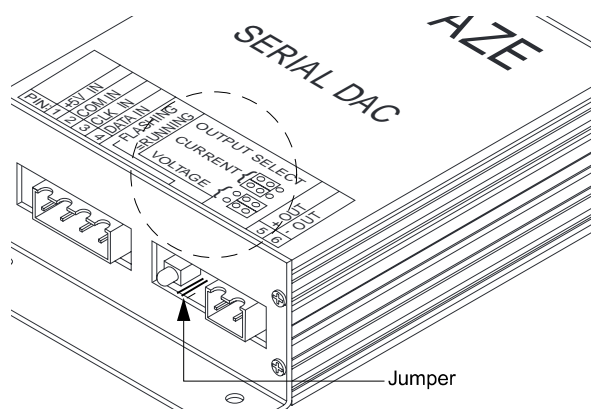


Figure 9.9 Serial DAC Voltage/Current Jumper Positions

Linear Scaling Examples

This chapter provides three linear scaling examples. The examples describe:

- A pressure sensor generating a 4 to 20 mA signal
- A flow sensor generating a 0 to 5V signal
- A pulse encoder generating 900 pulses per inch of movement

Example 1: A 4-to-20 mA Sensor

Situation

A pressure sensor that generates a 4 to 20 mA signal is connected to the controller. The specifications of the sensor state it generates 4 mA at 0.0 pounds per square inch (PSI) and 20 mA at 50.0 PSI.

Setup

The sensor is connected to a loop input set up with a resistor scaling network producing 60mV at 20 mA.

The `INPUT TYPE` for the loop is set to `LINEAR`. The sensor measures PSI in tenths, so the `DISP FORMAT` is set to `-999.9 TO +3000.0`.

Table 10.1 Input Readings

Process Variable Displayed	Sensor Input	Reading, Percent of Full Scale (%FS)
50.0 PSI	20 mA	100%FS
0.0 PSI	4 mA	$100\% \times (4 \text{ mA}/20 \text{ mA}) = 20\%FS$

The scaling values setup in the **SETUP LOOP INPUT** menu are shown in Table 10.2 .

Table 10.2 Scaling Values

Parameter	Prompt	Value
High Process Variable	HIGH PV	50.0 PSI
High Sensor Reading	HIGH RDG	100.0%FS
Low Process Variable	LO PV	0.0 PSI
Low Sensor Reading	LO RDG	20.0%FS

Example 2: A 0-to-5V (dc) Sensor

Situation

A flow sensor connected to the controller measures the flow in a pipe. The sensor generates a 0 to 5V signal. The sensor's output depends on its installation. Independent calibration measurements of the flow in the pipe indicate that the sensor generates 0.5V at three gallons per minute (GPM) and 4.75V at 65 GPM. The calibration instruments are accurate to within 1 gallon per minute.

Setup

The sensor is connected to a loop input set up with a resistor voltage divider network producing 60mV at 5V.

The INPUT TYPE for the loop is set to LINEAR. The calibrating instrument is precise to ± 1 GPM, so the DISP FORMAT is set to -999 to +3000.

This table shows the input readings and the percentage calculation from the 60mV full scale input.

Table 10.3 Input Readings and Calculations

Process Variable Displayed	Sensor Input	Reading, Percent of Full Scale (%FS)
65 GPM	4.75	$(4.75V / 5.00V) \times 100\% = 95\%FS$
3 GPM	0.5	$(0.5V / 5.00V) \times 100\% = 10\%FS$

Table 10.4 Scaling Values

Parameter	Prompt	Value
High Process Variable	HIGH PV	65 GPM
High Sensor Reading	HIGH RDG	95.0%FS
Low Process Variable	LO PV	0.0 GPM
Low Sensor Reading	LO RDG	10.0%FS

Example 3: A Pulse Encoder

Situation

A pulse encoder which measures the movement of a conveyor is connected to the controller. The encoder generates 900 pulses for every inch the conveyor moves. You want to measure conveyor speed in feet per minute (FPM).

Setup

The encoder input is connected to the controller's pulse input. The `INPUT TYPE` for the loop is set to `PULSE`. A one-second sample time gives adequate resolution of the conveyor's speed. The resolution is:

$$\frac{1 \text{ pulse}}{1 \text{ second}} \times \frac{60 \text{ seconds}}{1 \text{ minute}} \times \frac{1 \text{ inch}}{900 \text{ pulses}} \times \frac{1 \text{ foot}}{12 \text{ inches}} = 0.006 \text{ FPM}$$

A `DISP FORMAT` of `-99.99 TO +300.00` is appropriate.

The input readings are as follows:

- At 0 Hz, the input reading will be 0.00 FPM.
- At the maximum pulse rate of the CLS200 (2000 Hz):

$$\frac{2000 \text{ pulses}}{1 \text{ second}} \times \frac{60 \text{ seconds}}{1 \text{ minute}} \times \frac{1 \text{ inch}}{900 \text{ pulses}} \times \frac{1 \text{ foot}}{12 \text{ inches}} = 11.11 \text{ FPM}$$

Table 10.5 *Scaling Values*

Parameter	Prompt	Value
High Process Variable	HIGH PV	11.11 FPM
High Sensor Reading	HIGH RDG	2000 Hz
Low Process Variable	LO PV	0 FPM
Low Sensor Reading	LO RDG	0 Hz

Specifications

This chapter contains specifications for the CLS200 series controllers, TB50 terminal board, Dual DAC module, Serial DAC module and the CLS200 power supply.

CLS200 System Specifications

This section contains CLS200 series controller specifications for environmental specifications and physical dimensions, inputs, outputs, the serial interface and system power requirements.

The controller described consists of a processor module and a 50-terminal block (TB50).

Table 11.1 Agency Approvals / Compliance

CE Directive	Electromagnetic Compatibility (EMC) Directive 89/336/EEC
UL and C-UL	UL 916, Standard for Energy Management Equipment File E177240

CLS200 Processor Physical Specifications

Table 11.2 Environmental Specifications

Storage Temperature	-20 to 60° C
Operating Temperature	0 to 50° C
Humidity	10 to 95% non-condensing
Environment	The controller is for indoor use only

Table 11.3 Physical Dimensions

Weight	1.98 lbs	0.9 kg
Length*	8.0 inches	203 mm
Width	3.78 inches	96 mm
Height	1.96 inches	50 mm

* Without SCSI connector or with TB18 option.

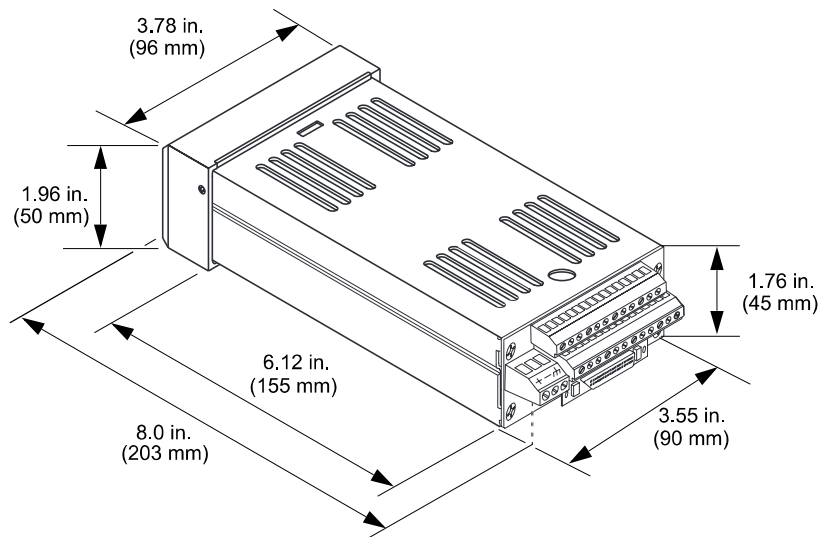


Figure 11.1 CLS200 Processor Module Dimensions

Table 11.4 Processor with Straight SCSI

Length	9.6 inches	244 mm
Width	3.78 inches	96 mm
Height	1.96 inches	50 mm

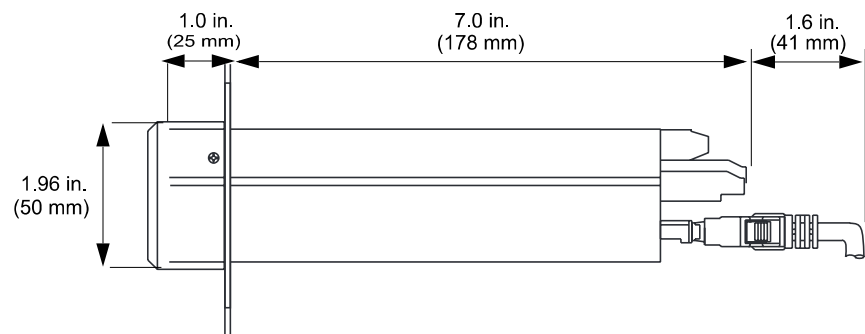


Figure 11.2 CLS200 Clearances with Straight SCSI Cable

Table 11.5 Processor with Right Angle SCSI

Length	8.6 inches	218 mm
Width	3.78 inches	96 mm
Height	1.96 inches	50 mm

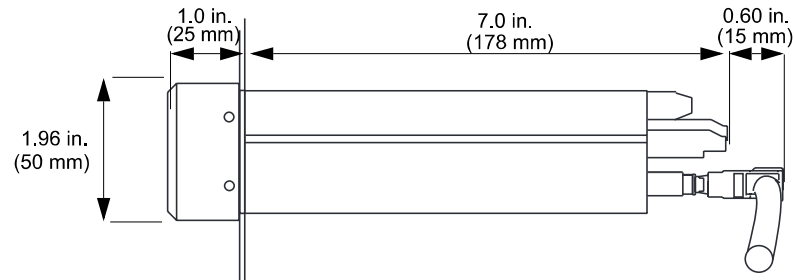


Figure 11.3 CLS200 Clearances with Right-Angle SCSI Cable

Table 11.6 Processor Connections

Power Terminals (TB2)	Captive screw cage clamp
Power Wire Gauge (TB2)	22 to 18 AWG (0.5 to 0.75 mm ²)
Power Terminal Torque (TB2)	4.4 to 5.3 in-lb. (0.5 to 0.6 Nm)
Sensor Terminals (TB1)	Captive screw cage clamp
Sensor Wire Gauge (TB1)	Thermocouples: 20 AWG (0.5 mm ²) Linear: 22 to 20 AWG (0.5 mm ²) Communications: 24 AWG (0.2 mm ²)
Sensor Terminal Torque (TB1)	4.4 to 5.3 in-lb. (0.5 to 0.6 Nm)
Output Terminals (TB18)	Captive screw cage clamp
Output Wire Gauge (TB18)	Multiconductor cables: 24 AWG (0.2 mm ²) Single-wire: 22 to 18 AWG (0.5 to 0.75 mm ²)
Output Terminal Torque (TB18)	4.4 to 5.3 in-lb. (0.5 to 0.6 Nm)
SCSI Connector	SCSI-2 female

TB50 Physical Specifications

Table 11.7 TB50 Physical Dimensions

Weight	0.32 lb.	0.15 kg
Length	4.1 inches	104 mm
Width	4.0 inches	102 mm
Height	1.5 inches	37 mm

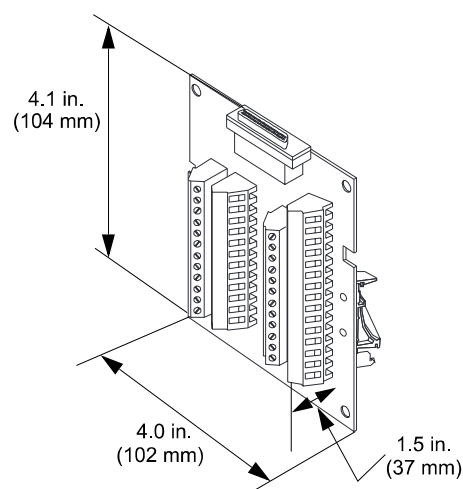


Figure 11.4 TB50 Dimensions

Table 11.8 TB50 Connections

Screw Terminal Torque	4.4 to 5.3 in-lb. (0.5 to 0.6 Nm)
SCSI Connector on Board	SCSI-2 female
Output Terminals	Captive screw cage clamp
Output Wire Gauge	Multiconductor cables: 24 AWG (0.2 mm ²) Single-wire: 22 to 18 AWG (0.5 to 0.75 mm ²)
Output Terminal Torque	4.4 to 5.3 in-lb. (0.5 to 0.6 Nm)

Table 11.9 TB50 with Straight SCSI

Length	6.4 inches	163 mm
Width	4.0 inches	102 mm
Height	1.5 inches	37 mm

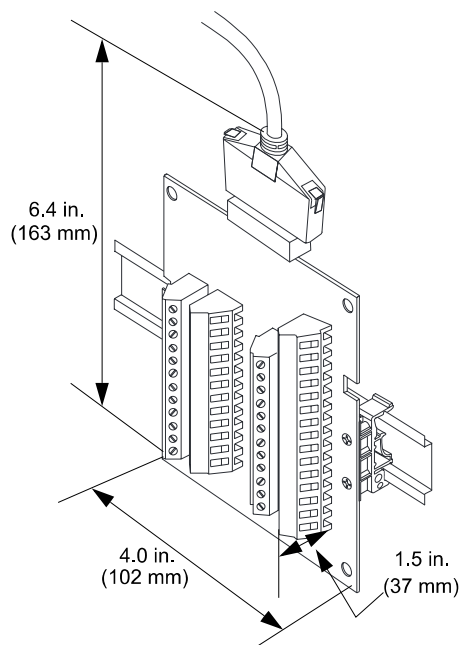
**Figure 11.5 TB50 Dimensions with Straight SCSI Cable**

Table 11.10 TB50 with Right Angle SCSI

Length	5.4 inches	137 mm
Width	4.0 inches	102 mm
Height	1.5 inches	37 mm

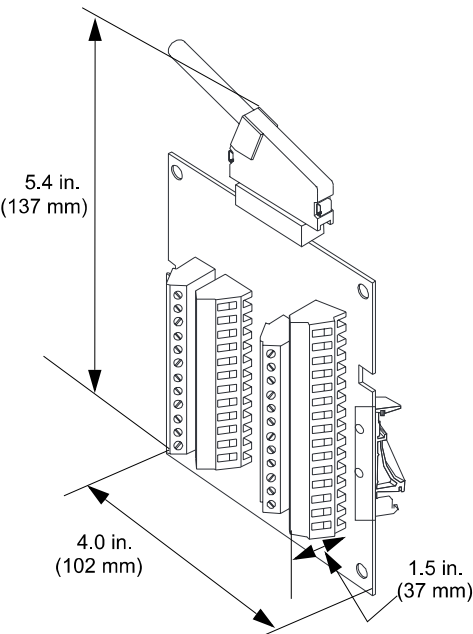


Figure 11.6 TB50 Dimensions with Right-Angle SCSI Cable

Inputs

The controller accepts analog sensor inputs which are measured and may be used as feedback for control loops. It also accepts digital (TTL) inputs which may be used to trigger certain firmware features.

Table 11.11 Analog Inputs

Parameter	Description
Number of Control Loops	CLS204: 5; CLS208: 9; CLS216: 17
Number of Analog Inputs	CLS204: 4 with full range of input types, plus one pulse CLS208: 8 with full range of input types, plus one pulse CLS216: 16 with full range of input types, plus one pulse
Input Switching	CLS204 and CLS208: Differential solid state multiplexer CLS216: Single-ended, solid state multiplexer
Input Sampling Rate	CLS204: 6 Hz (167 ms) at 60 Hz; 5 Hz (200 ms) at 50 Hz. CLS208: 3 Hz (333 ms) at 60 Hz; 2.5 Hz (400 ms) at 50 Hz. CLS216: 1.5 Hz (667 ms) at 60 Hz; 1.25 Hz (800 ms) at 50 Hz
Analog Over Voltage Protection	$\pm 20V$ referenced to digital ground.
Maximum Common Mode Voltage	5V input to input or input to analog common (CLS204 and CLS208)
Common Mode Rejection (CMR)	For inputs that do not exceed $\pm 5V$, >60 dB dc to 1 kHz, and 120 dB at selected line frequency.
A/D Converter	Integrates voltage to frequency
Input Range	-10 to +60mV, or 0 to 25V with scaling resistors
Resolution	0.006%, greater than 14 bits (internal)
Accuracy	0.03% of full scale (60mV) at 25° C
	0.08% of full scale (60mV) at 0 to 50° C
Calibration	Automatic zero and full scale
DC Common to Frame Ground Maximum Potential	20V
Thermocouple Break Detection	Pulse type for upscale break detection
Milliampere Inputs	0 to 20 mA (3 Ω resistance) or 0 to 10 mA (6 Ω resistance), with scaling resistors
Linear Voltage Input Ranges Available	0 to 12V, 0 to 10V, 0 to 5V, 0 to 1V, 0 to 500 mV, 0 to 100 mV with scaling resistors.
Source Impedance	For 60mV thermocouple, measurements are within specification with up to 500 Ω source resistance For other types of analog signals, the maximum source impedance is 5,000 Ω

Table 11.12 Pulse Inputs

Parameter	Description
Number	1
Frequency Range	0 to 2,000 Hz
Input Voltage Protection	Diodes to supply and common
Voltage Levels	<1.3V: Low >3.7V: High (TTL)
Maximum Switch Resistance to Pull Input Low	2 k Ω
Minimum Switch Off Resistance	30 k Ω

Table 11.13 Thermocouple Range and Resolution

Thermocouple Type	Range in °F	Range in °C	Accuracy* at 25°C Ambient		Accuracy* at 0 to 50°C Ambient	
			°F	°C	°F	°C
J	-350 to 1,400	-212 to 760	±2.2	±1.2	±3.3	±1.8
K	-450 to 2,500	-268 to 1371	±2.4	±1.3	±3.8	±2.1
T	-450 to 750	-268 to 399	±2.9	±1.6	±5.8	±3.2
S	0 to 3,200	-18 to 1,760	±5.0	±2.8	±8.8	±4.9
R	0 to 3,210	-18 to 1,766	±5.0	±2.8	±8.8	±4.9
B	150 to 3,200	66 to 1,760	±7.2	±4.0	±22.1	±12.3
E	-328 to 1,448	-200 to 787	±1.8	±1.0	±2.9	±1.6

* True for 10% to 100% of span except type B, which is specified for 800° F to 3200° F.

Table 11.14 RTD Range and Resolution

Name	Range in °F	Range in °C	Resolution in °C	Measurement Temperature in °C	Accuracy at 25°C Ambient		Accuracy at 0 to 50°C Ambient	
					°F	°C	°F	°C
RTD1	-148.0 to 527.0	-100.0 to 275.0	0.023	25	±0.7	±0.4	±1.0	±0.6
				275	±1.9	±1.1	±2.8	±1.6
RTD2	-184 to 1544	-120 to 840	0.023	25	±2.5	±1.4	±5.9	±3.3
				840	±2.9	±1.6	±8.6	±4.8

Table 11.15 Input Resistance for Voltage Inputs

Range	Input Resistance
0 to 12V	85 k Ω
0 to 10V	50 k Ω
0 to 5V	40 k Ω
0 to 1V	7.4 k Ω
0 to 500mV	6.2 k Ω
0 to 100mV	1.2 k Ω

Table 11.16 Digital Inputs

Parameter	Description
Number	8
Configuration	8 selectable for output override, remote job selection
Input Voltage Protection	Diodes to supply and common. Source must limit current to 10 mA for override conditions
Voltage Levels	<1.3V: Low >3.7V: High (TTL) 5V maximum, 0V minimum
Maximum Switch Resistance to Pull Input Low	1 k Ω
Minimum Switch Off Resistance	11 k Ω
Update Rate	6 Hz

Outputs

The controller directly accommodates switched dc and open-collector outputs only. These outputs can be used to control a wide variety of loads. They are typically used to control SSRs or other power switching devices which in turn control, for example, heaters. They may also be used to signal another device of an alarm condition in the controller.

Analog outputs may be accomplished by using Dual DAC or Serial DAC modules in conjunction with one of the control outputs.

An open-collector CPU watchdog output is also provided so that an external device may monitor the CPU state.

Analog Outputs

No direct analog outputs are provided.

The digital outputs may be used in conjunction with Dual DAC or Serial DAC modules to provide analog signals. See Dual DAC Specifications on page 207 and Serial DAC Specifications on page 209.

Digital Outputs

Table 11.17 Digital Outputs Control / Alarm

Parameter	Description
Number	35
Operation	Open collector output; \overline{ON} state sinks to logic common
Function	34 Outputs selectable as closed-loop control or alarm/control. 1 global alarm output
Number of Control Outputs per PID Loop	2 (maximum)
Control Output Types	Time proportioning, distributed zero crossing, Serial DAC or on/off. All independently selectable for each output. Heat and cool control outputs can be individually disabled for use as alarm outputs
Time Proportioning Cycle Time	1 to 255 seconds, programmable for each output
Control Action	Reverse (heat) or direct (cool), independently selectable for each output
Off State Leakage Current	<0.01 mA to dc common
Maximum Current	60 mA for each output. 5V power supply (from the processor module) can supply up to 350 mA total to all outputs
Maximum Voltage Switched	24V $\overline{\text{dc}}$

Table 11.18 CPU Watchdog Output

Parameter	Description
Number	1
Operation	Open collector output; \overline{ON} state sinks to logic common
Function	Monitors the processor module microprocessor
Maximum Current	10 mA (5V power supply in the processor module can supply up to 350 mA total to all outputs)
Maximum Voltage Switched	5V $\overline{\text{dc}}$

Table 11.19 5V $\overline{\text{=}}$ (dc) Output (Power to Operate Solid-State Relays)

Parameter	Description
Voltage	5V $\overline{\text{=}}$ (dc)
Maximum Current	350 mA

Table 11.20 Reference Voltage Output (Power to Operate Bridge Circuit Sensors)

Parameter	Description
Voltage	5V $\overline{\text{=}}$ (dc)
Maximum Current	100 mA

Table 11.21 Processor Serial Interface

Parameter	Description
Type	EIA/TIA-232 3-wire or EIA/TIA-485 4-wire
Isolation	None
Baud Rate	2,400, 9,600 or 19,200 user selectable
Error Check	BCC or CRC, user selectable
Number of Controllers	1 with EIA/TIA-232 communications; up to 32 with EIA/TIA-485 communications, depending upon protocol
Protocol	Form of ANSI X3.28-1976 (D1, F1), compatible with Allen Bradley PLC, full duplex or Modbus RTU

Table 11.22 Processor Power Requirements

Parameter	Description
Voltage	15 to 24V $\overline{\text{=}}$ (dc) +/- 3V $\overline{\text{=}}$ (dc)
Maximum Current	1 A

CLS200 Power Supply

Complete specifications for the CLS200 power supply are available at www.watlow.com. See the links on the CLS200 page.

Dual DAC Specifications

The Watlow Anafaze Dual DAC (digital-to-analog converter) is an optional module for the CLS200 series controller. The Dual DAC converts a distributed zero crossing (DZC) output signal to an analog process control signal. Watlow Anafaze provides the following version of the Dual DAC:

- 4 to 20 mA dc
- 0 to 5V_{DC} (dc)
- 0 to 10V_{DC} (dc)

Table 11.29 Dual DAC Environmental Specifications

Storage Temperature	-20 to 60° C
Operating Temperature	0 to 50° C
Humidity	10 to 95% non-condensing

Table 11.30 Dual DAC Physical Specifications

Weight	0.42 lb.	0.19 kg
Length	4.4 inches	112 mm
Width	3.6 inches	91 mm
Height	1.8 inches	44 mm

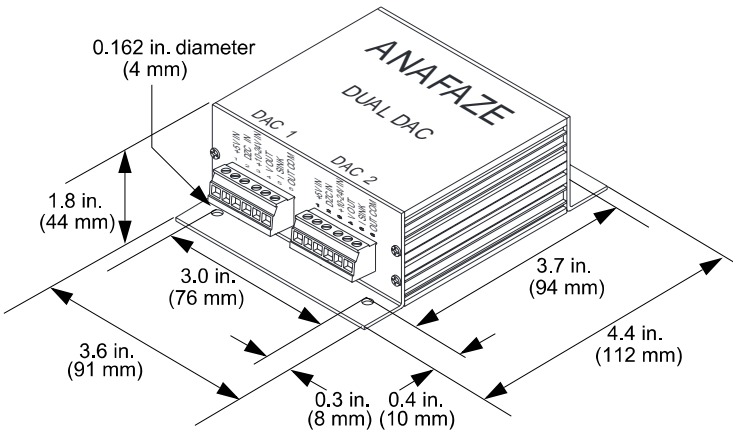


Figure 11.8 Dual DAC Dimensions

Dual DAC Inputs

The Dual DAC accepts an open-collector signal from the CLS200 controller and the power from an external power supply. See Table 11.31.

Table 11.31 Dual DAC Power Requirements

Parameter	Description
Voltage	12 to 24V $\overline{\text{dc}}$
Current	100 mA @ 15V $\overline{\text{dc}}$

Dual DAC Analog Outputs

Table 11.32 Dual DAC Specifications by Output Range

Version	4-20 mA	0-5 V	0-10 V	Units
Gain Accuracy	± 6	± 6	\pm	6
Output Offset	± 0.75	± 0.75	± 0.75	% of full scale range
Ripple	1.6	1.6	1.6	% of full scale range
Time Constant	2	2	2	seconds
Maximum Current Output	20	10	10	mA dc
Load Resistance (12V)	250 maximum	500 minimum	1000 minimum	Ω
Load Resistance (24V)	850 maximum	n/a	n/a	Ω

%

Serial DAC Specifications

Watlow Anafaze offers a Serial DAC for precision open-loop analog outputs. The Serial DAC is jumper-selectable for a 0 to 10V_{rms} (dc) or 4 to 20 mA output. Multiple Serial DAC modules can be used with one CLS200. The Serial DAC carries a CE mark.

Table 11.33 Serial DAC Environmental Specifications

Storage Temperature	-20 to 60° C
Operating Temperature	0 to 70° C
Humidity	10 to 95% non-condensing

Table 11.34 Serial DAC Physical Specifications

Weight	0.76 lb.	0.34 kg
Length	5.4 inches	137 mm
Width	3.6 inches	91 mm
Height	1.8 inches	44 mm

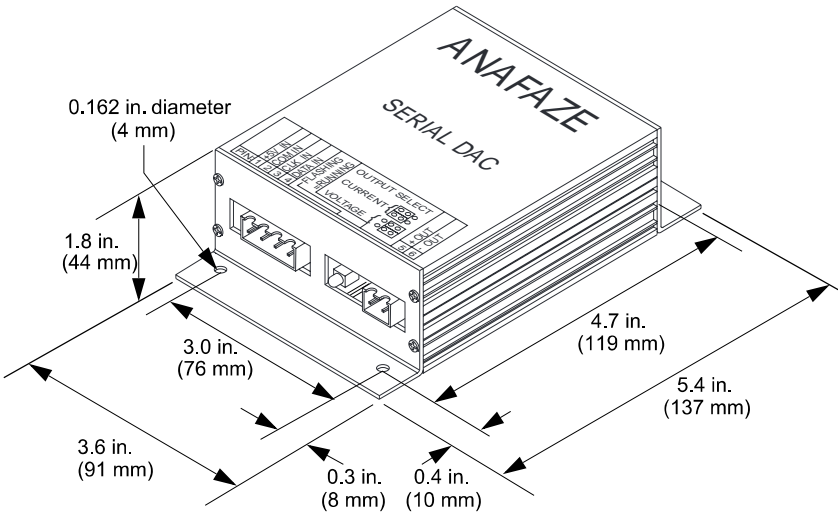


Figure 11.9 Serial DAC Dimensions

Table 11.35 Serial DAC Agency Approvals / Compliance

CE Directive	Electromagnetic Compatibility (EMC) directive 89/336/EEC
UL and C-UL	UL 916 Standard for Energy Management Equipment File E177240

Serial DAC Inputs

The Serial DAC requires a proprietary serial data signal and the clock signal from the CLS200 via the TB50. Any control output can be configured to provide the data signal. The Serial DAC also requires a 5V $\overline{\text{dc}}$ power input.

Table 11.36 Serial DAC Inputs

Parameter	Description
Data	4 mA maximum to DC COM Open collector or HC CMOS logic levels
Clock	0.5 mA maximum to DC COM Open collector or HC CMOS logic levels

Table 11.37 Serial DAC Power Requirements

Parameter	Description
Voltage	4.75 to 5.25V $\overline{\text{dc}}$ @ 300 mA maximum
Current	210 mA typical @ 20V $\overline{\text{dc}}$ out

Serial DAC Analog Outputs

Table 11.38 Serial DAC Analog Output Specifications

Parameter	Description
Absolute Maximum Common Mode Voltage	Measured between output terminals and controller common: 1,000V
Resolution	15 bits (plus polarity bit for voltage outputs) (0.305mV for 10V output range) (0.00061 mA for 20 mA output range)
Accuracy (Calibrated for Voltage Output)	For voltage output: $\pm 0.005V$ (0.05% at full scale) For current output: ± 0.1 mA (0.5% at full scale)
Temperature coefficient	440 ppm/ °C typical
Isolation Breakdown Voltage	1,000V between input power and signals
Current	0 to 20 mA (500 Ω load max.)
Voltage	0 to 10V $\overline{\text{dc}}$ (dc) with 10 mA source capability
Output Response Time	1 ms typical
Update Rate	Once per controller A/D cycle nominal. Twice per second maximum for 60 Hz clock rate. Output changes are step changes due to the fast time constant. All Serial DAC loop outputs are updated at the same time.

Glossary

A

AC

See Alternating Current.

AC Line Frequency

The frequency of the AC power line measured in Hertz (Hz), usually 50 or 60 Hz.

Accuracy

Closeness between the value indicated by a measuring instrument and a physical constant or known standards.

Action

The response of an output when the process variable is changed. See also Direct Action, Reverse Action.

Address

A numerical identifier for a controller when used in computer communications.

Alarm

A signal that indicates that the process has exceeded or fallen below a certain range around the setpoint. For example, an alarm may indicate that a process is too hot or too cold. See also:

- Deviation Alarm
- Failed Sensor Alarm
- Global Alarm
- High Deviation Alarm
- High Process Alarm
- Loop Alarm
- Low Deviation Alarm
- Low Process Alarm

Alarm Delay

The lag time before an alarm is activated.

Alternating Current (AC)

An electric current that reverses at regular intervals, and alternates positive and negative values.

Ambient Temperature

The temperature of the air or other medium that surrounds the components of a thermal

system.

American Wire Gauge (AWG)

A standard of the dimensional characteristics of wire used to conduct electrical current or signals. AWG is identical to the Brown and Sharpe (B&S) wire gauge.

Ammeter

An instrument that measures the magnitude of an electric current.

Ampere (Amp)

A unit that defines the rate of flow of electricity (current) in the circuit. Units are one coulomb (6.25 x 10¹⁸ electrons) per second.

Analog Output

A continuously variable signal that is used to represent a value, such as the process value or setpoint value. Typical hardware configurations are 0 to 20mA, 4 to 20mA or 0 to 5 V_{DC} (dc).

Automatic Mode

A feature that allows the controller to set PID control outputs in response to the Process Variable (PV) and the setpoint.

Autotune

A feature that automatically sets temperature control PID values to match a particular thermal system.

AWG

See American Wire Gauge.

B

Baud Rate

The rate of information transfer in serial communications, measured in bits per second.

Block Check Character (BCC)

A serial communications error checking method. An acceptable method for most applications, BCC is the default method. See also Cyclic Redundancy Check.

Bumpless Transfer

A smooth transition from automatic (closed loop) to manual (open loop) operation. The control output does not change during the transfer.

C**Calibration**

The comparison of a measuring device (an unknown) against an equal or better standard.

Celsius (Centigrade)

Formerly known as Centigrade. A temperature scale in which water freezes at 0°C and boils at 100°C at standard atmospheric pressure. The formula for conversion to the Fahrenheit scale: °F = (1.8 x °C) + 32.

Central Processing Unit (CPU)

The unit of a computing system that includes the circuits controlling the interpretation of instructions and their execution.

Circuit

Any closed path for electrical current. A configuration of electrically or electromagnetically-connected components or devices.

Closed Loop

A control system that uses a sensor to measure a process variable and makes decisions based on that feedback.

Cold Junction

Connection point between thermocouple metals and the electronic instrument.

Common Mode Rejection Ratio

The ability of an instrument to reject electrical noise, with relation to ground, from a common voltage. Usually expressed in decibels (dB).

Communications

The use of digital computer messages to link components. See also Serial Communications, Baud Rate.

Control Action

The response of the PID control output relative to the error between the process variable and the setpoint. For reverse action (usually heating), as the process decreases below the setpoint the output increases. For direct action (usually cooling), as the process increases above the setpoint, the output increases.

Control Status

The type of action that a controller uses. For example, on/off, time proportioning, PID, automatic or manual, and combinations of these.

Current

The rate of flow of electricity. The unit of measure is the ampere (A).

1 ampere = 1 coulomb per second.

Cycle Time

The time required for a controller to complete one on-off-on cycle. It is usually expressed in seconds.

Cyclic Redundancy Check (CRC)

An error checking method in communications. It provides a high level of data security but is more difficult to implement than Block Check Character (BCC). See also Block Check Character.

D**DAC**

See Digital-to-Analog Converter.

Data Logging

A method of recording a process variable over a period of time. Used to review process performance.

DC

See Direct Current.

Deadband

The range through which a variation of the input produces no noticeable change in the output. In the deadband, specific conditions can be placed on control output actions. Operators select the deadband. It is usually above the heating proportional band and below the cooling proportional band.

Default Parameters

The programmed instructions that are permanently stored in the microprocessor software.

Derivative Control (D)

The last term in the PID algorithm. Action that anticipated the rate of change of the process, and compensates to minimize overshoot and undershoot. Derivative control is an instantaneous change of the control output in the same direction as the proportional error. This is caused by a change in the process variable (PV) that decreases over the time of the derivative (TD). The TD is in units of seconds.

Deutsche Industrial Norms (DIN)

A set of technical, scientific and dimensional standards developed in Germany. Many DIN standards have worldwide recognition.

Deviation Alarm

Warns that a process has exceeded or fallen below a certain range around the setpoint.

Digital-to-Analog Converter (DAC)

A device that converts a numerical input signal to a signal that is proportional to the input in some way.

Direct Action

An output control action in which an increase in the process variable, causes an increase in the output. Cooling applications usually use direct action.

Direct Current (DC)

An electric current that flows in one direction.

Distributed Zero Crossing (DZC)

A form of digital output control in which the output on/off state is calculated for every ac line cycle. Power is switched at the zero cross, which reduces electrical noise. See also Zero Cross.

E

Earth Ground

A metal rod, usually copper, that provides an electrical path to the earth, to prevent or reduce the risk of electrical shock.

EIA/TIA

See Serial Communications.

Electrical Noise

See Noise.

Electromagnetic Interference (EMI)

Electrical and magnetic noise imposed on a system. There are many possible causes, such as switching ac power on inside the sine wave. EMI can interfere with the operation of controls and other devices.

Electrical-Mechanical Relays

See Relay, Electromechanical.

Emissivity

The ratio of radiation emitted from a surface compared to radiation emitted from a black-

body at the same temperature.

Engineering Units

Selectable units of measure, such as degrees Celsius and Fahrenheit, pounds per square inch, newtons per meter, gallons per minute, liters per minute, cubic feet per minute or cubic meters per minute.

EPROM

Erasable Programmable, Read-Only Memory inside the controller.

Error

The difference between the correct or desired value and the actual value.

F

Fahrenheit

The temperature scale that sets the freezing point of water at 32° F and its boiling point at 212° F at standard atmospheric pressure. The formula for conversion to Celsius: °C = 5/9 (°F - 32).

Failed Sensor Alarm

Warns that an input sensor no longer produces a valid signal. For example, when there are thermocouple breaks, infrared problems or resistance temperature detector (RTD) open or short failures.

Filter

Filters are used to handle various electrical noise problems.

Digital Filter (DF) — A filter that allows the response of a system when inputs change unrealistically or too fast. Equivalent to a standard resistor-capacitor (RC) filter

Digital Adaptive Filter — A filter that rejects high frequency input signal noise (noise spikes).

Heat/Cool Output Filter — A filter that slows the change in the response of the heat or cool output. The output responds to a step change by going to approximately 2/3 its final value within the numbers of scans that are set.

Frequency

The number of cycles over a specified period of

time, usually measured in cycles per second. Also referred to as Hertz (Hz). The reciprocal is called the period.

G

Gain

The amount of amplification used in an electrical circuit. Gain can also refer to the Proportional (P) mode of PID.

Global Alarm

Alarm associated with a global digital output that is cleared directly from a controller or through a user interface.

Global Digital Outputs

A pre-selected digital output for each specific alarm that alerts the operator to shut down critical processes when an alarm condition occurs.

Ground

An electrical line with the same electrical potential as the surrounding earth. Electrical systems are usually grounded to protect people and equipment from shocks due to malfunctions. Also referred to a "safety ground".

H

Hertz (Hz)

Frequency, measured in cycles per second.

High Deviation Alarm

Warns that the process is above setpoint, but below the high process variable. It can be used as either an alarm or control function.

High Power

(As defined by Watlow Anafaze) Any voltage above 24 Vac or Vdc and any current level above 50 mAac or mAdc.

High Process Alarm

A signal that is tied to a set maximum value that can be used as either an alarm or control function.

High Process Variable

See Process Variable (PV).

High Reading

An input level that corresponds to the high

process value. For linear inputs, the high reading is a percentage of the full scale input range. For pulse inputs, the high reading is expressed in cycles per second (Hz).

I

Infrared (IR)

A region of the electromagnetic spectrum with wavelengths ranging from one to 1,000 microns. These wavelengths are most suited for radiant heating and infrared (noncontact) temperature sensing.

Input

Process variable information that is supplied to the instrument.

Input Scaling

The ability to scale input readings (readings in percent of full scale) to the engineering units of the process variable.

Input Type

The signal type that is connected to an input, such as thermocouple, RTD, linear or process.

Integral Control (I)

Control action that automatically eliminates offset, or droop, between setpoint and actual process temperature.

J

Job

A set of operating conditions for a process that can be stored and recalled in a controller's memory, also called a recipe.

Junction

The point where two dissimilar metal conductors join to form a thermocouple.

L

Lag

The delay between the output of a signal and the response of the instrument to which the signal is sent.

Linear Input

A process input that represents a straight line function.

Linearity

The deviation in response from an expected or theoretical straight line value for instruments and transducers. also called linearity error.

Liquid Crystal Display (LCD)

A type of digital display made of a material that changes reflectance or transmittance when an electrical field is applied to it.

Load

The electrical demand of a process, expressed in power (watts), current (amps) or resistance (ohms). The item or substance that is to be heated or cooled.

Loop Alarm

Any alarm system that includes high and low process, deviation band, deadband, digital outputs, and auxiliary control outputs.

Low Deviation Alarm

Warns that the process is below the setpoint, but above the low process variable. It can be used as either an alarm or control function.

Low Process Alarm

A signal that is tied to a set minimum value that can be used as either an alarm or control function.

Low Reading

An input level corresponding to the low process value. For linear inputs, the low reading is a percentage of the full scale input range. For pulse inputs, the low reading is expressed in cycles per second (Hz).

M**Manual Mode**

A selectable mode that has no automatic control aspects. The operator sets output levels.

Manual Reset

See Reset.

Milliampere (mA)

One thousandth of an ampere.

MMI

Man-machine interface.

N**NO-Key Reset**

A method for resetting the controller's memory (for instance, after an EPROM change).

Noise

Unwanted electrical signals that usually produce signal interference in sensors and sensor circuits. See also Electromagnetic Interference.

Noise Suppression

The use of components to reduce electrical interference that is caused by making or breaking electrical contact, or by inductors.

Nonlinear

Through Anafaze software, the Nonlinear field sets the system to linear control, or to one of two nonlinear control options. Input 0 for linear, 1 or 2 for nonlinear.

O**Offset**

The difference in temperature between the setpoint and the actual process temperature. Offset is the error in the process variable that is typical of proportional-only control.

On/Off Control

A method of control that turns the output full on until setpoint is reached, and then off until the process error exceeds the hysteresis.

Open Loop

A control system with no sensory feedback.

Operator Menus

The menus accessible from the front panel of a controller. These menus allow operators to set or change various control actions or features.

Optical Isolation

Two electronic networks that are connected through an LED (Light Emitting Diode) and a photoelectric receiver. There is no electrical continuity between the two networks.

Output

Control signal action in response to the difference between setpoint and process variable.

Output Type

The form of PID control output, such as time

proportioning, distributed zero crossing, Serial DAC or analog. Also the description of the electrical hardware that makes up the output.

Overshoot

The amount by which a process variable exceeds the setpoint before it stabilizes.

P

Panel Lock

A feature that prevents operation of the front panel by unauthorized people.

PID

Proportional, Integral, Derivative. A control status with three functions: Proportional action dampens the system response, integral corrects for droops, and derivative prevents overshoot and undershoot.

Polarity

The electrical quality of having two opposite poles, one positive and one negative. Polarity determines the direction in which a current tends to flow.

Process Variable (PV)

The parameter that is controlled or measured. Typical examples are temperature, relative humidity, pressure, flow, fluid level, events, etc. The high process variable is the highest value of the process range, expressed in engineering units. The low process variable is the lowest value of the process range.

Proportional (P)

Output effort proportional to the error from setpoint. For example, if the proportional band is 20° and the process is 10° below the setpoint, the heat proportioned effort is 50%. The lower the PB value, the higher the gain.

Proportional Band (PB)

A range in which the proportioning function of the control is active. Expressed in units, degrees or percent of span. See also PID.

Proportional Control

A control using only the P (proportional) value of PID control.

Pulse Input

Digital pulse signals from devices, such as optical encoders.

R

Ramp

A programmed increase in the temperature of a setpoint system.

Range

The area between two limits in which a quantity or value is measured. It is usually described in terms of lower and upper limits.

Recipe

See Job.

Reflection Compensation Mode

A control feature that automatically corrects the reading from a sensor.

Relay

A switching device.

Electromechanical Relay — A power switching device that completes or interrupts a circuit by physically moving electrical contacts into contact with each other. Not recommended for PID control.

Solid State Relay (SSR) — A switching device with no moving parts that completes or interrupts a circuit electrically.

Reset

Control action that automatically eliminates offset or droop between setpoint and actual process temperature. See also Integral.

Automatic Reset — The integral function of a PI or PID temperature controller that adjusts the process temperature to the setpoint after the system stabilizes. The inverse of integral.

Resistance

Opposition to the flow of electric current, measured in ohms.

Resistance Temperature Detector (RTD)

A sensor that uses the resistance temperature characteristic to measure temperature. There are two basic types of RTDs: the wire RTD, which is usually made of platinum, and the thermistor which is made of a semiconductor material. The wire RTD is a positive temperature coefficient sensor only, while the thermistor can have either a negative or positive

temperature coefficient.

Reverse Action

An output control action in which an increase in the process variable causes a decrease in the output. Heating applications usually use reverse action.

RTD

See Resistance Temperature Detector.

S

Serial Communications

A method of transmitting information between devices by sending all bits serially over a single communication channel.

EIA/TIA-232—An Electronics Industries of America (EIA) standard for interface between data terminal equipment and data communications equipment for serial binary data interchange. This is usually for communications over a short distance (50 feet [15 m] or less) and to a single device.

EIA/TIA-485—An Electronics Industries of America (EIA) standard for electrical characteristics of generators and receivers for use in balanced digital multipoint systems. This is usually used to communicate with multiple devices over a common cable or where distances over 50 feet (15 m) are required.

Setpoint (SP)

The desired value programmed into a controller. For example, the temperature at which a system is to be maintained.

Shield

A metallic foil or braided wire layer surrounding conductors that is designed to prevent electrostatic or electromagnetic interference from external sources.

Signal

Any electrical transmittance that conveys information.

Solid State Relay (SSR)

See Relay, Solid State.

Span

The difference between the lower and upper

limits of a range expressed in the same units as the range.

Spread

In heat/cool applications, the +/- difference between heat and cool. Also known as process deadband. See also Deadband.

Stability

The ability of a device to maintain a constant output with the application of a constant input.

T

T/C Extension Wire

A grade of wire used between the measuring junction and the reference junction of a thermocouple. Extension wire and thermocouple wire have similar properties, but extension wire is less costly.

TD (Timed Derivative)

The derivative function.

Thermistor

A temperature-sensing device made of semiconductor material that exhibits a large change in resistance for a small change in temperature. Thermistors usually have negative temperature coefficients, although they are also available with positive temperature coefficients.

Thermocouple (T/C)

A temperature sensing device made by joining two dissimilar metals. This junction produces an electrical voltage in proportion to the difference in temperature between the hot junction (sensing junction) and the lead wire connection to the instrument (cold junction).

TI (Timed Integral)

The Integral term.

Transmitter

A device that transmits temperature data from either a thermocouple or RTD by way of a two-wire loop. The loop has an external power supply. The transmitter acts as a variable resistor with respect to its input signal. Transmitters are desirable when long lead or extension wires produce unacceptable signal degradation.

U**Upscale Break Protection**

A form of break detection for burned-out thermocouples. Signals the operator that the thermocouple has burned out.

Undershoot

The amount by which a process variable falls below the setpoint before it stabilizes.

V**Volt (V)**

The unit of measure for electrical potential, voltage or electromotive force (EMF). See also Voltage.

Voltage (V)

The difference in electrical potential between two points in a circuit. It's the push or pressure behind current flow through a circuit. One volt (V) is the difference in potential required to move one coulomb of charge between two points in a circuit, consuming one joule of energy. In other words, one volt (V) is equal to one ampere of current (I) flowing through one ohm of resistance (R), or $V = IR$.

Z**Zero Cross**

Action that provides output switching only at or near the zero-voltage crossing points of the ac sine wave.

Index

A

A control status symbol 56
 AC LINE FREQ
 default value 74
 description 81
 location 73, 233
 agency compliance
 controller 193
 power supply 205
 Serial DAC 210
 ALARM ACK key
 acknowledging alarms 59–60
 description 54
 does not work 170
 ALARM DEADBAND
 default value 99
 description 102
 location 73, 233
 ALARM DELAY
 default value 99
 description 103
 location 73, 233
 location of 64
 Alarm High SP parameter 67
 Alarm Low SP parameter 67
 alarms
 acknowledging 59–60
 alarm high, see process alarms
 alarm low, see process alarms
 codes 164, 166
 deadband 102
 delaying 64, 100, 103
 deviation 164
 deviation, see process alarms
 digital output polarity 81
 disabling control on alarm outputs 94
 displays 58
 failed sensor 65, 166
 global 99
 global alarm output 68
 high deviation alarm settings 100–101
 high process alarm settings 100
 hysteresis 68
 loop delay 64
 low deviation alarm settings 100–101
 low process alarm settings 102
 messages 166
 process 164
 resetting 165
 restoring control after sensor failure 92
 reversed thermocouple 85
 RTD, see failed sensor alarms
 SCRs 37
 sensor fail percent output power 97
 setting up 66–69
 setup parameters 99–103
 solid state relays 37
 startup delay 64, 78
 system 60, 166
 T/C BREAK, switching to manual mode 97

thermocouple, see failed sensor alarms
 tolerance 138, 151
 troubleshooting 164, 166
 wiring 37
 ambient temperature
 H/W AMBIENT FAILURE message 169
 operating range 12
 AMBIENT WARNING 168
 ANAINSTL 80
 analog inputs, see sensor inputs
 analog output 158
 see also Dual DAC or Serial DAC
 ASSIGN R/S PROFILE 148
 AUTO 56, 61
 automatic control, selecting 61
 automatic mode
 restoring after failed sensor repair 66
 autotuning 62–64

B

BACK key 53
 bar graph display 55–56
 control status symbols 56
 navigating in 56
 ramp/soak symbols 147
 symbols 55, 58
 when running ramp/soak profile 146
 battery 7
 BATTERY DEAD 166
 baud rate 80
 BCC, see block check character
 block check character 80
 boost output 67
 bridge circuit 32

C

cables
 communications 9, 47
 SCSI 7, 9
 tie wrapping 35
 troubleshooting 175
 CALCULATING CHECKSUM 28
 CANNOT LOAD JOB 75
 CANNOT SAVE JOB 75
 CASCADE BASE SP
 description 120
 location 112, 233
 CASCADE CL SPAN
 description 121
 location 112, 233
 cascade control 118–124
 application example 121
 relationship of secondary setpoint to primary
 output 123
 setting up, example 122
 setup parameters 119–121
 testing setup, example 123
 CASCADE HT SPAN
 description 121
 location 112, 233
 CASCADE MAX SP
 description 120
 location 112, 233

- CASCADE MIN SP
 - description 120
 - location 112, 233
- CASCADE PRIM. LOOP
 - description 119
 - location 112, 233
- case, removing 177
- CE, see agency compliance
- CHNG SP key
 - changing the setpoint 61
 - description 54
 - does not work 170
 - locking and unlocking 78
- clearance, see installation
- communications
 - baud rate 80
 - cable 9, 47
 - controller address 79
 - error checking algorithm 80
 - ground loops 24, 175
 - installation 45–49
 - jumper configurations 179
 - protocol 80
 - software problems 176
 - specifications 204
 - troubleshooting 174–176
 - wire sizes and lengths 22
 - see also EIA/TIA
- COMMUNICATIONS BAUD RATE
 - default value 74
 - description 80
 - location 73, 233
- COMMUNICATIONS ERR CHECK
 - default value 74
 - description 80
 - location 73, 233
- COMMUNICATIONS PROTOCOL
 - default value 74
 - description 80
 - location 73, 233
- computer, see communications 174
- control algorithms 153–156
 - on/off 154
 - proportional (P) 154, 161
 - proportional with integral (PI) 155, 161
 - proportional, integral and derivative (PID) 155, 161
- control outputs 157–162
 - action 96
 - automatic control, see automatic control
 - cascade control, see cascade control
 - control algorithms, see control algorithms
 - control status, see control status
 - curve 98
 - cycle time 95
 - direct action 96, 159
 - disabling 94
 - distributed zero crossing 94, 158
 - Dual DAC, see Dual DAC
 - enabling 94
 - filter 91, 158
 - limit 96
 - manual control, see manual control
 - on/off 94, 157
 - process variable retransmit 113
 - ratio control, see ratio control
 - reverse action 96, 159
 - SCRs 37
 - Serial DAC, see Serial DAC
 - solid state relays 37
 - spread 92
 - status on power up 78
 - time proportioning 94, 157
 - troubleshooting 172–173
 - wiring 37
- control parameters 90–92
- control status 61–64
 - symbols on display 56
 - unexpected switches from automatic to manual 167
- controller
 - agency compliance 193
 - clearance 13, 195
 - connecting to TB50 27
 - dimensions 194
 - environment 194
 - input specifications 200–202
 - mounting 13–16
 - output specifications 202–204
 - specifications 193–196
 - terminal specifications 196
 - troubleshooting, see troubleshooting
 - wire sizes 196
- CONTROLLER ADDRESS
 - default value 74
 - description 79
 - location 73, 233
- COOL 56
- COOL CONTROL FILTER
 - default value 90
 - description 91
 - location 73, 233
- COOL CONTROL OUTPUT
 - default value 93
 - description 94
 - location 73, 233
- COOL CONTROL PB
 - default value 90
 - description 91
 - location 73, 233
- COOL CONTROL TD
 - default value 90
 - description 91
 - location 73, 233
- COOL CONTROL TI
 - default value 90
 - description 91
 - location 73, 233
- COOL OUTPUT
 - curves 98
 - description 98
 - location 73, 233
- COOL OUTPUT ACTION
 - description 96
 - location 73, 233
- COOL OUTPUT CYCLE TIME
 - description 95
 - location 73, 233

- COOL OUTPUT LIMIT
 - description 96
 - location 73, 233
- COOL OUTPUT LIMIT TIME
 - description 96
 - location 73, 233
- COOL OUTPUT RETRANS PV
 - description 114
 - location 112, 233
- COOL OUTPUT TYPE
 - description 94
 - location 73, 233
- cool output, see control outputs
- COOL RETRANS MAX INP
 - description 114
 - location 112, 233
- COOL RETRANS MAX OUT%
 - description 115
 - location 112, 233
- COOL RETRANS MIN INP
 - description 114
 - location 112, 233
- COOL RETRANS MIN OUT%
 - description 114
 - location 112, 233
- COOL T/C BRK OUT AVG
 - description 97
 - location 73, 233
- COPY SETUP FROM PROFILE
 - description 138
 - location 136, 233
- CPU watchdog timer 38, 203
- CRC, see cyclic redundancy check
- C-UL, see agency compliance
- current inputs
 - scaling resistors 33, 181, 184
 - wiring 33
- CYCLE NR= 147
- cycle time 95
- cyclic redundancy check 80
- D**
 - D/O alarm polarity parameter 68
 - DAC, see Dual DAC or Serial DAC
 - data logging 113, 115
 - derivative
 - description 155
 - guidelines for setting 160–162
 - setting a value 91
 - settings from other controllers 161
 - term versus rate settings 160
 - DEV ALARM VALUE
 - default value 99
 - description 100
 - location 73, 233
 - deviation alarms, see process alarms
 - differential control, see ratio control 131
 - DIG OUT POLARITY ON ALARM
 - default value 74
 - description 81
 - location 73, 233
 - DIGITAL INPUTS
 - default value 103
 - description 103
 - location 73, 233
 - using for testing 29
 - digital inputs
 - external switching devices 39
 - functions activated 39
 - output override 77
 - ramp/soak external reset 139
 - ramp/soak triggers 142
 - remote job selection 76–77
 - restoring control after sensor failure 92
 - specifications 202
 - technical information 38
 - testing 29, 103
 - thermocouple short detection 79
 - troubleshooting 173
 - wiring 38
 - DIGITAL OUTPUT NUMBER
 - default value 103
 - description 104
 - location 73, 233
 - digital outputs
 - polarity for alarms 81
 - ramp/soak events 141
 - specifications 203
 - testing 28, 104
 - troubleshooting 173
 - will not turn on 22
 - wiring 35–36
 - dimensions
 - controller 194
 - Dual DAC 20, 207
 - power supply 205–206
 - power supply bracket 19
 - Serial DAC 20, 209
 - TB50 196–199
 - direct action, see control outputs
 - DISP FORMAT
 - default value 82
 - description 87
 - effect on ramp/soak parameters 144
 - location 73, 233
 - scaling parameters 86
 - values 87
 - display
 - bar graph, see bar graph display
 - does not work 167
 - job display 60
 - process variable not correct 167, 171
 - single loop, see single loop display
 - distributed zero crossing 94, 158
 - down-arrow key 53
 - Dual DAC
 - configuring outputs 186–188
 - dimensions 20, 207
 - environment 207
 - input specifications 208
 - jumper settings 187
 - mounting 19–20
 - output specifications 208
 - process variable retransmit 113, 118
 - specifications 207–208
 - wiring 43–44
 - dust 12
 - DZC, see distributed zero crossing

E

earth, see ground

EDIT RAMP & SOAK PROFILE
 description 137
 location 136, 233

EDIT SEGMENT NUMBER
 description 140
 location 136, 233

EIA/TIA-232 45–46
 connections 46
 jumper configurations 179
 jumpers in connectors 46
 specifications 204
 troubleshooting 174–175
 see also communications

EIA/TIA-485 47–49
 EIA/TIA-232-to-485 converter 47, 49
 jumper configurations 179
 network connections 47–48
 signal common 48
 specifications 204
 termination 48
 troubleshooting 175
 see also communications

electrostatic discharge 177

EMI, see noise

encoders 34

enhanced features option 111–132
 cascade control, see cascade control
 firmware code shown on display 81
 menu tree 112
 process variable retransmit, see process variable retransmit

ENTER key 53

environment 12
 controller 194
 Dual DAC 207
 power supply 205
 Serial DAC 209

EPROM
 checksum 81
 replacing 176–178

error checking 80

ESD, see electrostatic discharge

external bridge circuit 32

EXTERNAL RESET INPUT NUMBER
 description 139
 location 136, 233

external safety devices 9

external switching devices 39

extruder control 107–110

extruder control algorithm 110

extruder firmware option code 81

F

failed sensor alarms
 restoring automatic control after sensor repair 66
 RTD open 66
 RTD shorted 66
 setting up 65–66
 thermocouple open 65
 thermocouple short 66

filter
 output 91, 158
 sensor input 89

firmware
 custom 82
 version 81

frequency 81

front panel 8
 navigation 51
 overview 52

FS alarm code 166

functions activated by digital inputs 39

G

gain, see proportional band

ground loops 24
 communications 47
 isolation 35
 paths 24
 and personal computers 24
 and thermocouples 31
 troubleshooting 172, 175

grounding, troubleshooting 172

H

H/W AMBIENT FAILURE 166, 169

H/W GAIN FAILURE 166, 170

H/W OFFSET FAILURE 166, 170

HD alarm code 164

HEAT 56

HEAT CONTROL FILTER
 default value 90
 description 91
 location 73, 233

HEAT CONTROL OUTPUT
 default value 93
 description 94
 location 73, 233

HEAT CONTROL PB
 default value 90
 description 91
 location 73, 233

HEAT CONTROL TD
 default value 90
 description 91
 location 73, 233

HEAT CONTROL TI
 default value 90
 description 91
 location 73, 233

HEAT OUTPUT
 curves 98
 default value 93
 description 98
 location 73, 233

HEAT OUTPUT ACTION
 default value 93
 description 96
 location 73, 233

HEAT OUTPUT CYCLE TIME
 default value 93
 description 95
 location 73, 233

- HEAT OUTPUT LIMIT
 - default value 93
 - description 96
 - location 73, 233
- HEAT OUTPUT LIMIT TIME
 - default value 93
 - description 96
 - location 73, 233
- HEAT OUTPUT RETRANS PV
 - description 114
 - location 112, 233
- HEAT OUTPUT TYPE
 - default value 93
 - description 94
 - location 73, 233
- heat output, see control outputs
- HEAT RETRANS MAX INP
 - description 114
 - location 112, 233
- HEAT RETRANS MAX OUT%
 - description 115
 - location 112, 233
- HEAT RETRANS MIN INP
 - description 114
 - location 112, 233
- HEAT RETRANS MIN OUT%
 - description 114
 - location 112, 233
- HEAT T/C BRK OUT AVG
 - default value 93
 - description 97
 - location 73, 233
- HEAT/COOL SPREAD
 - location 233
- Heat/Cool Thermocouple Break Out 65
- HI DEV ALARM OUTPUT
 - default value 99
 - description 101
 - location 73, 233
- HI DEV ALARM TYPE
 - default value 99
 - description 101
 - location 73, 233
- HI PROC ALARM OUTPUT
 - default value 99
 - description 100
 - location 73, 233
- HI PROC ALARM SETPT
 - default value 99
 - description 100
 - location 73, 233
- HI PROC ALARM TYPE
 - default value 99
 - description 100
 - location 73, 233
- high deviation alarm, see process alarms
- HP alarm code 164
- humidity
 - controller 194
 - Dual DAC 207
 - power supply 205
 - Serial DAC 209
- hysteresis
 - alarm 68
- hysteresis, see spread
- I**
 - INPUT FILTER
 - default value 82
 - description 89
 - location 73, 233
 - setting before autotuning 64
 - input power, see power supply
 - INPUT PULSE SAMPLE TIME
 - default value 82
 - description 85
 - location 73, 233
 - INPUT READING OFFSET
 - default value 82
 - description 84
 - location 73, 233
 - values 85
 - INPUT SCALING HI PV
 - default value 82
 - description 88
 - location 73, 233
 - scaling parameters 86
 - INPUT SCALING HI RDG
 - default value 82
 - description 88
 - location 73, 233
 - scaling parameters 86
 - INPUT SCALING LO PV
 - default value 82
 - description 88
 - location 73, 233
 - scaling parameters 86
 - INPUT SCALING LO RDG
 - default value 82
 - description 89
 - location 73, 233
 - scaling parameters 86
 - INPUT TYPE
 - default value 82
 - description 83
 - effect on ramp/soak parameters 144
 - location 73, 233
 - values 83
 - INPUT UNITS
 - default value 82
 - description 84
 - location 73, 233
 - inputs
 - analog, see sensor inputs
 - current, see current inputs
 - digital, see digital inputs
 - filter 89
 - pulse, see pulse inputs
 - RTD, see RTD
 - scaling resistors 180–186
 - sensor, see sensor inputs
 - setup parameters 82–89
 - specifications 200–202
 - thermocouple, see thermocouples
 - voltage, see voltage inputs
 - wiring, see installation
 - installation 11–49
 - alarm wiring 37
 - clearance 13–15, 195
 - communications 45–49

- control output wiring 37
- controller 13–16
- CPU watchdog timer 38
- digital output wiring 35–36
- Dual DAC 19–20
- environment 12
- ground loops, see ground loops
- location 12
- noise suppression, see noise
- overview 11
- panel hole dimensions 15
- panel thickness 15
- power supply 18–19, 25–27
- reference voltage terminals 32
- sensor input wiring 29–34
- Serial DAC 19–20
- TB50 16–18, 27
- testing 28–29
- tie-wrapping cables 35
- tools 13
- torque for screw terminals 26
- typical 12
- wire recommendations 21, 30, 35, 47
- wire sizes 22
- wiring 21–27, 29–49
- integral
 - description 155
 - guidelines for setting 160–162
 - setting a value 91
 - settings from other controllers 161
 - term versus reset settings 160
- J**
- JOB RUNNING 60
- JOB RUNNING DATA MODIFIED 60
- JOB RUNNING REMOTELY LOADED 60
- JOB SEL DIG INS ACTIVE
 - default value 74
 - description 77
 - location 73, 233
- JOB SELECT DIG INPUTS
 - default value 74
 - description 76
 - location 73, 233
- jobs
 - loading from memory 75
 - remote selection 76–77
 - saving to memory 75
- jumpers
 - Dual DAC 187
 - EIA/TIA-232 179
 - EIA/TIA-485 179
 - in EIA/TIA-232 connectors 46
 - power supply common 27
 - Serial DAC 188
 - unused inputs 30
 - when using 2-wire RTD 32
- K**
- KEYBOARD LOCK STATUS
 - default value 74
 - description 78
 - location 73, 233
- keypad
 - ALARM ACK, see ALARM ACK key
 - BACK, see BACK key
 - CHNG SP, see CHNG SP key
 - ENTER, see ENTER key
 - keys do not work 167, 170
 - locking 78
 - MAN/AUTO, see MAN/AUTO key
 - NO, see NO key
 - overview 52
 - RAMP/SOAK, see RAMP/SOAK key
 - testing 105
 - unlocking 78
 - YES, see YES key
- KEYPAD TEST
 - description 105
 - how to quit 105
 - location 73, 233
- L**
- LD alarm code 164
- limit controller 9
- limit, output 96
- linear inputs
 - decimal shift in ramp/soak parameters 145
 - display format 87
 - engineering units 84
 - scaling and calibration 186
 - scaling examples 189–192
 - scaling parameters 86–89
- LO DEV ALARM OUTPUT
 - default value 99
 - description 101
 - location 73, 233
- LO DEV ALARM TYPE
 - default value 99
 - description 101
 - location 73, 233
- LO PROC ALARM OUTPUT
 - default value 99
 - description 102
 - location 73, 233
- LO PROC ALARM SETPT
 - default value 99
 - description 102
 - location 73, 233
- LO PROC ALARM TYPE
 - default value 99
 - description 102
 - location 73, 233
- LOAD SETUP FROM JOB
 - CANNOT LOAD JOB 75
 - default value 74
 - description 75
 - job display 60
 - location 73, 233
- locking the keypad 78
- LOOP NAME
 - default value 82
 - description 84
 - location 73, 233
- loops
 - autotuning, see autotuning
 - naming 84

number available 200
 ramp/soak profiles, see ramp/soak 148
 single loop display, see single loop display
 tuning 159–161
 low deviation alarm, see process alarms
 LOW POWER 166, 168
 LP alarm code 164

M

M control status symbol 56
 MAN 56, 61
 MAN/AUTO CONTROL OUTPUTS DISABLED 61
 MAN/AUTO key 54
 does not work 170
 locking and unlocking 78
 switching control statuses 61
 manual control
 selecting 61
 setting the output level 62
 MANUAL I/O TEST 103
 location 73, 233
 parameters in menu 103
 menu tree
 all setup menus 233
 enhanced features 112
 ramp/soak profiles 136
 standard setup menus 73
 menus
 accessing 71
 global parameters 74
 loop alarms 99
 loop control 90
 loop input 82
 loop outputs 93
 manual I/O test 103
 menu tree, see menu tree
 process variable retransmit 113
 ramp/soak profile 137
 model information
 accessing through display 81
 location in firmware 73
 model number description 5
 mounting, see installation

N

NO key
 description 53
 NO-key reset 176
 noise
 eliminating problems with 23
 isolation 23
 reducing with zero-cross switching 158
 suppression 22–23
 symptoms 22

O

on/off control
 control signal 157
 description 154
 selecting 94
 spread 92
 operator displays 51

OUT-OF-TOLRNCE ALARM TIME
 description 138
 location 136, 233
 output override 77, 97
 OUTPUT OVERRIDE DIG INPUT
 default value 74
 description 77
 location 73, 233
 outputs
 5 Vdc output power 204
 alarm, see alarms
 analog, see Dual DAC or Serial DAC
 boost output 67
 control, see control outputs
 CPU watchdog timer, see CPU watchdog timer
 digital, see digital outputs
 filter 91
 process variable retransmit, see process variable
 retransmit
 ramp/soak ready state 139
 reference voltage, see reference voltage
 setup parameters 93–98
 solid state relays 37
 specifications 202–204
 wiring, see installation
 OVERRIDE DIG IN ACTIVE
 default value 74
 description 77
 location 73, 233
 over-temperature shutdown devices 9

P

panel, see installation
 parameters
 accessing 71
 alarm 99–103
 changing values 72
 control 90–92
 global 74–82
 input 82–89
 menu tree, see menu tree
 output 93–98
 process variable retransmit 113
 ramp/soak profile 137–143
 storage of in RAM 7
 test 103
 parts list 5
 personal computer, see communications 174
 PID
 autotuning, see autotuning
 derivative constant, see derivative
 integral term, see integral
 proportional band, see proportional band
 settings for various applications 162
 settings from other controllers 161
 tuning 159–161
 PLC
 transmitting process data to 113
 using to set a setpoint, example 129
 see also communications
 power failure 10
 output status upon restart 78
 ramp/soak profile upon restart 152

- power supply
 - dimensions 205–206
 - dimensions of mounting bracket 19
 - for Dual DAC 43
 - inputs 206
 - mounting 18–19
 - outputs 206
 - powering loads with 36
 - requirements 18
 - specifications 205–206
 - wiring 25–27
- POWER UP OUTPUT STATUS
 - default value 74
 - description 78
 - effect on ramp/soak profiles 152
 - location 73, 233
- process alarms
 - alarm high 67
 - alarm low 67
 - boost output 67
 - function 67
 - high deviation 68
 - low deviation 68
 - outputs 67
 - setting up 66
- PROCESS POWER DIGIN
 - default value 74
 - description 79
 - location 73, 233
- process variable
 - not displayed correctly 22, 167, 171
 - retransmit, see process variable retransmit
- process variable retransmit 113–118
 - application example 115
 - scaling the output 115
 - setting up, example 116
 - setup parameters 113
- profile, see ramp/soak
- proportional band
 - and cascade control 123
 - description 154
 - guidelines for setting 159, 161–162
 - setting a value 91
 - settings for various temperature ranges 159
 - settings from other controllers 161
- protocol 80
- pulse inputs
 - display format 87
 - encoder signals 34
 - engineering units 84
 - loops available on 34
 - sample time 85
 - scaling and calibration 186
 - scaling parameters 86–89
 - specifications 201
 - technical information 34
 - wiring 34
- PV, see process variable
- R**
- RAM 7, 177
- ramp/soak 133–152
 - assigning profiles to loops 148
 - continuing from hold 150
 - cycle number 147
 - decimal shift 145
 - editing a profile while it is running 149
 - events 141
 - firmware option code 81
 - holding a profile 150
 - mode symbols on display 146–147
 - mode, setting 147
 - overview 133–135
 - power failure while running profile 152
 - process variable retransmit, see process variable retransmit
 - profile setup parameters 137–143
 - resetting a profile 151
 - running a profile 148
 - screens for RAMP/SOAK key 145
 - specifications 135
 - time base 137
 - time remaining 147
 - tolerance 143
 - tolerance alarm, see alarms, tolerance
 - triggers 142
- RAMP/SOAK key 54
 - assigning profiles 148
 - cycle number 147
 - does not work 64, 69, 170
 - locking and unlocking 78
 - screens accessed by pressing 145
 - set mode 147
 - time remaining 147
 - unassigning profiles 148
- RAMP/SOAK TIME BASE
 - default value 74
 - description 137
 - location 73, 136, 233
- ratio control 124–132
 - application example 126, 129, 131
 - differential control 131
 - remote analog setpoint 129
 - setting up, example 127, 129, 131
 - setup parameters 125–126
- RATIO CONTROL CTRL RATIO
 - description 126
 - location 112, 233
- RATIO CONTROL MAX SP
 - description 125
 - location 112, 233
- RATIO CONTROL MIN SP
 - description 125
 - location 112, 233
- RATIO CONTROL MSTR LOOP
 - description 125
 - location 112, 233
- RATIO CONTROL SP DIFF
 - description 126
 - location 112, 233
- READY EVENT OUTPUT
 - description 139
 - location 136, 233
- READY SEGMENT EDIT EVENTS
 - description 139
 - location 136, 233
- READY SEGMENT SETPOINT
 - description 138

location 136, 233
 Ref terminals, see reference voltage
 reference voltage 32, 204
 remote analog setpoint, see ratio control
 repair, returning controller for 164
REPEAT CYCLES
 description 144
 location 136, 233
reset
 external 139
 integral, see integral
 NO-key reset 176
RESET PROFILE 148
RESET WITH DEFAULTS 176
RESTORE PID DIGIN
 default value 90
 description 92
 location 73, 233
RestoreAuto parameter 66
 retransmit, see process variable retransmit
 returning the controller 164
 reverse action, see control outputs
REVERSED T/C DETECT
 default value 82
 description 85
 location 73, 233
RFI, see noise
RMA number 164
RO alarm code 166
RS alarm code 166
RS-232, see EIA/TIA-232
RS-485, see EIA/TIA-485
RT alarm code 166
RTD
 accuracy 201
 offset 84
 range 201
 recommended type 32
 resolution 201
 scaling resistors 32, 183
 troubleshooting 171
 wiring 32
RTD open alarm 66
RTD shorted alarm 66

S

safety
 external safety devices 9
 output status on power up 10
 symbols and signal words in this manual 2

SAVE SETUP TO JOB
CANNOT SAVE JOB 75
 default value 74
 description 75
 location 73, 233

scaling parameters
 example settings, flow sensor with 0-5 Vdc
 signal 191
 example settings, pressure sensor with 4-20mA
 signal 190
 example settings, pulse encoder 192
 linear inputs 86-89
 process variable retransmit 114-115
 pulse inputs 86-89

scaling resistors
 CLS204 and CLS208 input circuit 180
 CLS216 input circuit 184
 for current inputs 33, 181, 184
 for RTD inputs 32, 183
 for thermistor inputs 183
 for voltage inputs 32, 182, 185
 installing 180-186

SCSI cable 7, 9
 clearance 13-14, 195
 installing 27

SDAC HI VALUE
 default value 93
 description 95
 location 233

SDAC LO VALUE
 default value 93
 description 95
 location 233

SDAC MODE
 default value 93
 description 95
 location 233

SEG ## EV# DO## ACTIVE STATE
 description 141
 location 136, 233

SEG ## EVENT # OUTPUT
 description 141
 location 136, 233

SEG ## TR# DI## ACTIVE STATE
 description 142
 location 136, 233

SEG ## TR# DI## TRIG
 description 143
 location 136, 233

SEG ## TRIG # INPUT NR
 description 142
 location 136, 233

SEGMENT ## EDIT SEG EVENTS
 description 141
 location 136, 233

SEGMENT ## EDIT SEG TRGGRS
 description 142
 location 136, 233

SEGMENT ## LAST SEGMENT
 description 144
 location 136, 233

SEGMENT ## SEG SETPT
 description 140
 location 136, 233

SEGMENT ## SEG TIME
 description 140
 location 136, 233

SEGMENT ## SEG TOLERANCE
 description 143
 location 136, 233

SENSOR FAIL CL OUTPUT
 and output override feature 77
 and reversed thermocouple detection 85
 and thermocouple short detection 79
 description 97
 location 73, 233
 values 97

Sensor Fail Cool Output parameter
 and failed sensor alarm 65

- Sensor Fail Heat Output parameter
 - and failed sensor alarm 65
 - SENSOR FAIL HT OUTPUT
 - and output override feature 77
 - and reversed thermocouple detection 85
 - and thermocouple short detection 79
 - default value 93
 - description 97
 - location 73, 233
 - values 97
 - sensor inputs
 - engineering units 84
 - failed sensor alarms 166
 - filter 89
 - offset 84
 - ranges 83
 - specifications 200
 - troubleshooting 171
 - type, setting 83
 - wiring 29–34
 - Serial DAC
 - agency compliance 210
 - clock input 210
 - configuring outputs 188
 - configuring the controller output 94
 - dimensions 20, 209
 - environment 209
 - input specifications 210
 - jumper positions 188
 - mounting 19–20
 - output specifications 211
 - process variable retransmit 113, 118
 - specifications 209–211
 - wiring 44–45
 - SET COOL OUTPUT 62
 - SET HEAT OUTPUT 62
 - SET MODE 147–148
 - SETPOINT 61
 - setpoint
 - changing 61
 - ramp/soak ready setpoint 138
 - using cascade control to set 118
 - using PLC to set, example 129
 - using ratio control to set 124
 - SETUP GLOBAL PARAMETERS 74
 - location 73, 233
 - parameters in menu 74
 - SETUP LOOP ALARMS 99
 - location 73, 233
 - parameters in menu 99
 - SETUP LOOP CASCADE 119
 - location 112, 233
 - SETUP LOOP CONTROL PARAMS 90
 - location 73, 233
 - parameters in menu 90
 - SETUP LOOP INPUT 82
 - location 73, 233
 - parameters in menu 82
 - SETUP LOOP OUTPUTS 93
 - location 73, 233
 - parameters in menu 93
 - SETUP LOOP PV RETRANSMIT
 - description 113
 - location 112, 233
 - SETUP LOOP RATIO CONTROL
 - description 125
 - location 112, 233
 - SETUP RAMP/SOAK PROFILE 137
 - location 136, 233
 - shutdown devices 9
 - single loop display 56
 - control status symbols 56
 - navigating 57
 - ramp/soak symbols 146
 - when running ramp/soak profile 146
 - solid state relays
 - 5 Vdc power from controller 204
 - distributed zero crossing 158
 - troubleshooting controller connections 173
 - specifications 193–211
 - communications 204
 - controller 204
 - controller inputs 200–202
 - controller outputs 202–204
 - CPU watchdog timer 203
 - Dual DAC 207–208
 - power supply 205–206
 - Serial DAC 209–211
 - TB50 196
 - SPREAD
 - default value 90
 - description 92, 156
 - location 73
 - spread 92
 - ST alarm code 166
 - STARTUP ALARM DELAY
 - default value 74
 - description 78
 - location 73, 233
- ## T
- T control status symbol 56
 - TB18
 - alarm outputs 37–38
 - connections 40
 - CPU watchdog timer output 38
 - digital output wiring 36
 - testing after installation 28
 - to power encoders 34
 - troubleshooting 173
 - TB50
 - alarm outputs 37–38
 - connecting to controller 27
 - connections for CLS204 41
 - connections for CLS208 41
 - connections for CLS216 42
 - CPU watchdog timer output 38
 - digital output wiring 36
 - dimensions 196–199
 - for powering Serial DAC 44
 - mounting on DIN rail 17
 - mounting with standoffs 18
 - specifications 196
 - technical description 8
 - terminal specifications 197
 - testing after installation 28
 - to power encoders 34
 - troubleshooting 173

TD, see derivative

temperature

- incorrect on display 167, 171
- operating 194, 205, 207, 209
- storage 194, 205, 207, 209

terminal specifications

- controller 196
- TB50 197

TEST DIGITAL OUTPUT

- default value 103
- description 104
- location 73, 233

testing

- TB18 after installation 28
- TB50 after installation 28
- see also troubleshooting

thermistor inputs, scaling resistors for 183

Thermocouple Short Alarm parameter 66

thermocouples

- accuracy 201
- ground loops 31
- manual mode if break occurs 97
- offset 84
- polarity checking 85
- range 201
- resolution 201
- reversed detection 85
- short detection 79
- troubleshooting 171
- types supported 83
- wiring 31–32

thermoforming example 131

three-key sequence 71

TI, see integral

tie wraps 35

TIM REM= 147

time proportioning 94

- cycle time 95
- description 157

TOHO 151

torque, see terminal specifications

triggers, ramp/soak 142

troubleshooting 163–176

- alarms 164, 166
- all loops are set to manual 0% 167
- AMBIENT WARNING 168
- check these things first 163
- communications 174–176
- control outputs 172–173
- control status switches unexpectedly 167
- digital inputs 29, 103, 173
- digital outputs 28, 104, 173
- display does not work 167
- grounding problems 172, 175
- H/W AMBIENT FAILURE 169
- H/W GAIN FAILURE 170
- H/W OFFSET FAILURE 170
- keypad 105, 167, 170
- LOW POWER 168
- process variable incorrect on display 167, 171
- sensor inputs 171
- software 176
- TB18 173
- TB50 173

tolerance alarms 151

unexpected behavior 167

TUNE 56, 61, 64

tuning control loops 159–161

U

UL, see agency compliance

under-temperature shutdown devices 9

unlocking the keypad 78

up-arrow key 53

V

voltage inputs

- ranges 202
- resistance 202
- scaling resistors 32, 182, 185

wiring 32

W

weight

- controller 194
- Dual DAC 207
- power supply 205
- Serial DAC 209
- TB50 196

wire sizes

- controller 196

wiring, see installation

Y

YES key 53

Menu Structure

SETUP GLOBAL PARAMETERS (p. 74)	SETUP LOOP INPUT (p. 82)	SETUP LOOP CONTROL PARAMS (p. 90)	SETUP LOOP OUTPUTS (p. 93)	SETUP LOOP ALARMS (p. 99)	MANUAL I/O TEST (p. 103)
LOAD SETUP FROM JOB	INPUT TYPE	HEAT CONTROL PB	HEAT CONTROL OUTPUT	HI PROC ALARM SETPT	DIGITAL INPUTS
SAVE SETUP TO JOB	LOOP NAME	HEAT CONTROL TI	HEAT OUTPUT TYPE	HI PROC ALARM TYPE	TEST DIGITAL OUTPUT
JOB SELECT DIG INPUTS	INPUT UNITS	HEAT CONTROL TD	HEAT OUTPUT CYCLE TIME	HI PROC ALARM OUTPUT	DIGITAL OUTPUT NUMBER XX
JOB SEL DIG INS ACTIVE	INPUT READING OFFSET	HEAT CONTROL FILTER	SDAC MODE	DEV ALARM VALUE	KEYPAD TEST
OUTPUT OVERRIDE DIG INPUT	REVERSED T/C DETECT	COOL CONTROL PB	SDAC LO VALUE	HI DEV ALARM TYPE	TEST DISPLAY
OVERRIDE DIG IN ACTIVE	INPUT PULSE SAMPLE TIME	COOL CONTROL TI	SDAC HI VALUE	HI DEV ALARM OUTPUT	
STARTUP ALARM DELAY	DISP FORMAT	COOL CONTROL TD	HEAT OUTPUT ACTION	LO DEV ALARM TYPE	
RAMP/SOAK TIME BASE	INPUT SCALING HI PV	COOL CONTROL FILTER	HEAT OUTPUT LIMIT	LO DEV ALARM OUTPUT	
KEYBOARD LOCK STATUS	INPUT SCALING HI RDG	SPREAD	HEAT OUTPUT LIMIT TIME	LO PROC ALARM SETPT	
POWER UP OUTPUT STATUS	INPUT SCALING LO PV	RESTORE PID DIGIN	SENSOR FAIL HT OUTPUT	LO PROC ALARM TYPE	
PROCESS POWER DIGIN	INPUT SCALING LO RDG		HEAT T/C BRK OUT AVG	LO PROC ALARM OUTPUT	
CONTROLLER ADDRESS	INPUT FILTER		HEAT OUTPUT	ALARM DEADBAND	
COMMUNICATIONS BAUD RATE			COOL CONTROL OUTPUT	ALARM DELAY	
COMMUNICATIONS PROTOCOL			COOL OUTPUT TYPE		
COMMUNICATIONS ERR CHECK			COOL OUTPUT CYCLE TIME		
AC LINE FREQ			SDAC PARAMETERS		
DIG OUT POLARITY ON ALARM			COOL OUTPUT ACTION		
CLS200 [FIRMWARE INFO.]			COOL OUTPUT LIMIT		
			COOL OUTPUT LIMIT TIME		
			SENSOR FAIL CL OUTPUT		
			COOL T/C BRK OUT AVG		
			COOL OUTPUT		

Additional Enhanced Features Option Menus

SETUP LOOP PV RETRANSMIT	SETUP LOOP CASCADE (p. 119)	SETUP LOOP RATIO CONTROL (p. 125)
HEAT OUTPUT RETRANS PV	CASCADE PRIM. LOOP	RATIO CONTROL MSTR LOOP
HEAT RETRANS MIN INP	CASCADE BASE SP	RATIO CONTROL MIN SP
HEAT RETRANS MIN OUT%	CASCADE MIN SP	RATIO CONTROL MAX SP
HEAT RETRANS MAX INP	CASCADE MAX SP	RATIO CONTROL CTRL RATIO
HEAT RETRANS MAX OUT%	CASCADE HT SPAN	RATIO CONTROL SP DIFF
COOL OUTPUT RETRANS PV	CASCADE CL SPAN	
COOL RETRANS MIN INP		
COOL RETRANS MIN OUT%		
COOL RETRANS MAX INP		
COOL RETRANS MAX OUT%		

Additional Ramp/Soak Option Menus

SETUP LOOP PV RETRANSMIT	SETUP RAMP/SOAK PROFILE (p. 137)
HEAT OUTPUT RETRANS PV	EDIT RAMP & SOAK PROFILE
HEAT RETRANS MIN INP	COPY SETUP FROM PROFILE
HEAT RETRANS MIN OUT%	OUT-OF-TOLRNCE ALARM TIME
HEAT RETRANS MAX INP	READY SEGMENT SETPOINT
HEAT RETRANS MAX OUT%	READY SEGMENT EDIT EVENTS
COOL OUTPUT RETRANS PV	READY EVENT OUTPUT
COOL RETRANS MIN INP	EXTERNAL RESET INPUT NUMBER
COOL RETRANS MIN OUT%	EDIT SEGMENT NUMBER
COOL RETRANS MAX INP	SEGMENT ## SEG TIME
COOL RETRANS MAX OUT%	SEGMENT ## SEG SETPT
	SEGMENT ## EDIT SEG EVENTS
	SEG ## EVENT # OUTPUT
	SEG ## EV# DO## ACTIVE STATE
	SEGMENT ## EDIT SEG TRGGRS
	SEG ## TRIG # INPUT NR
	SEG ## TR# DI## ACTIVE STATE
	SEG ## TR# DI## TRIG
	SEGMENT ## SEG TOLERANCE
	SEGMENT ## LAST SEGMENT
	REPEAT CYCLES

Declaration of Conformity

Declaration of Conformity

CLS200 Series



WATLOW ANAFAZE

314 Westridge Drive
Watsonville, California 95076 USA

Declares that the following product: **English**
Designation: CLS200 Series
Model Number(s): 2 (04, 08 or 16) - (1,2,3 or 4) (0,1 or 2) (0 or 2)
(0,1,2 or 3) (0,1,2 or 3) (0,1, or 2)
(1 or 2 letters or numbers)
Classification: Installation Category II, Pollution Degree II
Rated Voltage: 15 to 24 VDC
Rated Current: 610mA maximum
Meets the essential requirements of the following European Union Directive(s) using the relevant section(s) of the normalized standards and related documents shown:

89/336/EEC Electromagnetic Compatibility Directive		
EN 61326:	1997	Electrical equipment for measurement, control and laboratory use - EMC requirements (Class A)
EN 61000-3-2:	1995	Limits for harmonic current
EN 61000-3-3:	1995	Limitations of voltage fluctuations and flicker
EN 61000-4-2:	1995	Electrostatic discharge
EN 61000-4-3:	1997	Radiated immunity
EN 61000-4-4:	1995	Electrical fast transients
EN 61000-4-5:	1995	Surge immunity
EN 61000-4-6:	1994	Conducted immunity
EN 61000-4-11:	1994	Voltage dips, short interruptions and voltage variations immunity
ENV 50204:	1995	Cellular phone

Déclare que le produit suivant : **Français**
Désignation : Série CLS200
Numéro(s) de modèle(s): 2 - (04, 08 ou 16) - (1, 2, 3 ou 4) (0,1 ou 2)
(0, 1 ou 2) (0, 1, 2 ou 3) (0, 1, 2 ou 3) (0, 1 ou 2)
(1 ou 2 lettres ou chiffres)
Classification : Installation catégorie II, degré de pollution II
Tension nominale : 15 à 24V c.c.
Courant nominal : 610 mA maximum
Conforme aux exigences de la (ou des) directive(s) suivante(s) de l'Union Européenne figurant aux sections correspondantes des normes et documents associés ci-dessous :

89/336/EEC Directive de compatibilité électromagnétique		
EN 61326:	1995	Appareillage électrique pour la mesure, la commande et l'usage de laboratoire — Prescriptions relatives à la Compatibilité Electro Magnétique (Classe A)
EN 61000-3-2 :	1995	Limites d'émission de courant harmonique
EN 61000-3-3 :	1995	Limites de fluctuation de tension
EN 61000-4-2 :	1995	Décharge électrostatique
EN 61000-4-3 :	1997	Insensibilité à l'énergie rayonnée
EN 61000-4-4 :	1995	Courants électriques transitoires rapides
EN 61000-4-5 :	1995	Insensibilité aux surtensions
EN 61000-4-6 :	1996	Insensibilité à l'énergie par conduction
EN 61000-4-11 :	1994	Insensibilité aux chutes subites, aux courtes interruptions et aux variations de tension
ENV 50204 :	1995	Téléphone cellulaire

30590-00 REV E

Erklärt, daß das folgende Produkt: **Deutsch**
Beschreibung: Serie CLS200
Modellnummer(n): 2 (04, 08 oder 16) - (1, 2, 3 oder 4) (0,1 oder 2)
(0,1 oder 2) (0,1,2 oder 3) (0,1,2 oder 3) (0,1 oder 2)
(1 oder 2 Buchstabe oder Ziffern)
Klassifikation: Installationskategorie II, Emissionsgrad II
Nennspannung: 15 bis 24 Vdc
Nominaler Stromverbrauch: max. 610 mA
Erfüllt die wichtigsten Normen der folgenden Anweisung(en) der Europäischen Union unter Verwendung des wichtigsten Abschnitts bzw. der wichtigsten Abschnitte der normalisierten Spezifikationen und der untenstehenden einschlägigen Dokumente:


89/336/EEC Elektromagnetische Übereinstimmungsanweisung		
EN 61326:	1997	Elektrogeräte zur Messung, Regelung und zum Laboreinsatz EMC - Richtlinien (Klasse A)
EN 61000-3-2:	1995	Grenzen der Oberwellenstromemissionen
EN 61000-3-3:	1995	Grenzen der Spannungsschwankungen
EN 61000-4-2:	1995	Elektrostatische Entladung
EN 61000-4-3:	1997	Strahlungsmunität
EN 61000-4-4:	1995	Elektrische schnelle Stöße
EN 61000-4-5:	1995	Spannungsstoßimmunität
EN 61000-4-6:	1994	Störimmunität
EN 61000-4-11:	1994	Immunität gegen Spannungsgefälle, kurze Unterbrechungen und Spannungsabweichungen
ENV 50204:	1995	Mobiltelefon

Declara que el producto siguiente: **Español**
Designación: Serie CLS200
Números de modelo: 2 - (04, 08 ó 16) - (1, 2, 3 ó 4) (0,1 ó 2)
(0,1 ó 2) (0,1,2 ó 3) (0,1,2 ó 3) (0,1 ó 2)
(1 ó 2 letras ó numeros)
Clasificación: Categoría de instalación II, grado de contaminación ambiental II
Tensión nominal: 15 a 24Vcc
Consumo nominal de energía: 610 mA máximo
Cumple con los requisitos esenciales de las siguientes Directivas de la Unión Europea, usando las secciones pertinentes de las reglas normalizadas y los documentos relacionados que se muestran:

89/336/EEC - Directiva de Compatibilidad Electromagnética		
EN 61326:	1997	Equipo eléctrico para medición control y uso en laboratorios - Requisitos de compatibilidad electromagnética (Clase A)
EN 61000-3-2	1995	Límites para emisiones de corriente armónica
EN 61000-3-3	1995	Limitaciones de fluctuaciones del voltaje
EN 61000-4-2:	1995	Descarga electrostática
EN 61000-4-3:	1997	Inmunidad radiada
EN 61000-4-4:	1995	Perturbaciones transitorias eléctricas rápidas
EN 61000-4-5:	1995	Sobretensión
EN 61000-4-6:	1994	Inmunidad conducida
EN 61000-4-11:	1994	Caídas de tensión, interrupciones breves y variaciones de tensión
ENV 50204:	1995	Teléfono portátil

Sean Wilkinson Watsonville, California, USA
Name of Authorized Representative Place of Issue

Manager Feb 28, 2003
Title of Authorized Representative Date of Issue


Signature of Authorized Representative

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisanng.com](https://www.artisanng.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisanng.com | [artisanng.com](https://www.artisanng.com)

